




## Cargo Management User's Information


# ACCORD

## Installation

- Attach the cargo nets onto the cargo divider hooks.

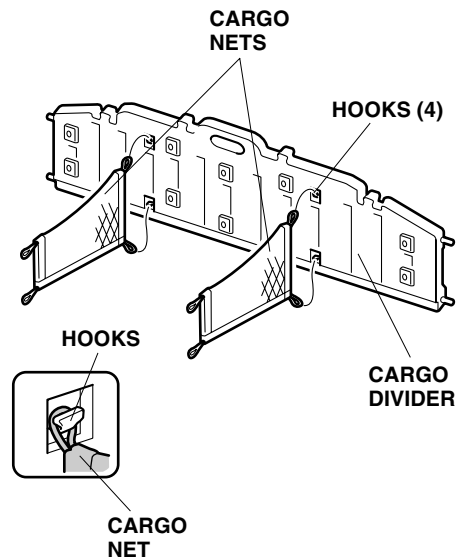


- Slide the four pins of the cargo divider into the upright support. Attach the cargo nets to the anchor on the rear trim.

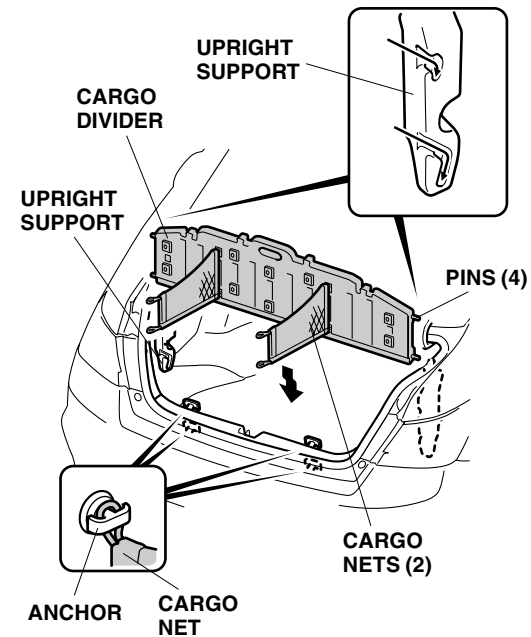

## Installation


### ■ When Not In Use

- Remove the cargo nets. Release the two upper pins from the upright supports and fold the cargo divider down.

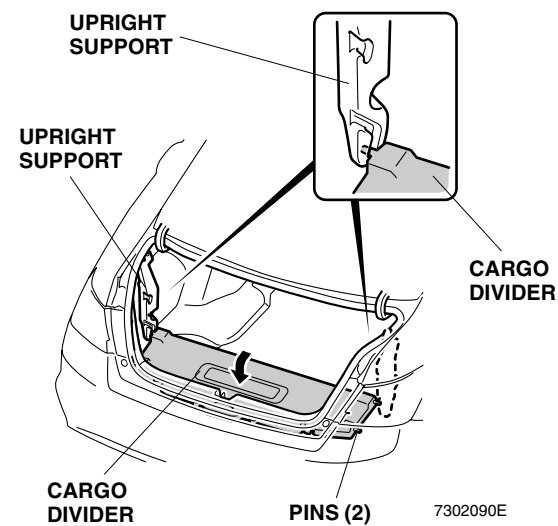

### ■ When Equipped With Another Attachment Kit

- When installing the trunk tray, insert the trunk tray between the trunk side lining and upright supports as shown.

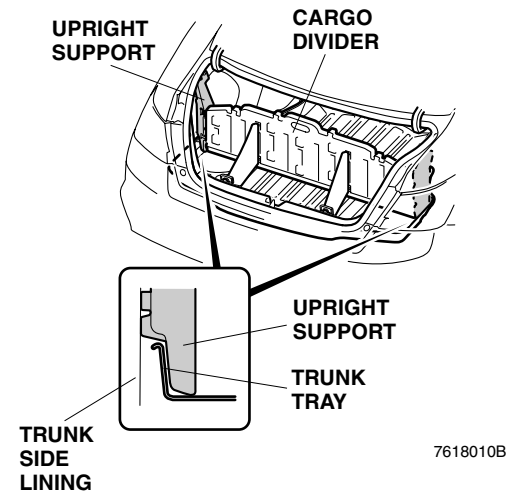

NOTE: When accessing the spare tire, remove the cargo divider and cargo nets before removing the trunk floor mat.

