



Parrot 3400 LS GPS with Imate PDA2K and Copilot Live 6



Imate PDA2K



Copilot Live 6



Features

- GPS and Handsfree connections at the same time.
- Voice navigation instructions through PDA headspeakers.
- Manual switch between GPS and phone applications.
- Voice navigation instructions are not played during a call.
- Automatic GPS connection.



SetUp Procedures

- HandsFree Setup Procedure.
- GPS Setup Procedure.
- Copilot Live 6 Setup Procedure.

Step 1 - HandsFree Procedure



Parrot 3400 LS GPS'
start screen



Go to the SETTINGS menu



Step 1 - HandsFree Procedure



In the car kit, review the PAIRED DEVICES \ select OTHER PHONES menu. The car kit will display a PIN code.



Step 1 - HandsFree Procedure



PDA's today screen



Click on the Bluetooth icon and select Bluetooth Manager option



Tap on 'NEW' menu

Step 1 - HandsFree Procedure



Select the Hands-free / Headset setup option




Tap on NEXT



Step 1 - HandsFree Procedure



Select Parrot 3400LS

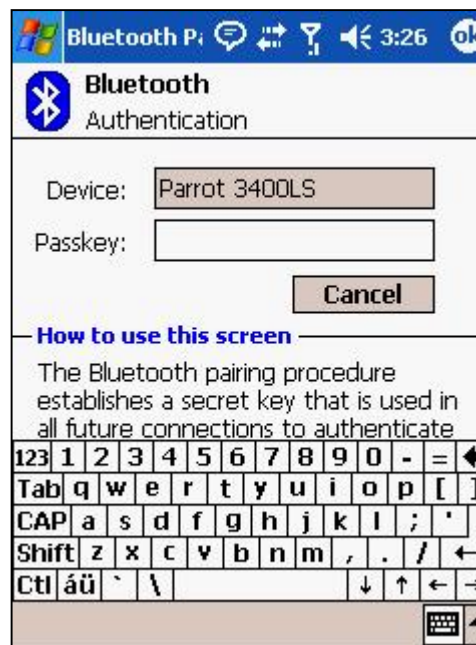

Enter the PIN CODE provided by the car kit



HandsFree connection is established (check the two green arrows)



Step 1 - HandsFree Procedure



Tap on 'NEW' menu



Select the EXPLORE A
BLUETOOTH DEVICE
setup option



Select Parrot 3400LS



Step 1 - HandsFree Procedure



Select the GPS service



Tap on FINISH



A GPS shortcut appears

Step 1 - HandsFree Procedure



HandsFree connection is
established

Step 2 - GPS Procedure



On the car kit navigate to the GPS menu



Consult the ACTIVATE / DEACTIVATE menu of the Parrot 3400 LS GPS



Make sure the GPS feature is activated

Step 2 - GPS Procedure




Press on the car kit's red button.
Your car kit and your mobile phone
will be disconnected

Step 3 – Copilot Live 6 Setup Procedure



Please start
the Copilot Live 6 software

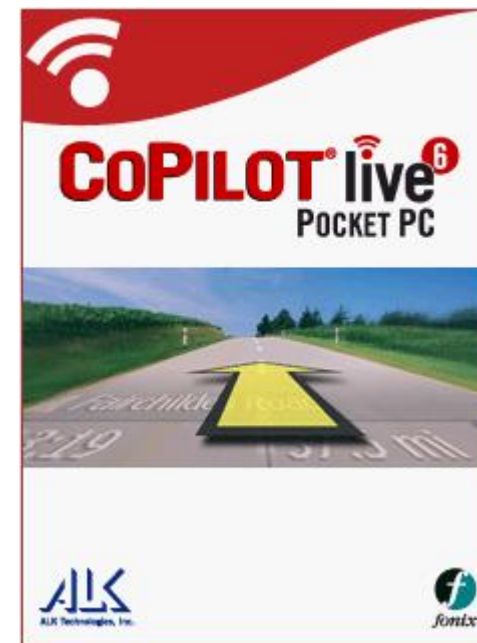

Copilot Live 6's start screen




Step 3 – Copilot Live 6 Setup Procedure



Tap on the GPS icon



To define your GPS receiver, tap on the SETUP GPS icon

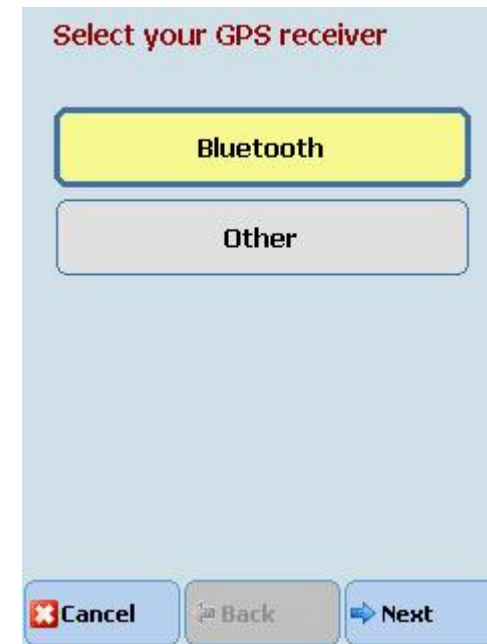

Choose the BLUETOOTH option and validate




Step 3 – Copilot Live 6 Setup Procedure



Copilot Live 6 is searching for Bluetooth devices



Select Parrot 3400 LS

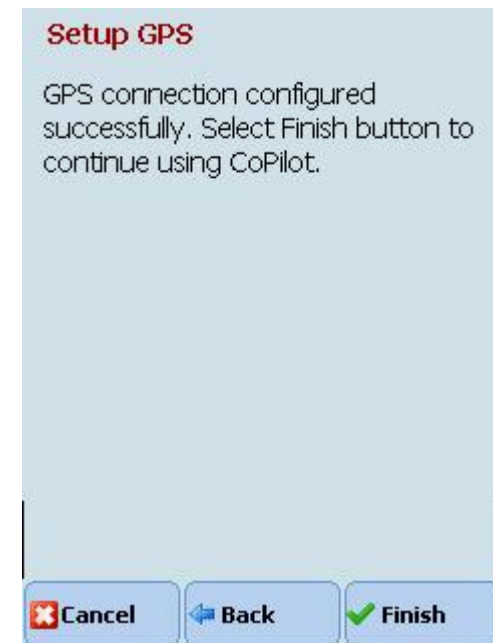


Your Parrot 3400 LS GPS is defined as a GPS receiver

Step 3 – Copilot Live 6 Setup Procedure



Tap on the Satellites icon

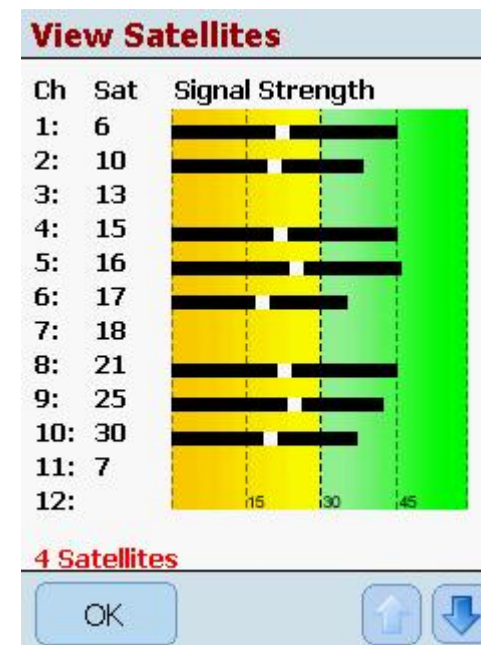

Copilot Live 6 is receiving GPS signal

Step 3 – Copilot Live 6 Setup Procedure



On the HOME screen,
tap on the GOING TO icon



Tap on the NEW TRIP icon



Tap on the ADDRESS icon
to define your destination



Step 3 – Copilot Live 6 Setup Procedure

Enter Country:

Fr

F -- France

Cancel Back Next

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	←	←	123	ÉÜ

Choose the country of your destination

Enter City or Postcode:

Paris

F - France

Paris, Paris

Paris-l'Hopital, Saône-Et-Loire

Paris-l'Hôpital, Saône-Et-Loire

Parisot, Tarn

Cancel Back Next

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	←	←	123	ÉÜ

Define the City

Enter Street Address:

1 Rue de la Paix

Paris, F 75001

<City Center>

Rue de la Paix

Cancel Back Next


A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	←	←	123	ÉÜ

Define your destination address

Step 3 – Copilot Live 6 Setup Procedure





Define a name for your destination

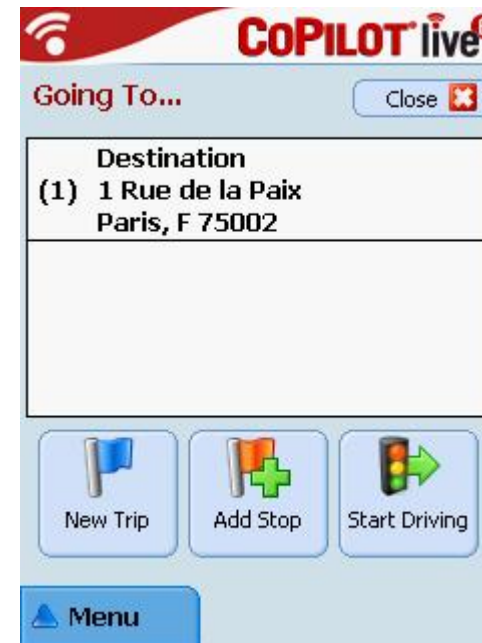

Tap on the START DRIVING icon

Step 3 – Copilot Live 6 Setup Procedure

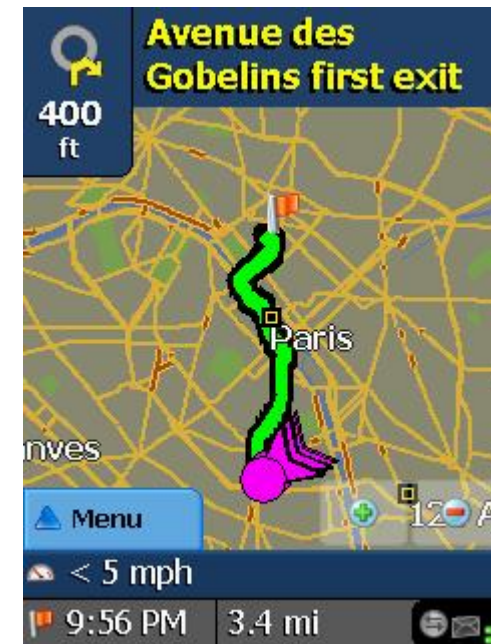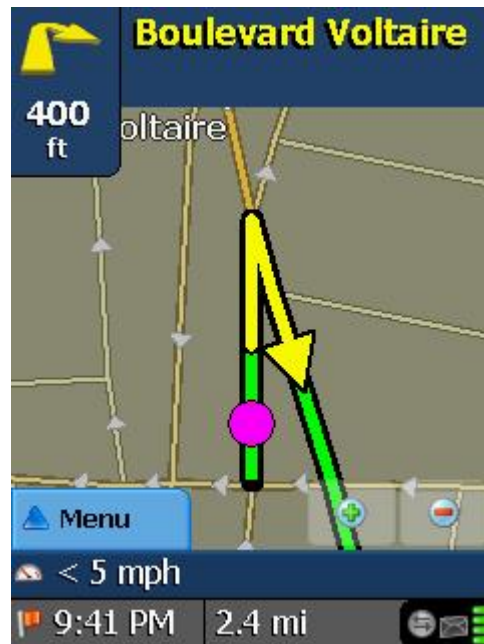

Navigation with Copilot Live 6