



INSTALLATION GUIDE: XUF-1330L

Victory LCD Wall Mounting System

The Victory LCD Mounting System is designed for secure installation of LCD displays of up to 40 lbs. in weight.

Warning Statements

WARNING:	THE WALL STRUCTURE MUST BE CAPABLE OF SUPPORTING AT LEAST A MAXIMUM WEIGHT OF 40 LBS. IF NOT, THE WALL MUST BE REINFORCED. PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN, AS OUTLINED IN THE INSTALLATION INSTRUCTIONS, MUST BE ADHERED TO. FAILURE TO DO SO COULD RESULT IN SERIOUS PERSONAL INJURY OR EVEN DEATH.
WARNING:	SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE INSTALLATION OF THIS PRODUCT. USE PROPER SAFETY GEAR AND TOOLS FOR THE INSTALLATION PROCEDURE TO PREVENT PERSONAL INJURY.
WARNING:	PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE INSTALLATION INSTRUCTIONS SHOULD BE READ AND COMPLETELY UNDERSTOOD. THE INSTALLATION INSTRUCTIONS MUST BE READ TO PREVENT PERSONAL INJURY AND PROPERTY DAMAGE. KEEP THESE INSTALLATION INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION FOR FUTURE REFERENCE.
	A secure structure must support the weight or load of the display. When mounting to a wall that contains wooden studs, dead center of the wooden stud must be confirmed prior to installation.
	Do not install on a structure that is prone to vibration, movement or chance of impact. Failure to do so could result in damage to the display and/or damage to the mounting surface.
	Do not install near heater, fireplace, direct sunlight, air conditioning or any other source of direct heat energy. Failure to do so may result in damage to the display and could increase the risk of fire.
	At least two qualified people should perform the installation procedure. Injury and/or damage can result from dropping or mishandling the display.
	Recommended mounting surfaces: wooden studs and solid-flat concrete. If the mount is to be installed on any surface other than wooden studs, use suitable hardware (which is commercially available).
	Contact Victory Mounts with any technical / installation questions.

Included Hardware

	¾" Spacer (Qty 4)		M4 x 12mm Phillips Head Screw (Qty 4)
	2" Wood Screw (Qty 2)		M4 x 30mm Phillips Head Screw (Qty 4)
	Bubble Level (Qty 1)		

Tool List

Phillips/ Slot Head Screw Driver
 Electronic Stud Finder
 Allen Wrench (Supplied)
 Portable Drill
 ¼" Masonry Bit for Concrete Installation

NOTE: The included level may be permanently attached to the wall plate by inserting the level into the receptacle on the back of the wall plate.

Wood Stud Installation

NOTE: Using a wood stud finder, locate the stud centers behind the wall. Once found, make a pencil marking on the center of the wood studs. Once the mark is made, it is strongly recommended that a pilot hole be drilled with a 1/8" drill bit.

1. Place the back plate against the wall with the hook towards the bottom.
2. Secure the back plate using one (1) 2" wood screw.
3. Using the integrated bubble guide, carefully adjust the back plate until it is level.
4. Attach the remaining 2" wood screw into the back plate and tighten.



Concrete Installation

NOTE: ¼" x 2 ¼" Threshold anchors must be used for concrete installation. They can be purchased at your local hardware store.

1. Place the back plate against the wall with the hook towards the bottom.
2. Level and mark with a pencil the two mounting points found on the back plate.
3. Next, drill two holes using an electric drill and ¼" masonry bit.
4. Insert the threshold anchors into the holes that were drilled in the wall.

- NOTE:** If necessary, use a hammer to lightly tap each anchor into place so that they are flush with the wall. Once mounted in the wall, unscrew the slotted cap off of the threshold screw.
5. Once the anchors are in place, set the back plate back over the concrete anchors.
 6. Using a Slot Head screw driver, attach the back plate by threading the two slotted caps onto the threaded insert that is recessed into the wall.
 7. Make sure all screws are snug, but be careful not to over-tighten them.



Slotted Cap

Threaded Insert

Threshold Anchor



LCD Installation

1. Determine the mounting hardware that is to be used.
2. If your LCD has a flat back, use the M4x12mm Phillips Head Screws.
NOTE: If your LCD has a recessed back, use the longer M4x30mm Phillips Head Screws and 3/4" Spacers.
3. After you have determined the appropriate screws, use them to attach the mounting plate to the back of your LCD.
4. Do not over-tighten the screws.



Final Installation

1. To complete the installation, simply slide the mounting plate onto the back plate.
2. The plastic tab on the top of the back plate should click, indicating that the mounting plate piece is secure.
3. If you need to remove the mounting plate, push in on the tab and slide the mounting plate up.

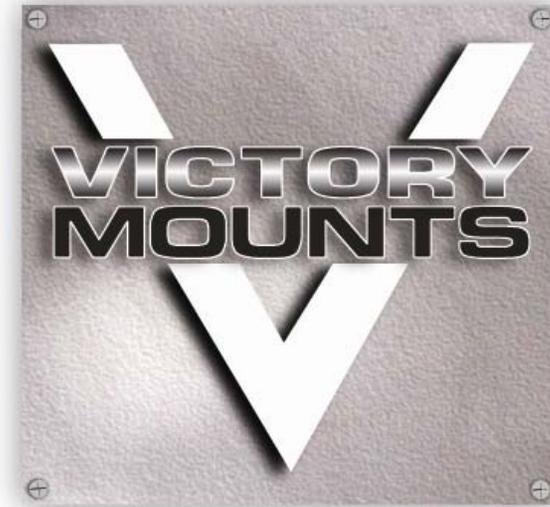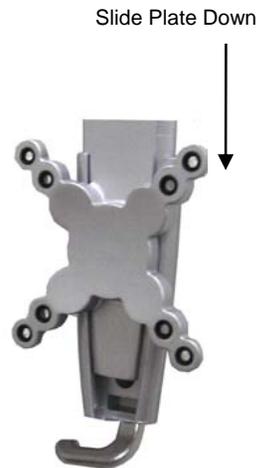

FLAT LCD TV WALL MOUNT

INSTALLATION GUIDE: XUF-1330L

Produced By:
Progressive Marketing Products, Inc.
3130 E. Miraloma Ave.
Anaheim, CA 92806
800-368-9700
victory@mounts.com