
Installation Instructions

LAKELAND™ UNDERCABINET STORAGE RACK 8193.140

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

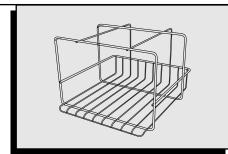

BEFORE YOU BEGIN:

- Carefully unpack your accessory, check the contents, and inspect carefully for damage.
- Mounting Kit Consists Of:
 - 4 Clips
 - 2 Long and 2 Short Metric Machine Screws
 - 10 Flat and 4 Anti-shake (star) washers. Fig 4.

RECOMMENDED TOOLS & MATERIALS:

- Phillips Screwdriver
- Pliers
- Regular Screwdriver (Small)
- Tape Measure
- Masking Tape or Yellow Crayon
- Flash Light

Note: The top of the rack is manufactured with a slope. When it is correctly installed under the sink the bottom of the rack will be parallel with the rim of the sink.


IMPORTANT: DIMENSION OF FIXTURES ARE NOMINAL AND MAY VARY WITHIN PERMITTED MANUFACTURING TOLERANCES.


- 1
- Locate the fixing screw holes on the underside of the sink.
- Make sure the threads are clear and mark around them. Fig 1.

Fig.1




- 2
- Put two clips on each of the top thick wires.
- Gently squeeze them closed.
- The exact location of the clips may vary depending on whether you want to position your storage rack to the left or right. Fig 2 & 3.

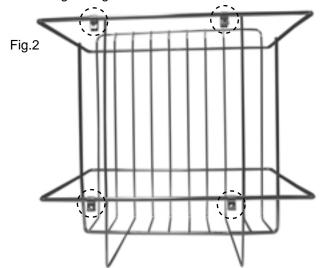

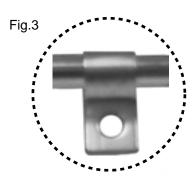

• Place one anti-shake and then one flat washer on two long and two short screws. (Extra included in pack.)

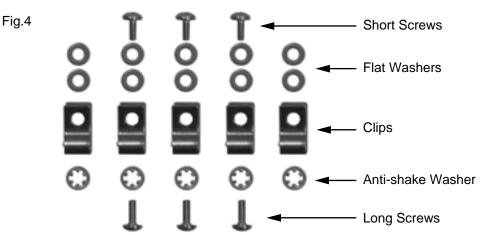


Position the rack under the sink and secure in place with the screws. Fig.5

Note: The long screws go to the right hand side (outer edge) and the short screws go to the left hand side (center) when looking from the front. Fig.6

Fig.5



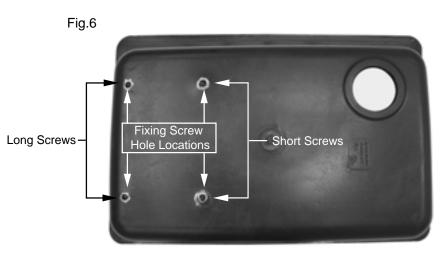

- Gently tighten the screws.DO NOT OVER TIGHTEN THE SCREWS AS THIS MAY BREAK THE WELD NUT
 - If a clip is not tight on the wire, remove the screw and add more flat washers until the clip grips the wire. Fig.7.

Fig.7

