



















**ASSEMBLY INSTRUCTIONS
INSTRUCCIONES PARA ENSAMBLAR
DIRECTIVES D'ASSEMBLAGE**

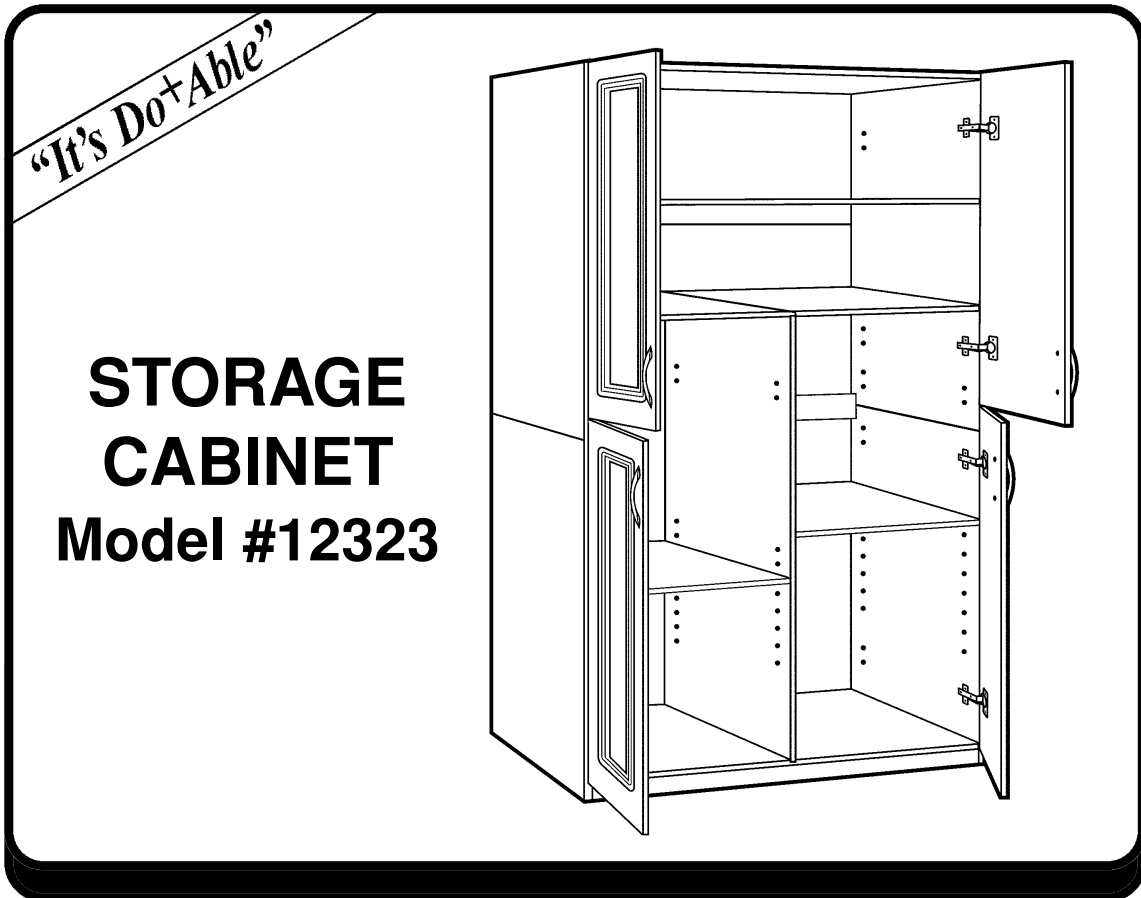
















**STORAGE
CABINET
Model #12323**

**5150 EDISON AVENUE • CHINO, CALIFORNIA 91710-5717
CUSTOMER SERVICE: (800) 829-3648
7 am to 5 pm M-F Pacific Time**






PARTS LIST / LISTA DE PIEZAS / LISTE DE PIECES

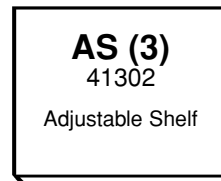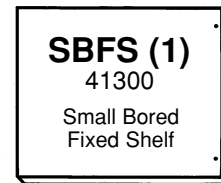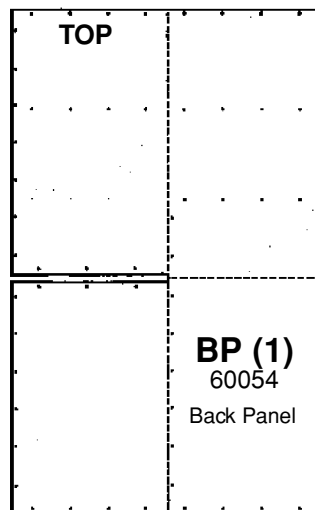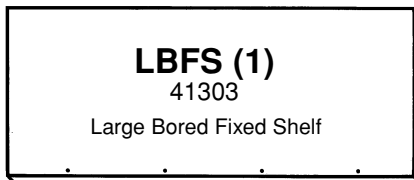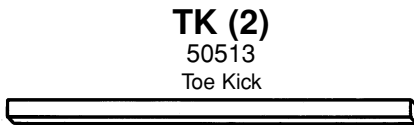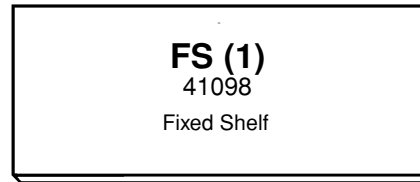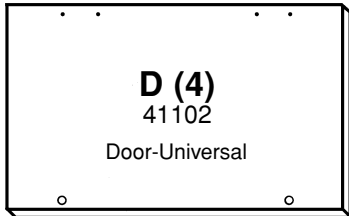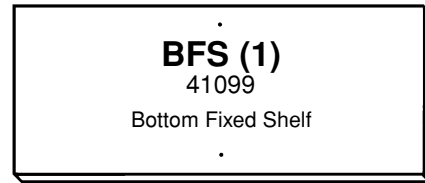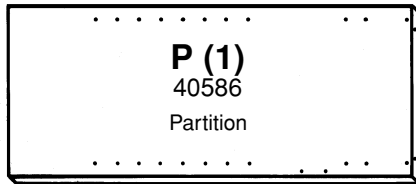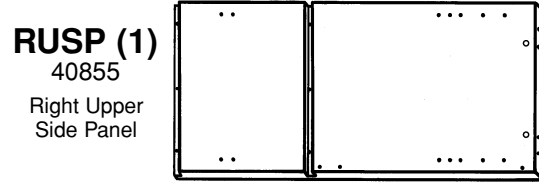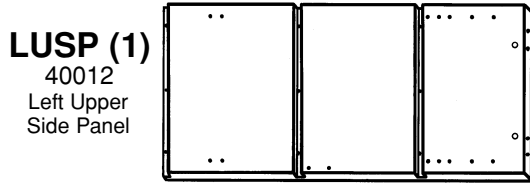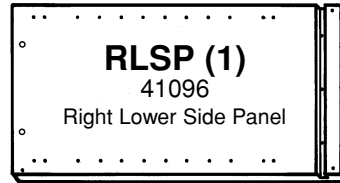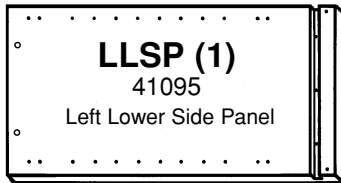


PARTS LIST / LISTA DE PIEZAS / LISTE DE PIECES

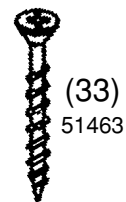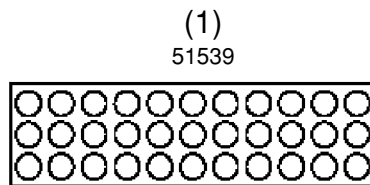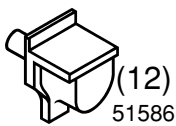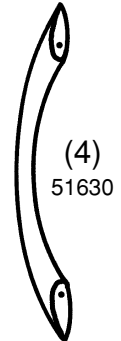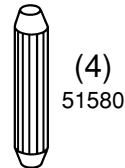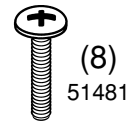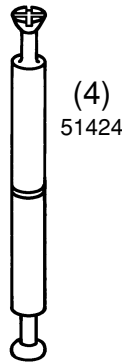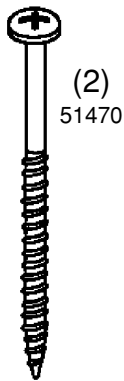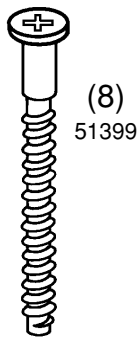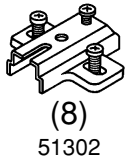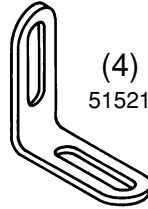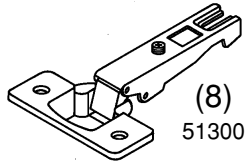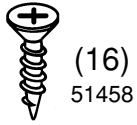



TOOLS / HERRAMIENTAS / OUTILS

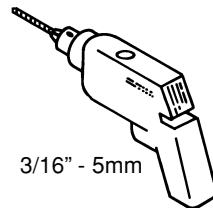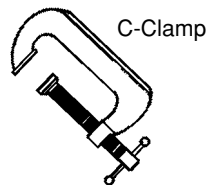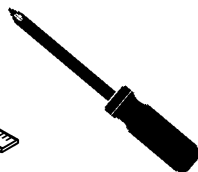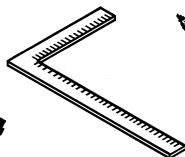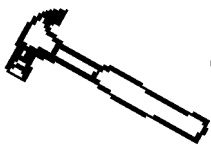


1

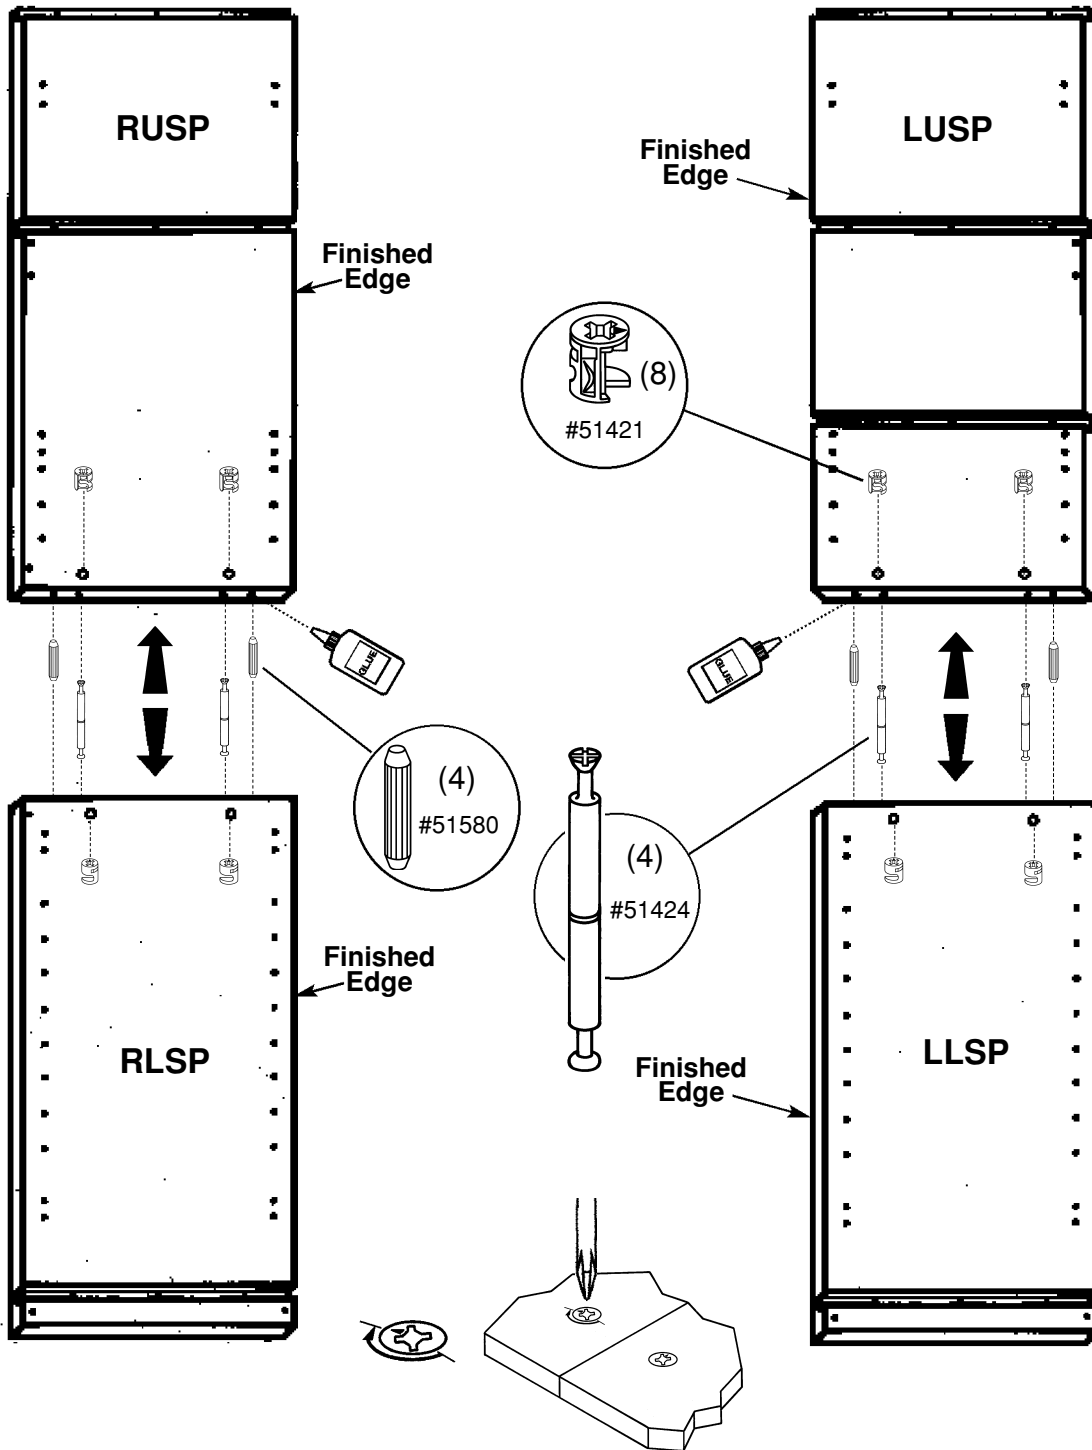


2

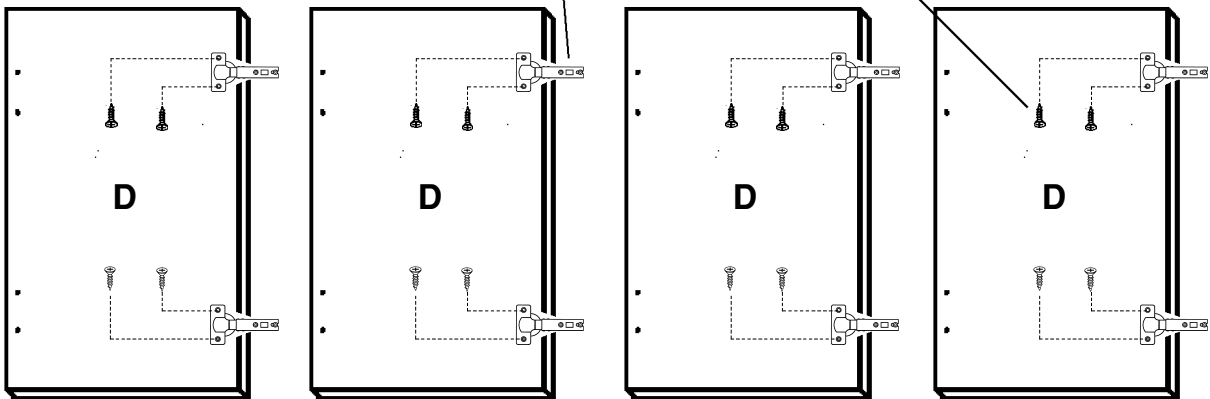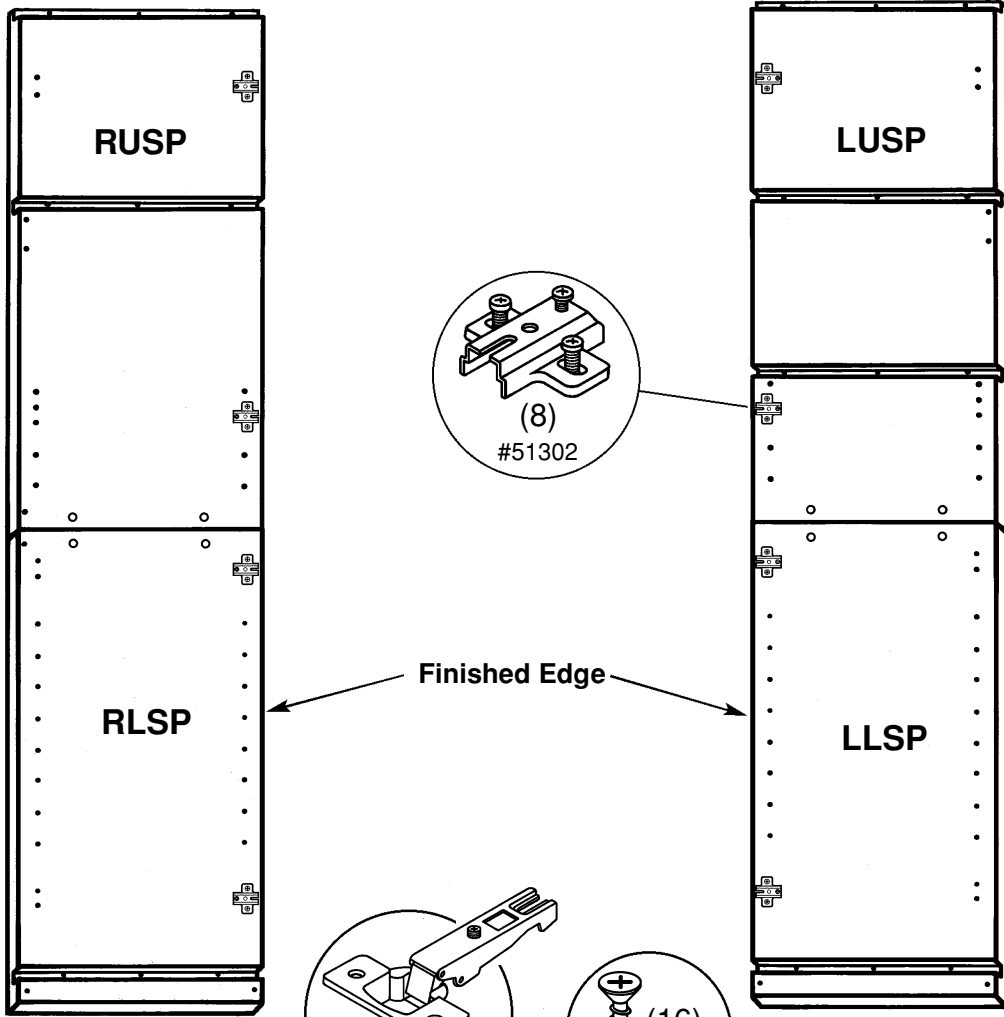


3

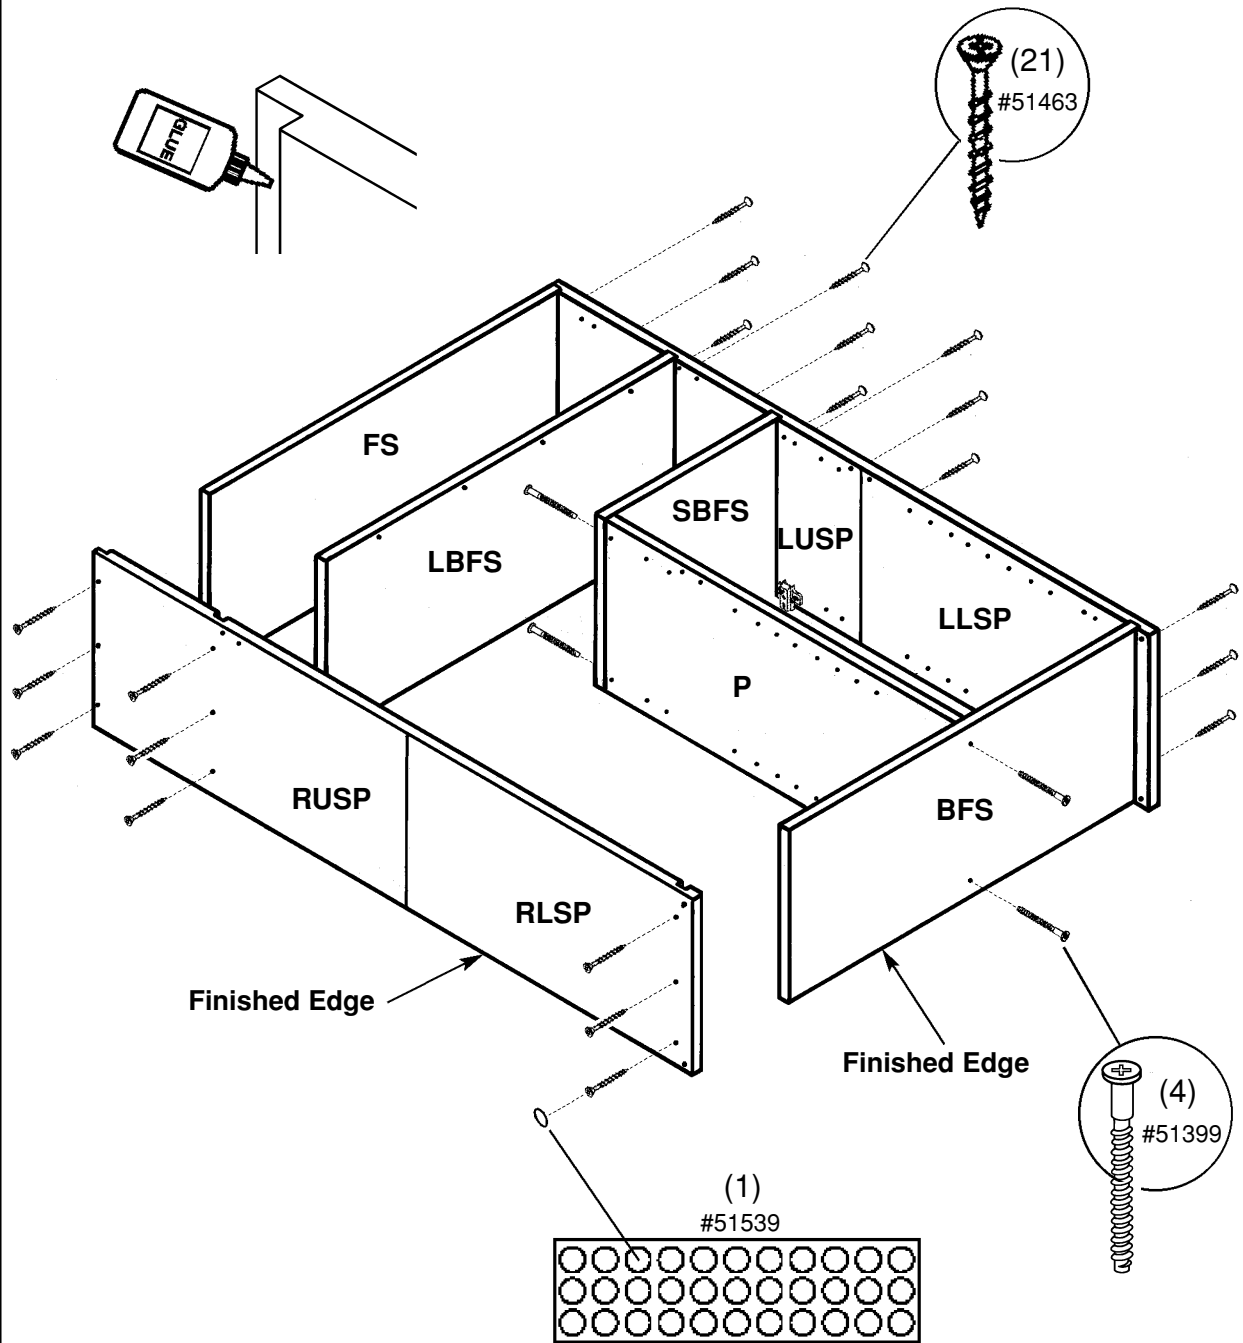


4

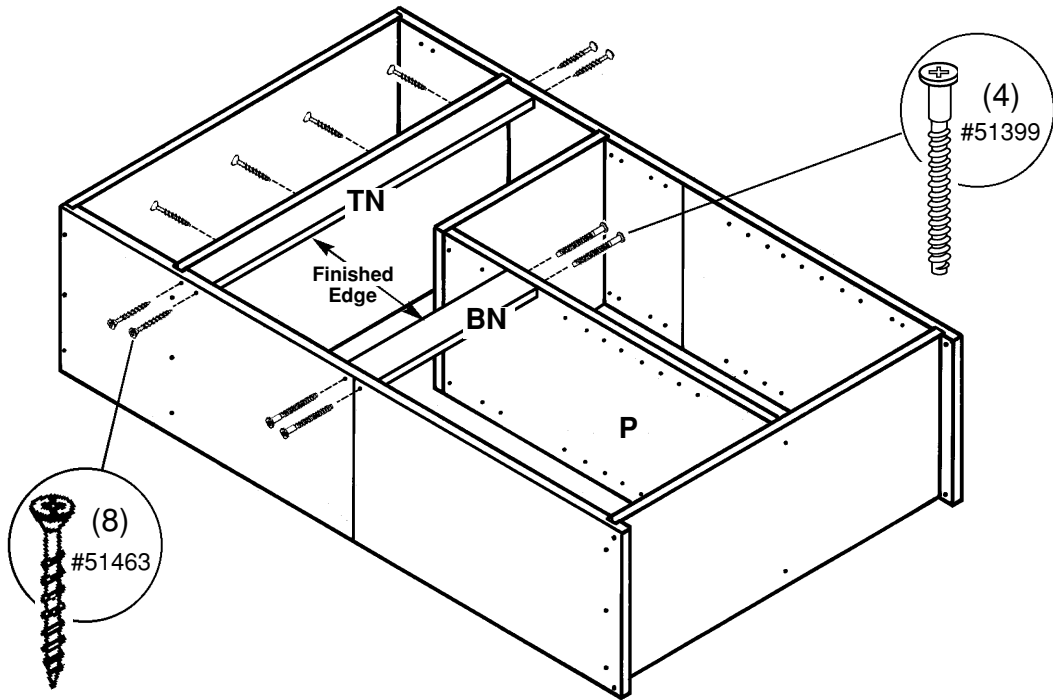

5

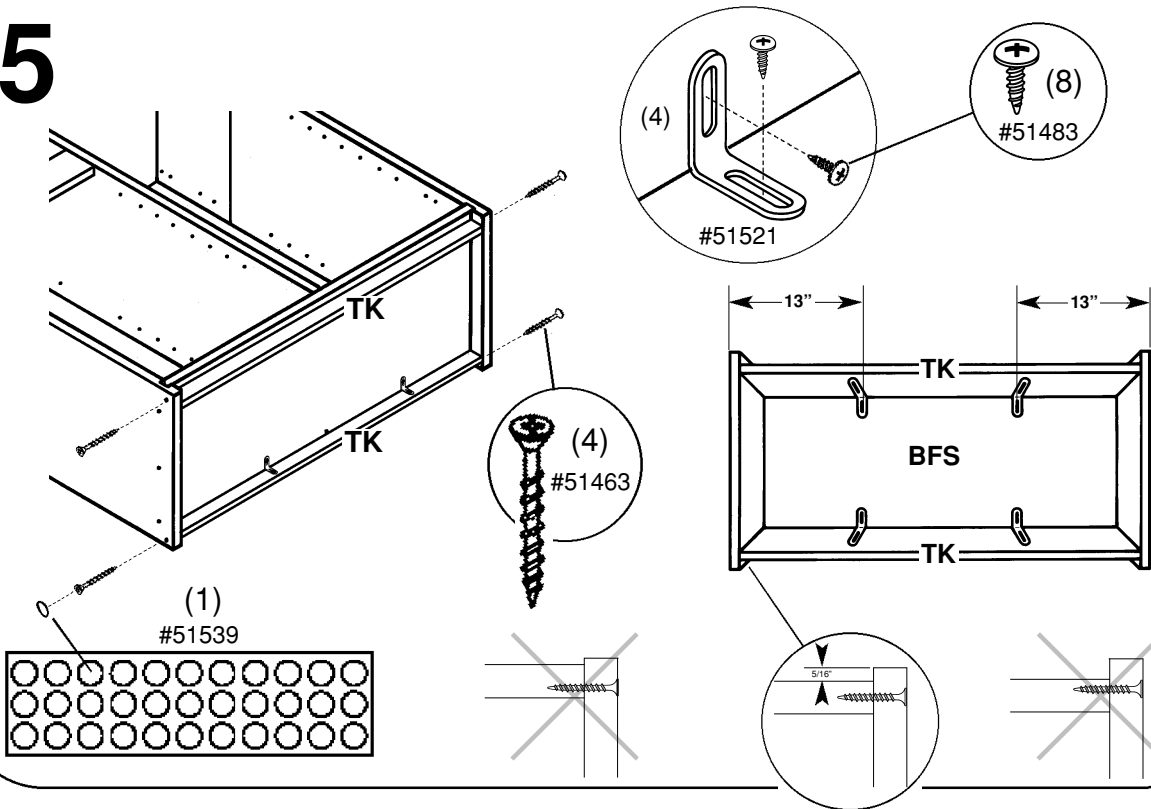


6





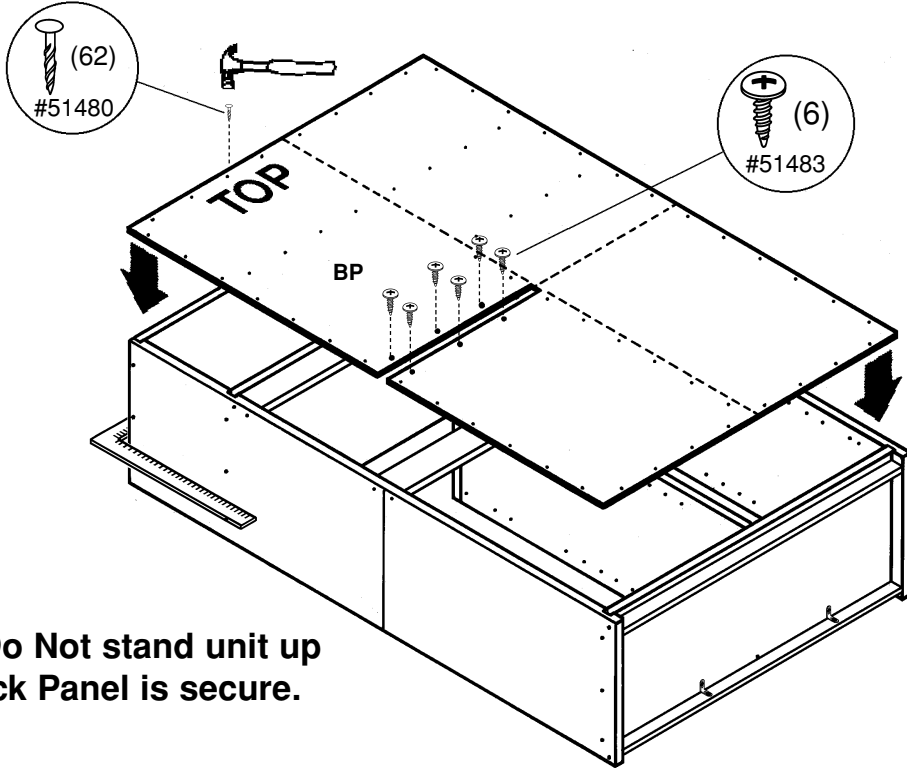


NOTE: Do Not stand unit up until Back Panel is secure.




7

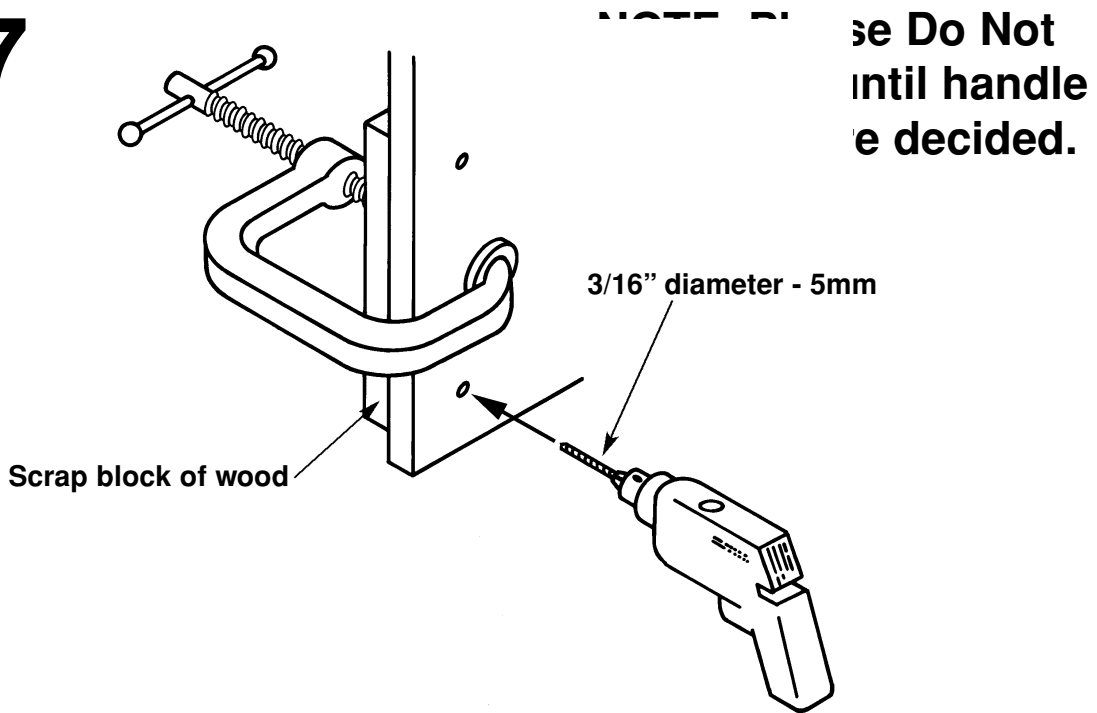





8

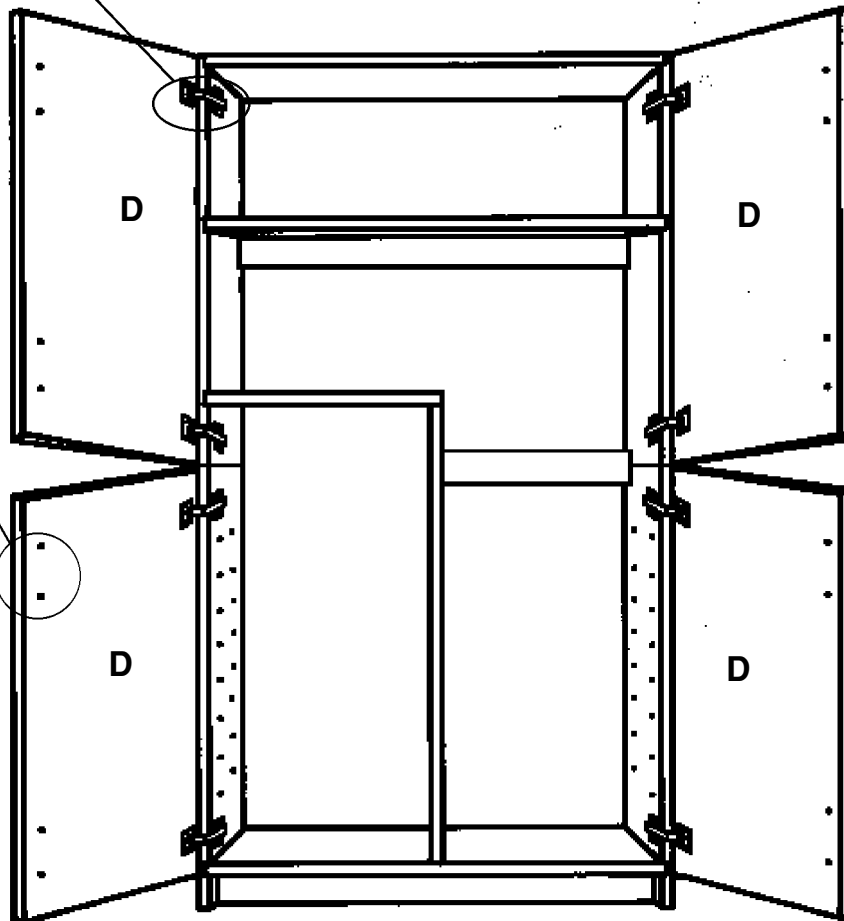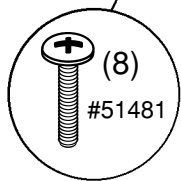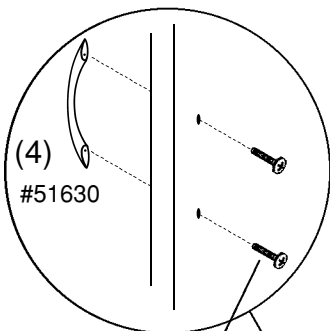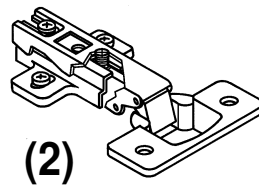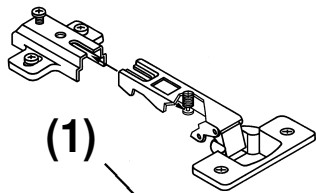



DOOR ADJUSTMENT / AJUSTES DE LA PUERTA / REGLAGE DES PORTES

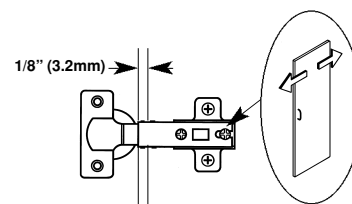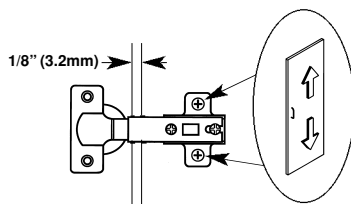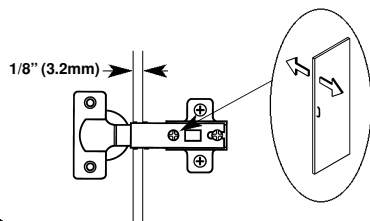

9

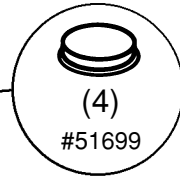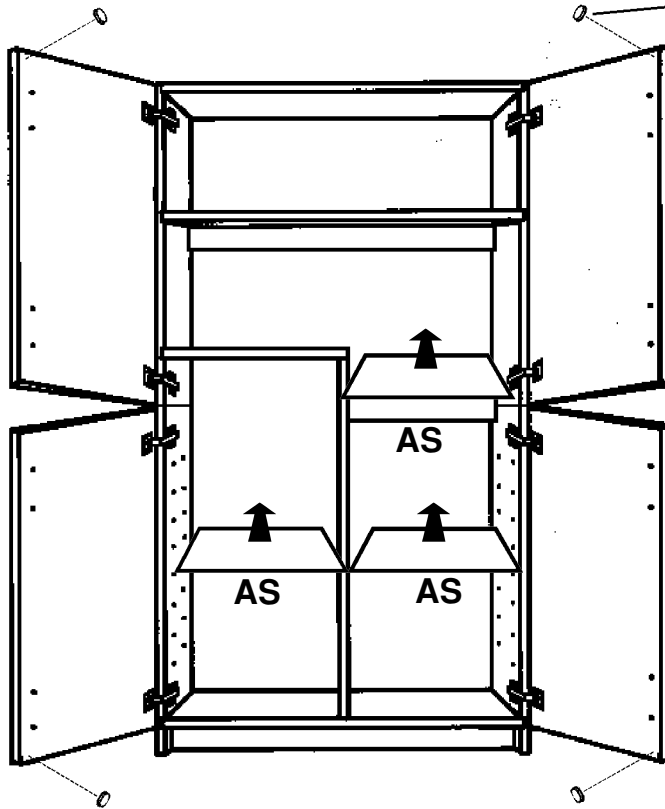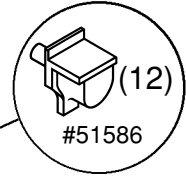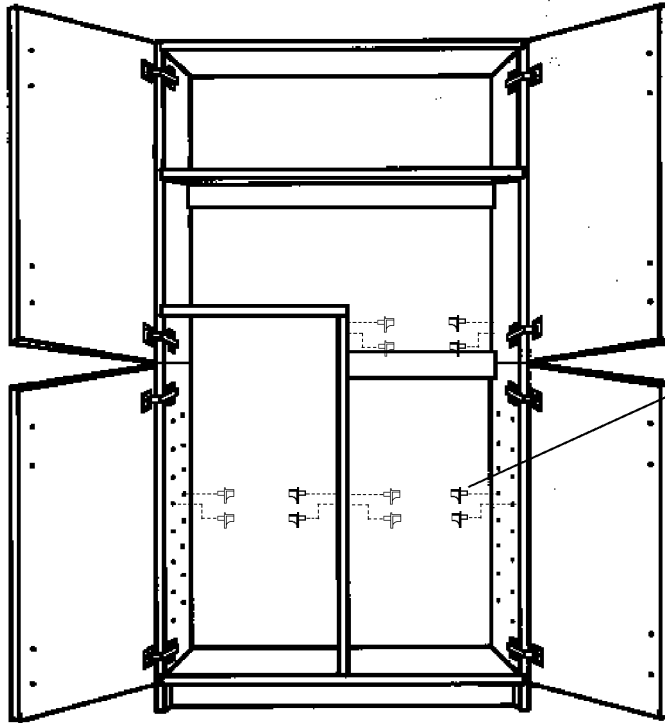

10

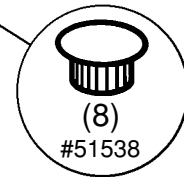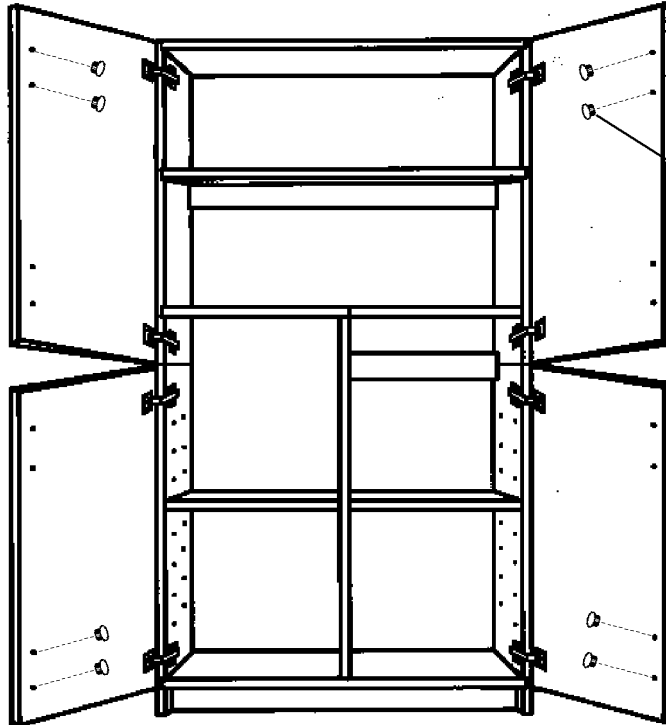

11

First, locate the studs in your wall. Fasten long wood screws securely into wall studs.

To prevent damage to cabinet, it must be attached to wall using furnished hardware.

