

**READ AND UNDERSTAND THESE INSTRUCTIONS  
BEFORE INSTALLING LUMINAIRE.**

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at main power supply before proceeding.  
**Retain these instructions for maintenance reference.**

**INSTRUCTION SHEET NO.**

**IS:1000LVR**

**B0607**

**Page 1 of 1**

**INSTALLATION PROCEDURE FOR: LYTECASTER® 1000LVR & 1000LVRE1 LOW VOLTAGE REMODELER KIT**

**CAUTION:** USE ONLY WITH REFLECTOR TRIMS PROVIDED BY LIGHTOLIER. USE OF OTHER MANUFACTURER'S TRIMS MAY VOID THE UNDERWRITERS LABORATORIES LISTING AND COULD CONSTITUTE A FIRE HAZARD.

**CAUTION:** BEFORE INSTALLING FRAME-IN KIT AND REFLECTOR TRIM, READ ALL MARKINGS ON FRAME-IN KIT AND REFLECTOR TO DETERMINE LAMP WATTAGE AND TYPE APPLICABLE FOR YOUR INSTALLATION.

**WARNING: (RISK OF FIRE) DO NOT INSTALL INSULATION WITHIN 3" OF FIXTURE SIDES OR WIRING COMPARTMENT, NOR ABOVE FIXTURE IN SUCH A MANNER SO AS TO ENTRAP HEAT.**

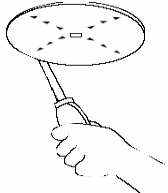


Figure A

**1. CUT OPENING (Fig. A)**

Use aperture sticker provided as a template to cut a hole in the ceiling. Cut to outside edge of sticker.

\* Lightolier also offers a hole cutter (HC-356) that can be purchased separately to assist with quick, clean trim installations. In this case, follow the hole cutting directions supplied with HC-356.

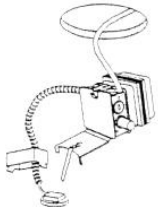


Figure B

**2. WIRE IN & PUSH THRU**

Wire to SUPPLY LEADS. (For Cable, use built in CABLE CLAMP in J-BOX). WHITE FIXTURE LEAD to NEUTRAL SUPPLY LEAD. BLACK FIXTURE LEAD to HOT SUPPLY LEAD (120V). BARE FIXTURE LEAD WIRE TO SUPPLY GROUND. Use wirenuts (local hardware item). Place all electrical connections in J-Box. Attach J-BOX cover onto J-BOX. For flexible CONDUIT, use 90° connector (not supplied) or 3/8" SPRING CONNECTOR (provided). If 3/8" SPRING CONNECTOR is used, place J-BOX and TRANSFORMER ASSEMBLY onto ceiling, attach CONNECTOR to CONDUIT and push into one of the 7/8" dia. knock out holes in J-BOX. Pull J-BOX and TRANSFORMER ASSEMBLY toward ceiling opening (as shown in Figure B) and complete wiring.

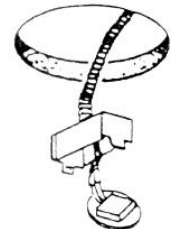


Figure C

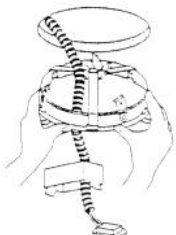


Figure D

**3. ATTACH MOUNTING RING (Fig. D)**

Push MOUNTING RING into opening until FLANGE sits against ceiling. Slide MOUNTING STRAPS down to trap ceiling thickness and then bend up to secure (Fig. E). Make sure "J-BOX" SLOT on REMODELER RING is in a position that will ensure enough space above ceiling for J-BOX to sit flat against ceiling.

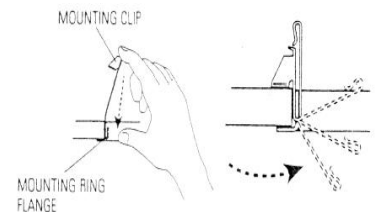


Figure E



Figure F

**4. ATTACH J-BOX (Fig. F)**

Insert J-BOX MOUNTING STRAP between the ceiling material and MOUNTING RING and through the "J-BOX" SLOT on the MOUNTING RING. Pull the STRAP until the J-BOX PLATE sits flat on the ceiling with the feet over the edge of the ceiling thickness (Fig G). Bend J-BOX PLATE MOUNTING STRAP up to secure. Make sure J-BOX PLATE is securely attached to the ceiling and the J-BOX is in the shown position.

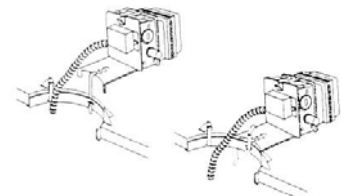


Figure G



Figure H

**5. SNAP-ON (Fig.H)**

**6. PUSH-UP (Fig. I)**



SEE SEPARATE  
REFLECTOR TRIM  
INSTRUCTION  
SHEETS

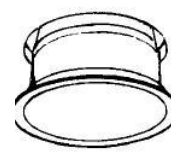


Figure I

**LIGHTOLIER®**

**LIGHTOLIER A GENLYTE COMPANY**  
631 Airport Road, Fall River, MA 02720