

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:5453

1291

INSTRUCTIONS FOR INSTALLATION OF 5453

CAUTION: DO NOT MOUNT TOP EDGE OF FIXTURE CLOSER THAN 6 INCHES TO CEILING.

FOR OCTAGONAL OUTLET BOXES

1. Position BACKPLATE ASSEMBLY centered over OUTLET BOX with bottom edge of BACKPLATE in line with bottom of OUTLET BOX. (Fig. 1).
2. Using all MOUNTING HOLES in BACKPLATE ASSEMBLY, secure to wall using wood screws, toggle bolts, or alternate fasteners (not provided) depending on wall material. NOTE: BACKPLATE ASSEMBLY should be leveled horizontally and outlet box completely covered before final tightening to wall.





FOR HORIZONTALLY MOUNTED RECTANGULAR GEM OR SWITCH OUTLET BOXES

1. Remove COVER PLATE from BACKPLATE ASSEMBLY as shown in Fig 3.
 2. Position BACKPLATE ASSEMBLY centered over OUTLET BOX with bottom edge of BACKPLATE in line with bottom of OUTLET BOX. (Fig. 2).
 3. Using all MOUNTING HOLES in BACKPLATE ASSEMBLY, secure to wall using wood screws, toggle bolts, or alternate fasteners (not provided) depending on wall material.
- NOTE: BACKPLATE ASSEMBLY should be leveled horizontally and outlet box completely covered before final tightening to wall.

WIRING PROCEDURE

1. Pull supply wires through WIREWAY OPENING and make connections:
 - Black fixture lead (or fixture lead without tracer mark) to black supply lead; white fixture lead (or fixture lead with tracer mark) to white supply wire.
 - Uninsulated wire is a GROUND WIRE and must be connected to a grounding terminal or ground wire in the OUTLET BOX. Use wire nuts (local hardware item). Push the splices into the OUTLET BOX.
 2. Raise FIXTURE ASSEMBLY and align MOUNTING STUD HOLES and SOCKET HOLES with SOCKETS and MOUNT STUDS on BACKPLATE. Gently slide FIXTURE ASSEMBLY backwards until the MOUNTING STUDS protrude through the holes in FIXTURE ASSEMBLY. Secure in place with BATTERY NUTS provided.
- CAUTION: MAKE CERTAIN THAT NO WIRES ARE PINCHED BETWEEN THE BACKPLATE ASSEMBLY AND THE FIXTURE ASSEMBLY.
3. From top of fixture, position DIFFUSER DISHES over circular openings (as shown in Fig. 4) and gently lower until dishes sit securely in each opening.
 4. Cover INSPECTION WINDOW with INSPECTION COVER PLATE and secure with screws (Fig. 4).
 5. Install recommended lamps.

CAUTION: MAXIMUM WATTAGE AS MARKED ON FIXTURE MUST NOT BE EXCEEDED. FOR HORIZONTAL MOUNTING ONLY.

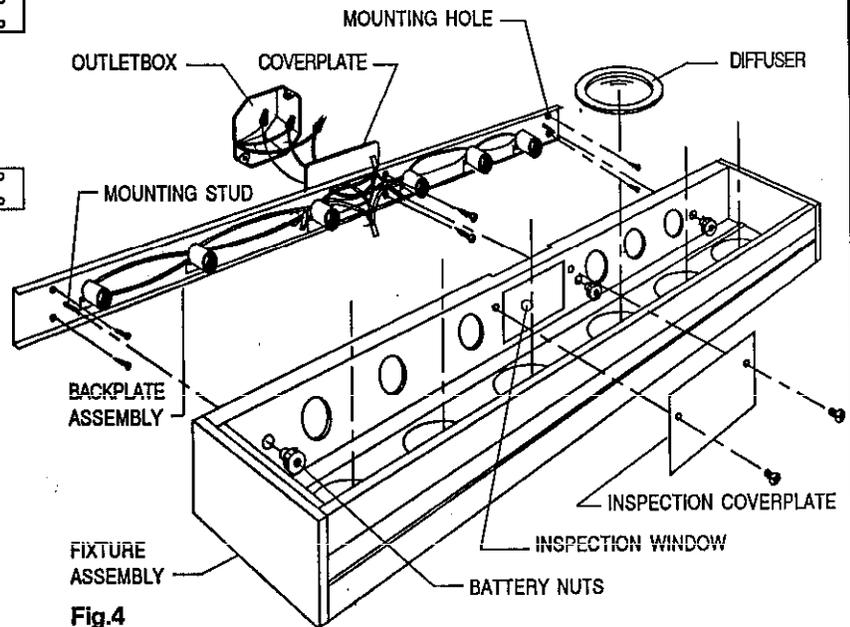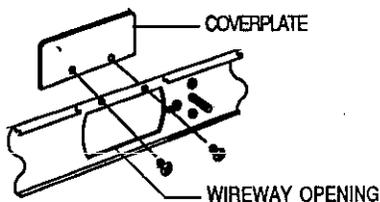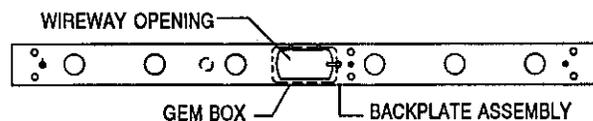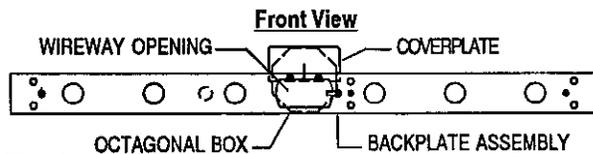

LIGHTOLIER®

SECAUCUS, NEW JERSEY 07096
MONTREAL, QUEBEC, CANADA