READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING ACCESSORY

This accessory is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:C6TCAD

A0502

Page 1 of 1

INSTALLATION PROCEDURE FOR C6TCAD CALCULITE EVOLUTION 6 INCH APERTURE THICK CEILING ADAPTER RING

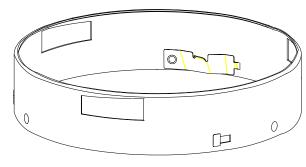


FIG. 1

C6TCAD

6" Aperture Thick Ceiling Adapter Downlight Style

Installation Instructions:

- 1. Align largest opening of SLOT DETAILS with SPRINGS as shown in Fig. 2.
- Push ADAPTER RING straight up into APERTURE RING (supplied with FIK) until SPRINGS fully engage SLOT DETAILS.
- 3. Rotate ADAPTER RING in direction shown (Fig. 3) to lock firmly in place.
- 4. Install appropriate reflector trim in the usual fashion. Refer to reflector trim instruction sheet for installation, wiring, and lamping information.

