


INSTALLATION OF PRE-WIRED CALCULITE FRAME-IN-KITS
INSTRUCTION SHEET FOR ITEMS:
G410, E610, F710

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

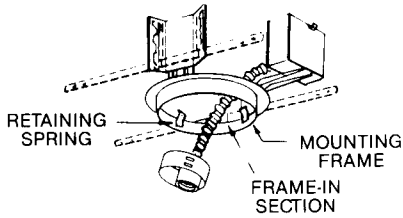


A. FRAME-IN

FIG. 1



B. CLOSE-IN

FIG. 2

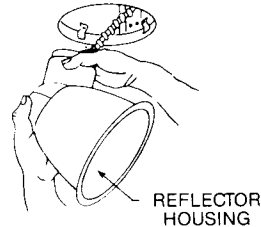

C. SNAP-IN

FIG. 3



D. PUSH-IN

FIG. 4

WARNING—(RISK OF FIRE) DO NOT INSTALL INSULATION WITHIN 3 INCHES OF FIXTURE SIDES OR WIRING COMPARTMENT, NOR ABOVE FIXTURE IN SUCH A MANNER SO AS TO ENTRAP HEAT.

A. FRAME-IN AND WIRE-IN (FIG. 1)

1. Install FRAME-IN SECTION using ADJUSTABLE MOUNTING BRACKET (see below). Wire to supply leads. White fixture lead to neutral supply lead. Black fixture lead to hot (120V.) supply lead. Bare fixture wire to supply ground. Use wirenuts (local hardware items). Place all electrical connections in the J-BOX. Attach J-BOX COVER onto J-BOX.

a. With MOUNTING BAR (order separately) 18"—Cat. No. 1950; 27"—Cat. No. 1951, using rectangular slots as shown.

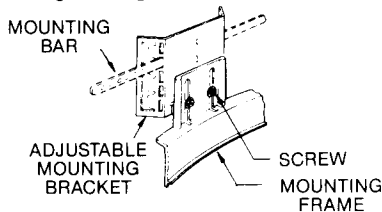


FIG. 5

b. With 3/4" CHANNEL (by others)

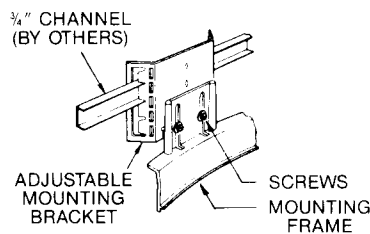


FIG. 6

c. With 1 1/2" CHANNEL (by others)

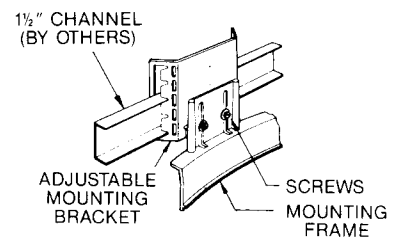


FIG. 7

For suspended ceilings T-Bar ANCHOR CLIPS ACCESSORY No. 1956 (Order separately) may be used in conjunction with 18" or 27" MOUNTING BARS for quick mounting Fig. 5a or simply wire MOUNTING BARS to ceiling members Fig. 5b.

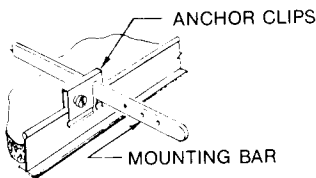


FIG. 5a

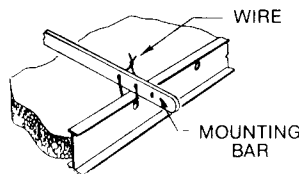


FIG. 5b

For wood joist construction, TELESCOPING MOUNTING BARS No. 7994 (order separately) may be used to secure MOUNTING FRAME (Fig. 5c).

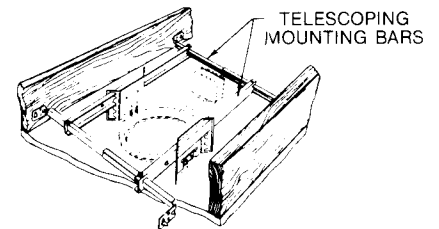


FIG. 5c

2. Adjust MOUNTING FRAME.

a. For Flangeless Trim Plaster Ceiling.

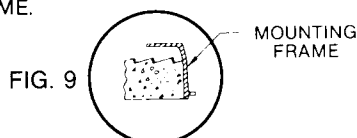


FIG. 9

b. For Overlapping Trim Plaster or Dry Ceiling.

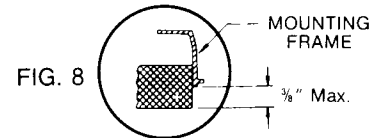


FIG. 8

Set MOUNTING FRAME so the bottom edge is flush with finished ceiling, as shown.

Set MOUNTING FRAME so the bottom edge is flush with, no higher than 3/8" above finished ceiling, as shown.

- NOTE:** 1. To insure proper installation, the MOUNTING FRAME must always be secure to structural ceiling members.
2. To insure proper installation, the MOUNTING FRAME must always be secure to structural ceiling members.

B. CLOSE-IN (FIG. 2).
Close in ceiling required.

C. SNAP-IN (FIG. 3)

D. PUSH-IN (FIG. 4)

} SEE SEPARATE
REFLECTOR TRIM
INSTRUCTION
SHEETS

U.S. Pat. No. 4,039,822