

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.

This fixture is intended for installation in accordance with the National Electrical Code and local or Federal code specifications. To assure full compliance with codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

POINT POWER JACK FOR 8600 LYTEJACK FIXTURES

NOTE: ACCESS ABOVE CEILING OR BEHIND WALL REQUIRED DURING INSTALLATION.

IF THE CEILING OR WALL IS MADE FROM A DENSE MATERIAL SUCH AS 1/2" PLYWOOD OR 3/4" PLASTERBOARD AND IS FIRMLY ATTACHED TO SUBSTANTIAL STRUCTURE THEN THE POINT POWER JACK CAN BE MOUNTED DIRECTLY TO THE CEILING OR WALL AS SHOWN BELOW.

(* IF THE CEILING OR WALL DOES NOT MEET THESE REQUIREMENTS, USE T-BAR ACCESSORY NO.8618).

NOTE: THE MAXIMUM WATTAGE LABEL SELECTED FOR THIS POWER JACK MUST CORRESPOND TO THE MARKINGS ON THE TRANSFORMER LABEL.

1. Peel the appropriate MAXIMUM WATTAGE LABEL from its backing and adhere it to the gap in the LABEL on the FLANGE of the POINT POWER JACK (Fig. 1).
2. Select the CAP with the same MAXIMUM WATTAGE marking and snap it over the FLANGE (Fig. 2).

NOTE: Use the 35W MAXIMUM WATTAGE LABEL and CAP for fixtures that have screw-in adapters (Fig. 2).

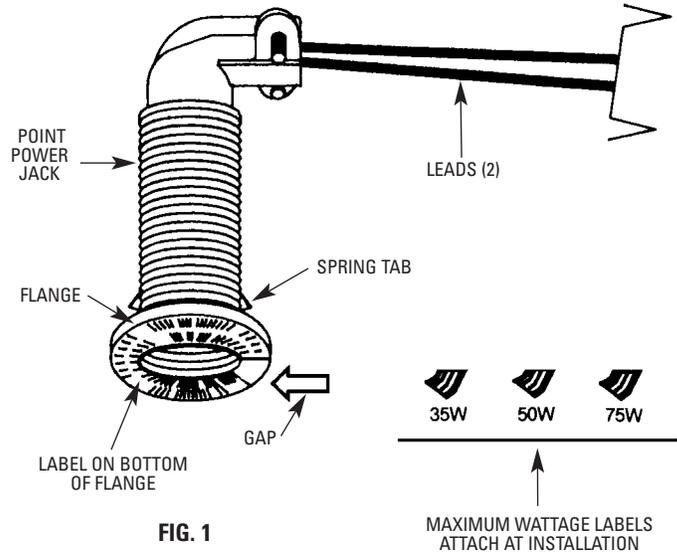


FIG. 1

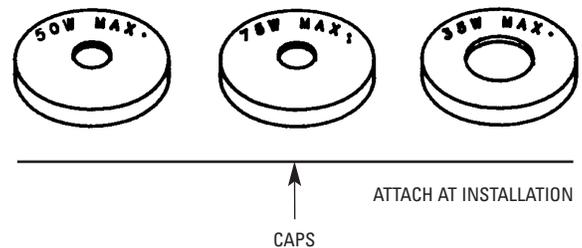


FIG. 2

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.

This fixture is intended for installation in accordance with the National Electrical Code and local or Federal code specifications. To assure full compliance with codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

3. DRILL a 1 1/8" diameter hole in the ceiling or wall. Locate the hole at least 12" from any flammable objects and 3" from any structure.
4. Insert the POWER JACK POINT into the hole in the ceiling or wall until the FLANGE is seated against the ceiling or wall and held in place by the SPRING TABS.

NOTE: The SPRING TABS are to Temporarily retain the POINT casting until it has been permanently fastened in place.

DO NOT ATTEMPT TO CONNECT OR USE THE POWER JACK UNTIL THEN.

5. Slip the WASHER and LOCK NUT past the leads and onto the POINT casting as shown. Thread the LOCK NUT onto the casting until the FLANGE is snug to the ceiling or wall.
6. Thread the leads through FLEXIBLE CONDUIT (not included) and splice to the remote transformer Cat. No. 8608 or No 8609 (Fig 3).

NOTE: The leads must go directly to the transformer and not to another POWER POINT. Otherwise excessive voltage drop will affect the brightness and color of the light.

**CAUTION: USE ONLY WITH JACKS MANUFACTURED BY LIGHTOLIER.
USE OF OTHER EQUIPMENT VOIDS THE WARRANTY AND
MAY CREATE A HAZARD.**

