
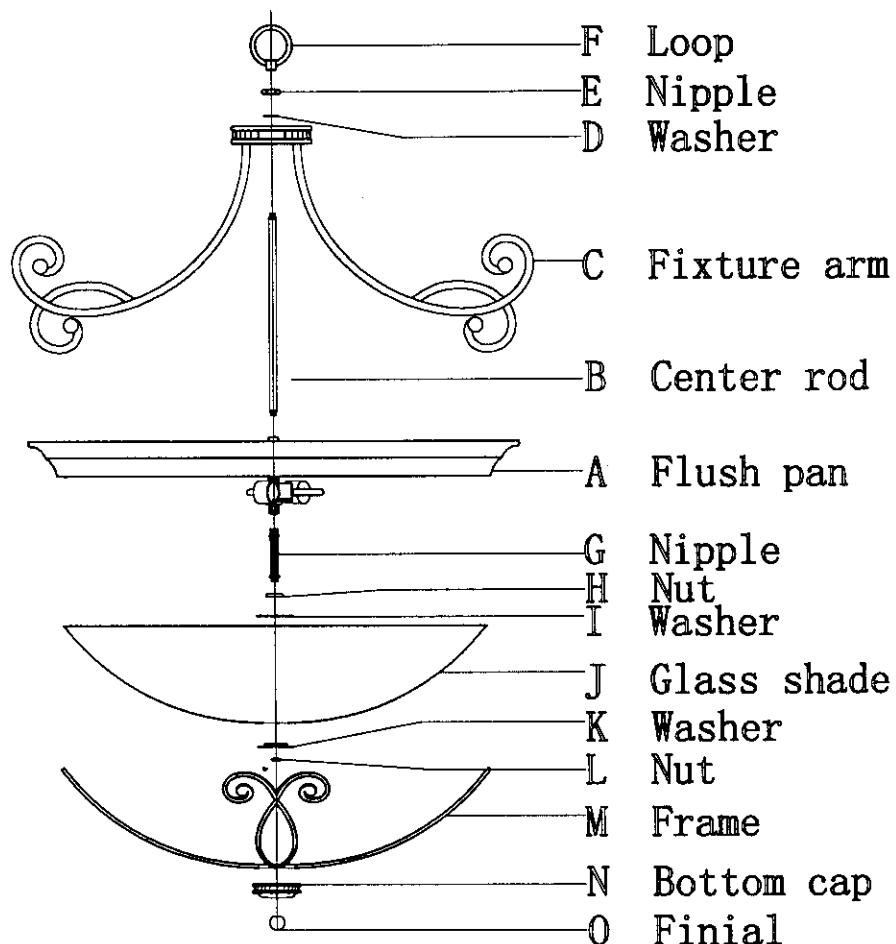


TI

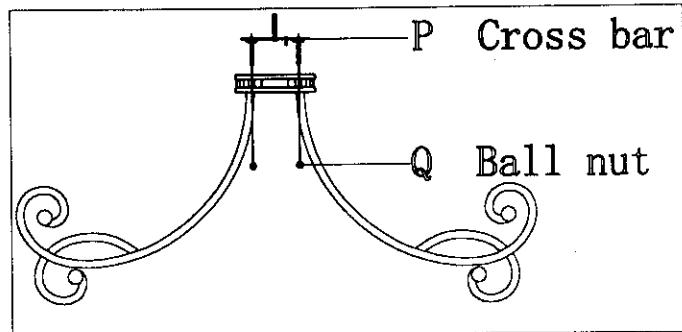

Assembly instruction for 31431-20, 31431-26

- 1 Attach the center rod(B) to the flush pan(A).
- 2 Attach the fixture arm(C) to the center rod(B) using the washer(D), nipple(E) and the loop(F).
- 3 Attach the nipple(G) to the center nut of the flush pan(A) using the nut(H).
- 4 Attach the glass shade(J) and fix it using the washer(I), washer(K) and nut(L).
5. Attach the frame(M) to the nipple(G) using the bottom cap(N) and the finial(O).
- 6 Attach the cross bar(P) to the ceiling outlet box.
- 7 Attach the fixture arm(C) to the cross bar (P) using two ball nuts(Q)