

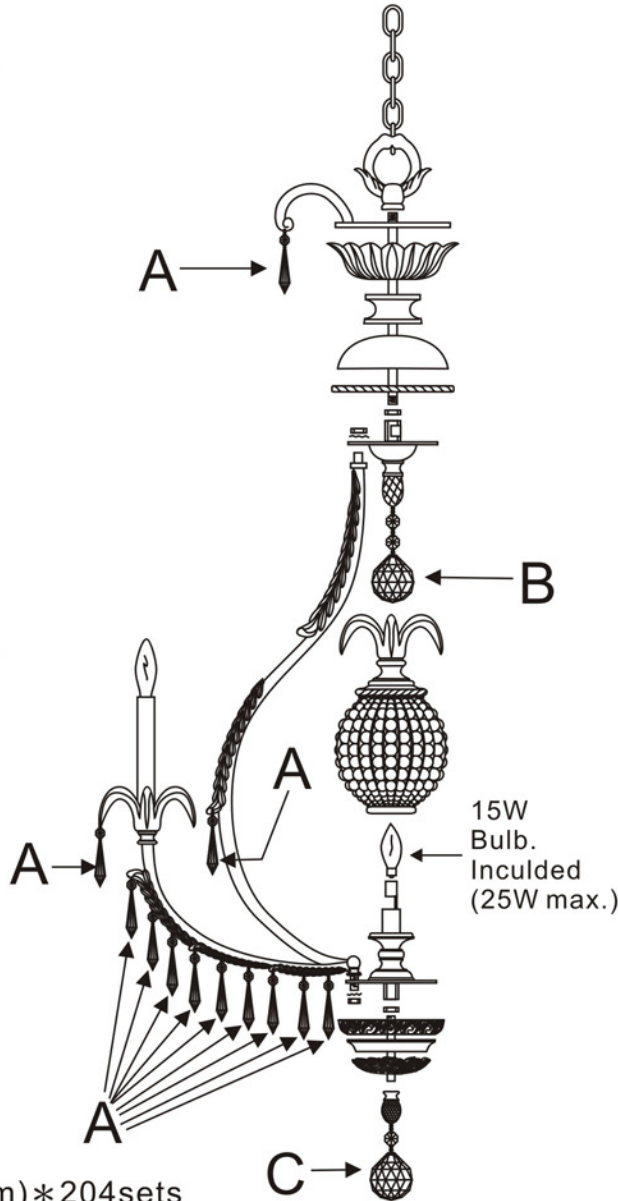


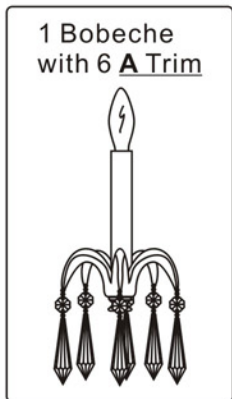

MODEL#:32454 ASSEMBLY AND DRESSING INSTRUCTIONS

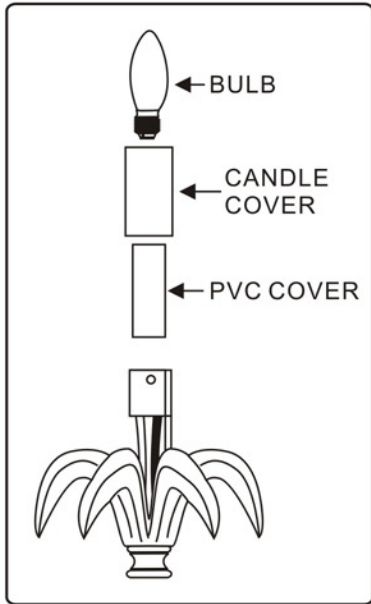

A =  (14mm+38mm)*204sets


B =  (14mm x 2 + 40mm)*1pc

C =  (14mm + 40mm)*1pc

ITEM NUMBER:# 32454 INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

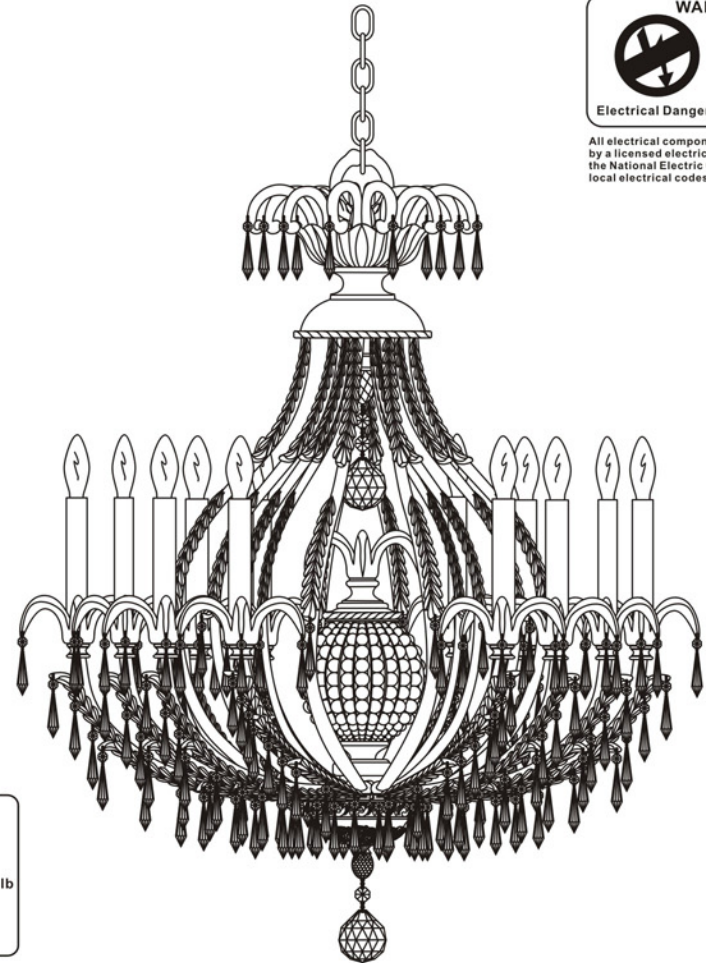

TI-32454 - 2008/4/9

