

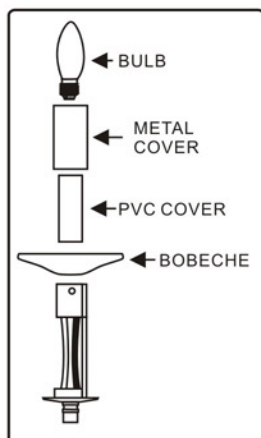


MODEL#:33194 ASSEMBLY AND DRESSING INSTRUCTIONS

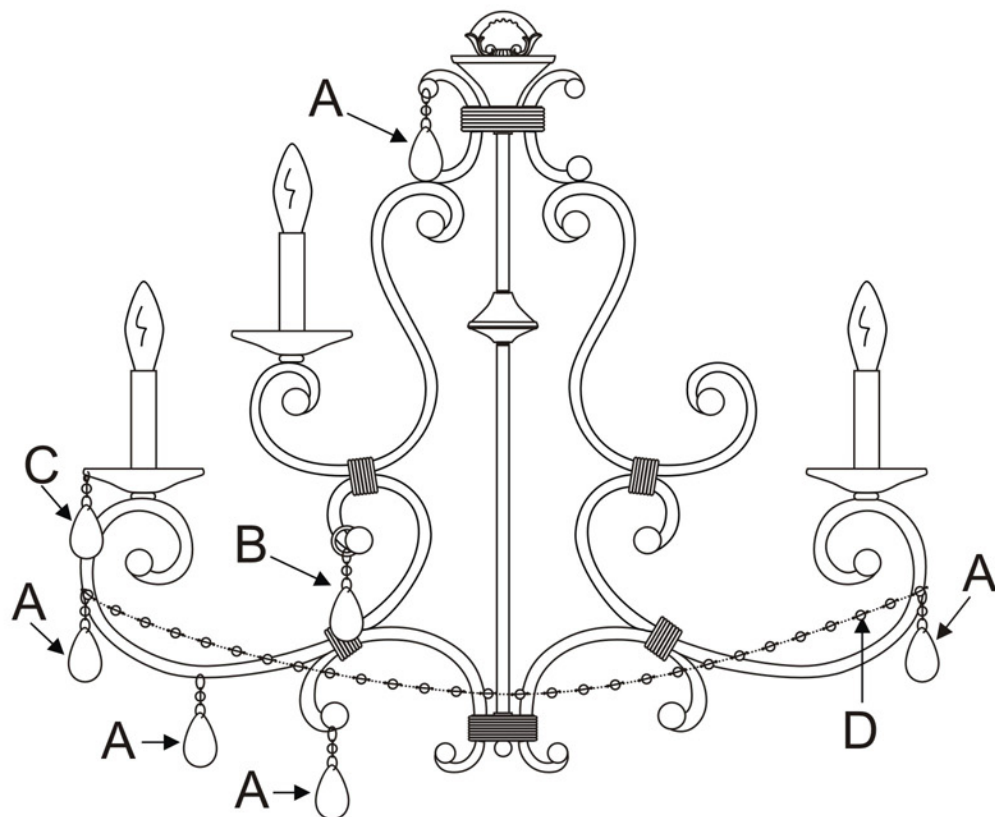

1 Bobèche
with 4 C Trim.

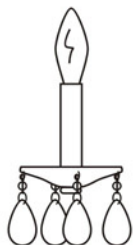



- A =  (10mm+50mm) * 24sets
- B =  (40mm Ring+10mm+50mm) * 6sets
- C =  (10mm+50mm) * 36sets
- D =  (10mmx28pcs) * 6sets



ITEM NUMBER:# 33194 INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

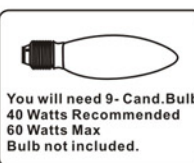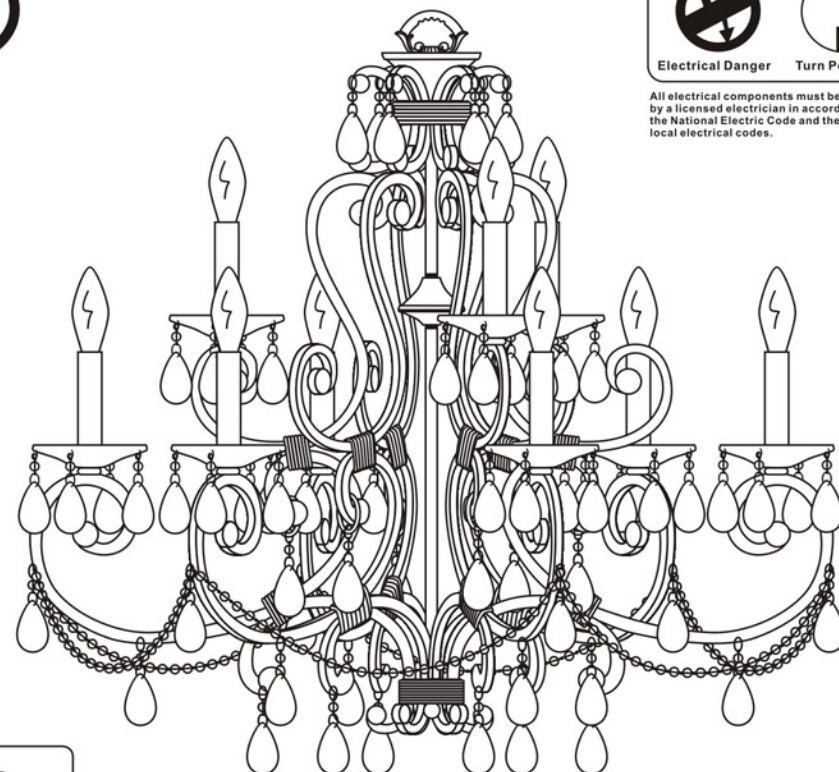

TI-33194 - 2008/3/10

