American Standard

Installation Instructions 4147.300

SINGLE CONTROL KITCHEN FAUCET AND PULL DOWN SPRAY

with EverClean™ Finish

Congratulations on purchasing your American Standard faucet with EverClean finish found only on American Standard faucets.

EverClean Finish

- One wipe effortlessly removes spots
- Eliminates the need for cleaners and scrubbing
- Permanent surface protectant remains beautiful for the life of the faucet



Certified to comply with ANSI A112.18.1M

5

6


M968210 REV. 1.1

• EverClean™ available on: Polished Chrome, Satin Nickel, Stainless Steel, Polished Brass (or any combination of these finishes) To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin. **TOOLS REQUIRED** Phillips Screwdriver Channel Locks Adjustable Wrench Plumbers' Putty or Caulking **INSTALL FITTING WITH OR WITHOUT DECK ESCUTCHEON** Turn off hot and cold water supplies before beginning. Apply a bead of putty to bottom edge of ESCUTCHEON (1). **Note:** Installation of ESCUTCHEON (1) is optional. ■ Make certain the large SEAL (2) is properly seated in recess of faucet body. LH RH Insert supply TUBES (3) and SHANK (4) through center hole of ESCUTCHEON (1) (if used) and sink. ■ Assemble RUBBER WASHER (5), BRASS WASHER (6), and threaded LOCKNUT (7) onto SHANK (4) from underside of sink. Hand tighten LOCKNUT (7) and check that faucet is centered. NOTE: FAUCET CAN BE INSTALLED FOR RIGHT OR LEFT HAND APPLICATIONS. Use a screwdriver to tighten the SCREWS (9) on LOCKNUT (7). Work your way around LOCKNUT (7), tightening the screws slightly each time until all are snug to ensure even pressure.

MAKE WATER SUPPLY CONNECTIONS


NOTE: FLEXIBLE SUPPLIES HAVE TO BE PURCHASED SEPARATELY


- Carefully bend COPPER SUPPLIES to meet water supply lines using the palms of the hands to avoid kinking.
- Connect HOT water supply line to left tube, and COLD water supply line to right tube using appropriate connectors.
- Use 1/2" IPS FLEXIBLE SUPPLIES (3) or 3/8" O.D. BULL-NOSE RISERS (4). Use adjustable wrench to tighten connections. Do not over tighten. Be careful not to kink copper supply when bending. Use tubing cutter to cut to proper length.

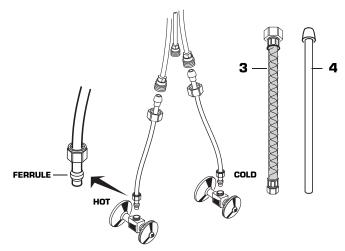

3 CONNECT HOSE SPRAY and INSTALL WEIGHT

- Insert SEAL WASHER (1) into spray COUPLING NUT (2). Figure 1
- Tighten COUPLING NUT (2) to SPRAY HOSE (3). Figure 1
- Retract SPRING (4) from threaded end of SPRAY HOSE (3) to expose TAPE with ARROW (5). Figure 2
- Position WEIGHT (6) even with the tape with ARROW (5) as shown. Figure 2

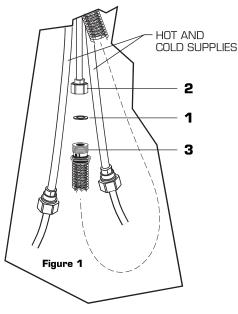


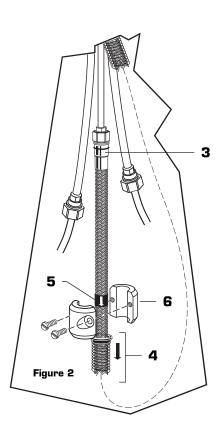

4

TEST INSTALLED FAUCET

- Move HANDLE (1) into "off" position and remove AERATOR (2).
- Turn on water supplies and check connections for leaks.
- Operate HANDLE (1) on and off, hot and cold to flush water lines thoroughly.
- Pull SPRAY (3) out and activate. Check hose and supply connections for leaks.
- Move HANDLE (1) to "off" position and replace SPRAY (3) and AERATOR (2).

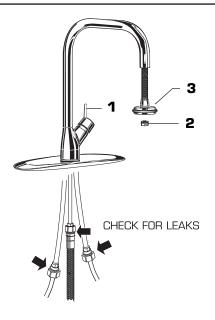


5

SERVICE

Reduced flow. If the flow should gradually be reduced over a number of months, the AERATOR may have debris in it. To clean, remove AERATOR (7) and rinse with water to remove any debris. Turn on faucet to wash any debris out of the faucet. Screw AERATOR (7) back into the spout. Operate faucet.

■ Clogged CARTRIDGE outlets or inlets may cause reduced flow. To clean, first turn off water supply then:

- Remove BUTTON (1) and loosen HANDLE SCREW (1) and pull off HANDLE (2).
- Unscrew ESCUTCHEON CAP (3). Unscrew the CARTRIDGE NUT (4).
- Remove CARTRIDGE (5). Clean inlets of CARTRIDGE (5) and MANIFOLD (6).
- Reassemble CARTRIDGE (5). Replace CARTRIDGE NUT (4), CAP (3) and HANDLE (6) assembly, check flow.

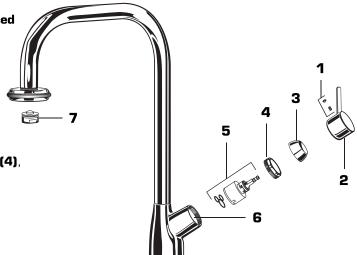

6

EverClean™ Finish Care Instructions

American Standard's EverClean finish will wipe clean with a soft, dry cloth. A soft cloth with clean water may also be used, if desired. No additional cleaning products are required.

DO NOT USE: Soaps, acid, polish, abrasives, harsh cleaners, or a cloth with a coarse surface.