

Read and understand these instructions before installing luminaire


This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

Leader cables for concealed white luminaires installed in North America must, in order to comply with Underwriters Laboratories rules for installation, have a strain relief on the leader cable where it emerges from junction box.


Strain relief is included in leader cable kit for 120 VAC installations in North America.

1. Remove knockout from junction box. (Fig. 1)

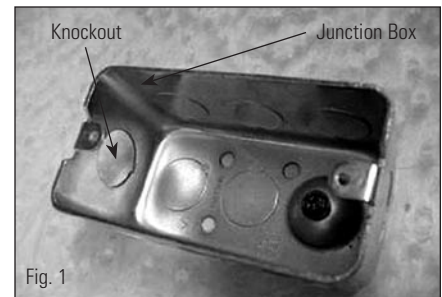


2. Slide strain relief at least six inches in from lead end of leader cable. (Fig. 2)

Tighten two screws on the strain relief clamp to lock it in place.

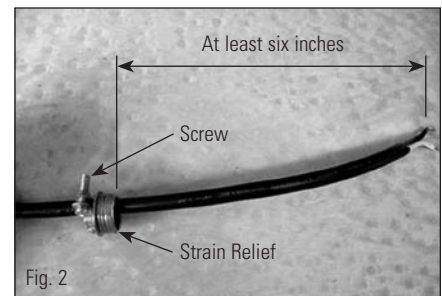

3. Pass cable through knockout and slide strain relief nut down cable. (Fig. 3)

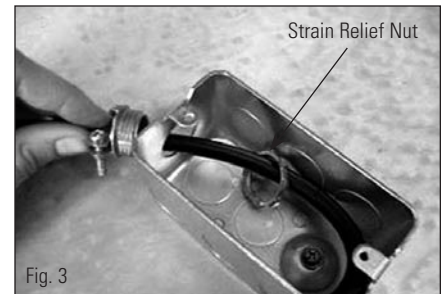

4. Tighten nut to lock strain relief in place. When properly installed, strain relief should look like this (Fig. 4):

