

**INSTALLATION OF CALCULITE REFLECTOR TRIMS  
INSTRUCTION SHEET FOR ITEMS:  
G7057, E7059, F7060**

INSTRUCTION SHEET NO.  
**IS:E7059**  
0888

**READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.**

This fixture is intended for installation in accordance with the National Electrical Code and local or federal code specifications. To prevent electrical shock, turn off electricity at fuse box before proceeding.

**Retain these instructions for maintenance reference.**




FIG. 1  
A. FRAME-IN

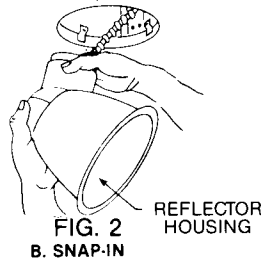


FIG. 2  
B. SNAP-IN  
REFLECTOR HOUSING

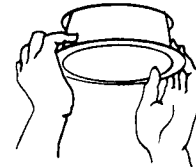


FIG. 3  
C. PUSH-IN

**WARNING—(RISK OF FIRE) DO NOT INSTALL INSULATION WITHIN 3 INCHES OF FIXTURE SIDES OR WIRING COMPARTMENT, NOR ABOVE FIXTURE IN SUCH A MANNER SO AS TO ENTRAP HEAT.**

**A. FRAME-IN (FIG. 1)**

See Frame-In-Kit Instruction Sheet (No. IS:E610) for installation procedure.

**B. SNAP-IN (FIG. 2)**

**NOTE:** For Overlapping Trim installation slip WHITE TRIM RING on over REFLECTOR HOUSING, as shown on Fig. 4 and 5, before Snap-in. For Flangeless Trim installation, WHITE TRIM RING is not required.

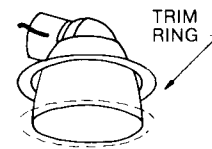


FIG. 4

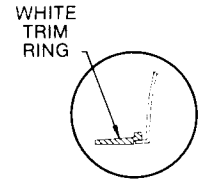


FIG. 5

Fasten ADJUSTABLE SOCKET HOUSING to REFLECTOR/HOUSING by pushing ADJUSTABLE SOCKET HOUSING into REFLECTOR/HOUSING for engagement. Engage SPRING to desired LAMP/WATTAGE position (see label on inside and outside of neck of REFLECTOR/HOUSING. See Fig. 6.

**C. PUSH-IN (FIG. 3)**

Push OPTICAL SECTION straight up into MOUNTING FRAME until tight against finished ceiling. RETAINING SPRINGS on MOUNTING FRAME (Fig. 1) will secure OPTICAL SECTION (reflector or baffle) in place.

**NOTE:** To remove, rotate REFLECTOR/HOUSING counterclockwise while pulling downward. After starting, use both hands to remove. See Fig. 7.

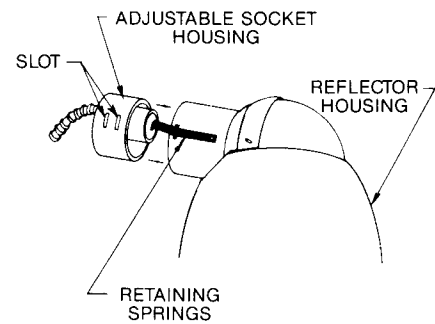


FIG. 6

**CARE AND MAINTENANCE OF "ALZAK" REFLECTOR**

If handling of reflectors with anodized or Alzak finish is required, the use of clean white or plastic film gloves is recommended to avoid fingerprints.

Anodized or Alzak surfaces can be cleaned by the following methods:

1. Wipe off with a soft, clean, dry, lint-free cloth.
2. Wipe off with a clean cloth dampened in mild detergent solution. Rinse, then wipe dry with lint-free cloth or paper towel.
3. Wipe off with a clean cloth dampened with a solution of wetting agent and water (such as 2 oz. per gallon "Pluronic L62-LF by Wyandotte Products), or a liquid wax such as Glass Wax®. Then wipe dry. Avoid gritty cleaning agents.



FIG. 7

U.S. Pat. No. 4,039,822