

775,175M REV. B
12/2005

Cat. No.	Model	Description
H1538	TK3-36BL	3-pc. Black Trim Kit, MPE-36R,
H1539	TK3-36PB	3-pc. Brass Trim Kit, MPE-36R
H1540	TK3-36BS	3-pc. Stainless Trim Kit, MPE-36R
H3435	TK3-33BL	3-pc. Black Trim Kit, MPE-33R
H3436	TK3-33PB	3-pc. Brass Trim Kit, MPE-33R
H1932	TK3-33BS	3-pc. Stainless Trim Kit, MPE-33R

INSTALLATION INSTRUCTIONS FOR TRIM KITS FOR USE WITH MODELS MPE-33R AND MPE-36R ELECTRIC FIREPLACE


* KIT CONTENTS:

- 1 ea. Top Panel
- 1 ea. Left Side Panel
- 1 ea. Right Side Panel
- 6 ea. Magnets

* **Note:** Trim Kits with Brass and Stainless Finishes also include:

- 1 ea. Left Side Channel
- 1 ea. Right Side Channel
- 1 ea. Top Channel
- Double-sided tape on panels

(If the kit you purchased includes channels and double-sided tape, they should be used)

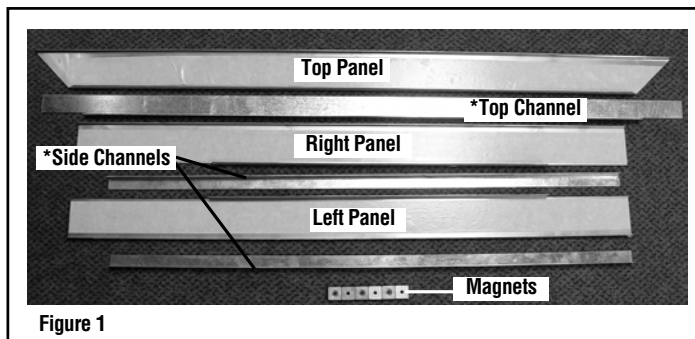

CAUTION: CAREFULLY SEPARATE THE MAGNETS BY TWISTING THEM APART. BE VERY CAREFUL WHEN HANDLING, BECAUSE THE MAGNETS ARE VERY POWERFUL AND CAN SNAP TOGETHER UNEXPECTEDLY AND POSSIBLY PINCH THE SKIN OR FRACTURE THE MAGNETS.

TOOLS REQUIRED:


None

INSTALLATION INSTRUCTIONS:

This kit contains trim panels used to finish the gaps between the wall-board or optional mantel and the fireplace, providing the appliance a finished built-in look.

ENSURE FIREPLACE IS COOL TO THE TOUCH BEFORE STARTING INSTALLATION OF THE TRIM KIT


Step 1. Place 2 magnets on each side of the fireplace, placed at approximately 8" from the top and 8" from the base. See **Figure 2**.

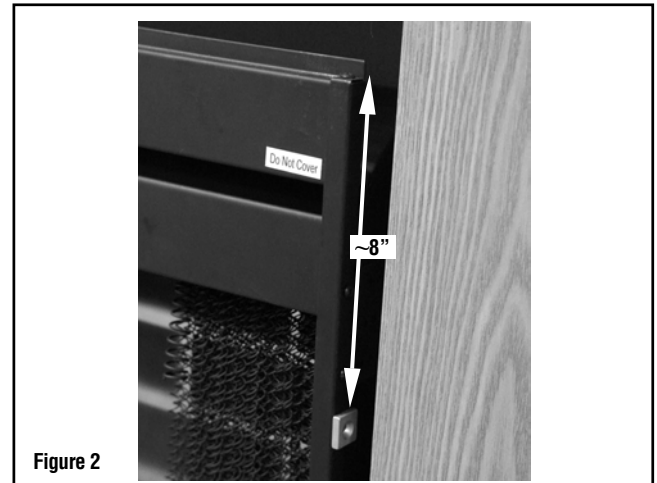

Step 2.

- **Brass and Stainless Trim Kits** - Proceed to **Step 3**.
- **Black Trim Kits** - Proceed to **Step 4**.

Step 3. Place the side channels over the magnets (See **Figure 3**). Ensure that the two side channels are flush with the bottom of the fireplace. The wider side of the side channel should be on the front of the fireplace face after installation.

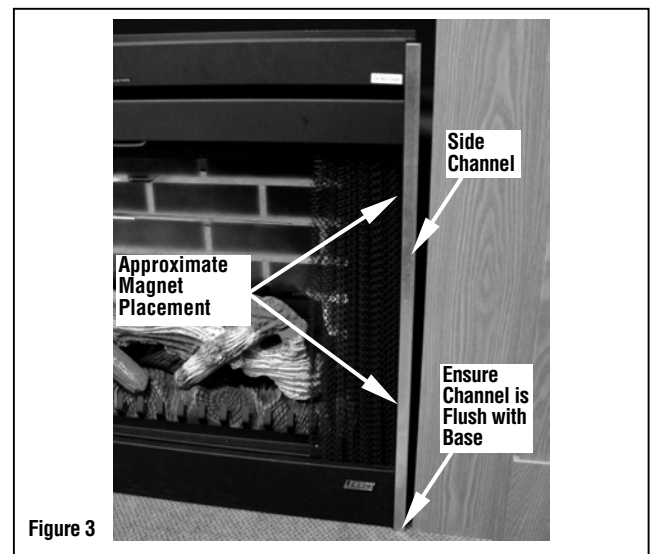

Step 3. Peel off the backing on the double-sided tape on the backside of each side trim panel (see **Figure 4**). Avoid touching the sticky surface of the tape.

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

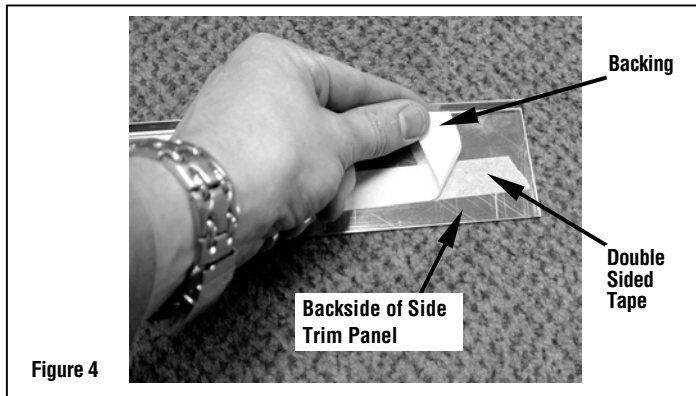


Figure 4

Step 4. Install the side trim panels onto each side of fireplace face as follows:

- **Brass and Stainless Trim Kits** – Place side trim over channels, then press firmly so double sided tape adheres panels to channels (see *Figure 5*).
- **Black Trim Kits** – Place side trim panels over magnets on each side of the fireplace face as shown in *Figure 5*.

Note: Magnets were installed on *Step 1, Figure 2*.

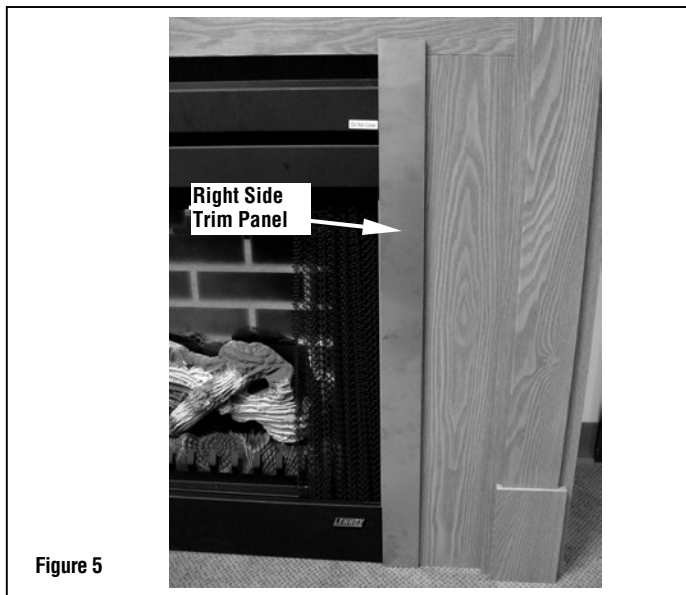


Figure 5

Step 5.

- **Brass and Stainless Trim Kits** - Peel off the backing on double-sided tape on the backside of the top trim panel. Press fit the top channel against the top trim panel as shown in *Figure 6*.
- **Black Trim Kits** – Proceed to *Step 6*.

Step 6. Place 2 magnets on the backside of the top trim panel as shown in *Figure 6*.

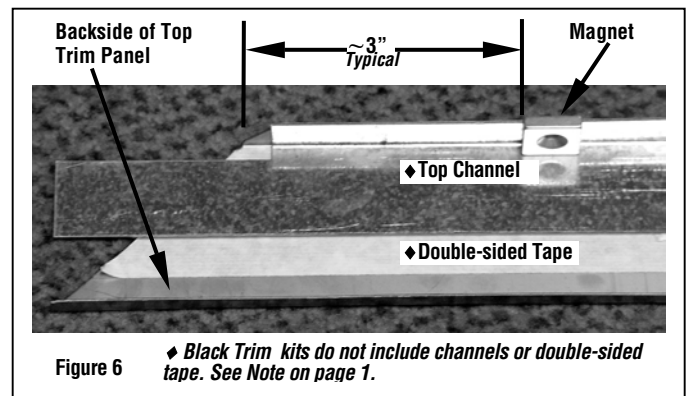


Figure 6

◆ **Black Trim kits do not include channels or double-sided tape. See Note on page 1.**

Step 7. Place the Top Trim Panel over the Side Trim Panels as shown in *Figure 7*.

- **Brass and Stainless Trim Kits** – The metal channel should go behind the side trim panels. Squeeze top and side trim pieces together.
- **Black Trim Kits** – The magnets act as support to hold the trim panel in place.

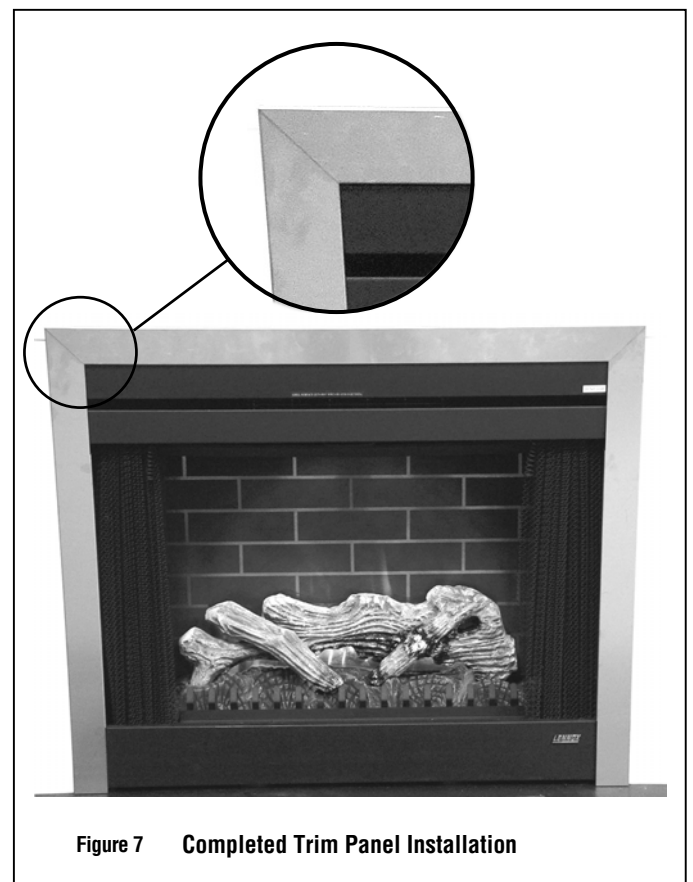


Figure 7 **Completed Trim Panel Installation**

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

LENNOX reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinued colors, styles and products. Consult your local distributor for fireplace code information.



HEARTH PRODUCTS

1110 West Taft Avenue • Orange, CA 92865