




# INSTALLATION INSTRUCTIONS

## FLAVOR FUSION 255 WITH DRIP TRAY TO 'Z' STYLE UNIT CONVERSION

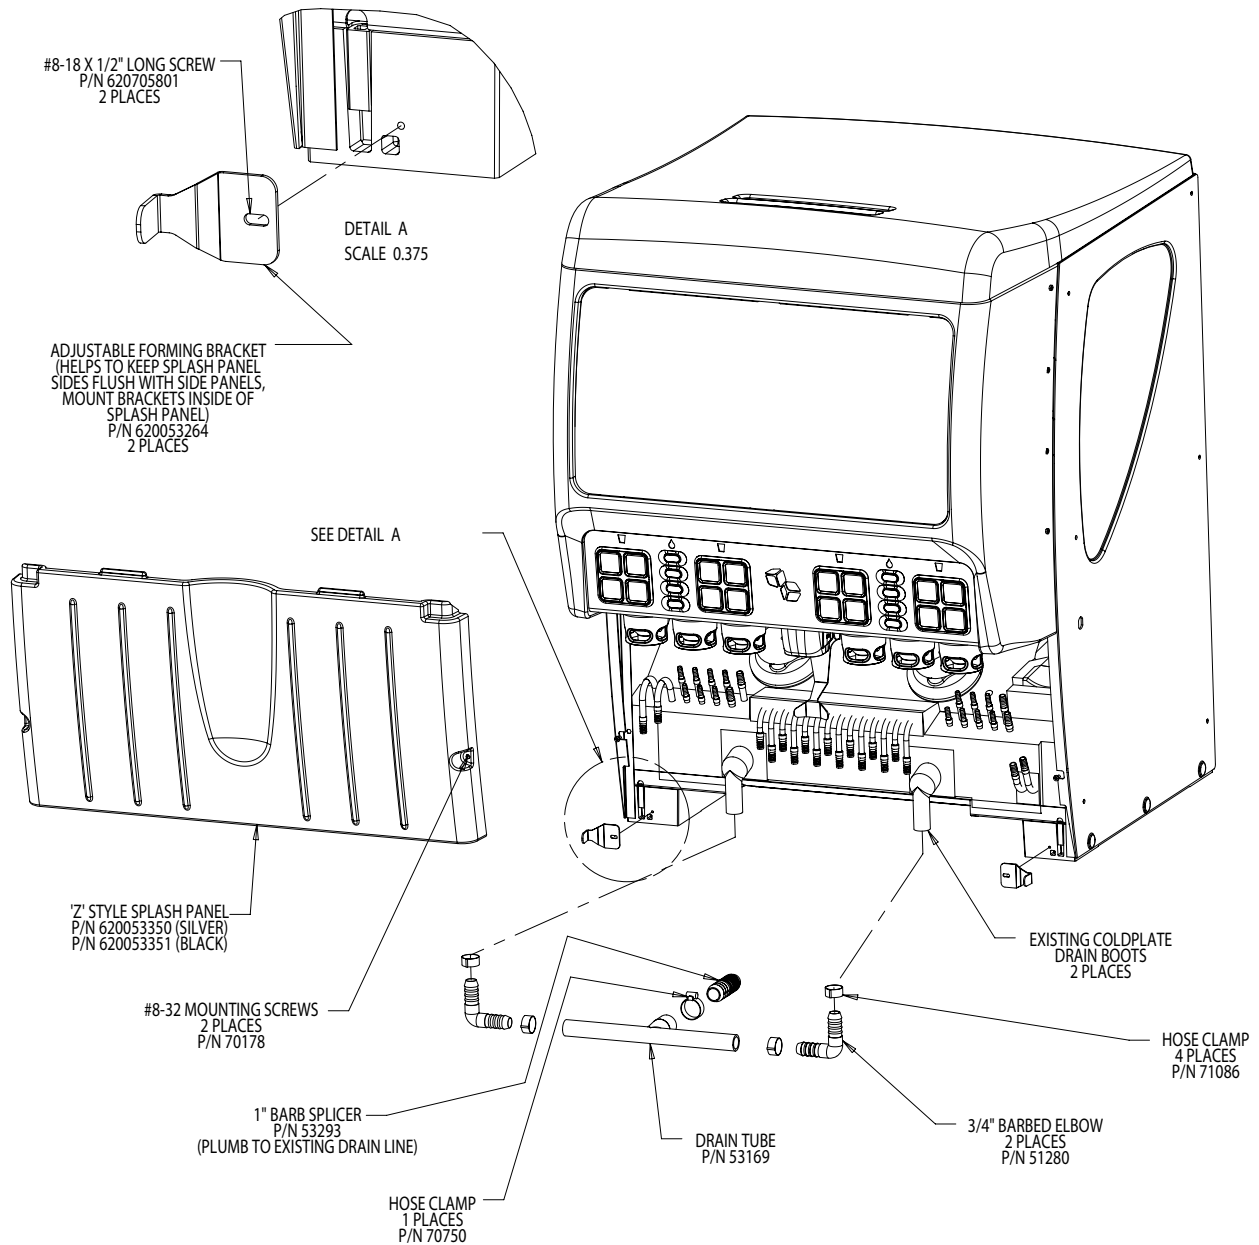

**IMPORTANT!!!**  
BE SURE TO INSULATE ALL FITTINGS/HOSE WITH INSULATION TUBE  
AND TAPE SUPPLIED IN KIT. FAILURE TO DO SO WILL LEAD TO CONDENSATION PROBLEMS

THIS EQUIPMENT MUST BE INSTALLED WITH ADEQUATE BACKFLOW PROTECTION  
TO COMPLY WITH APPLICABLE FEDERAL, STATE AND LOCAL CODES.