

Installation Instructions

Front Bumper Mfg. No./Part No. 1695285

Axion and 150Z Series
2690642, 2690644, 2690645, 2690647


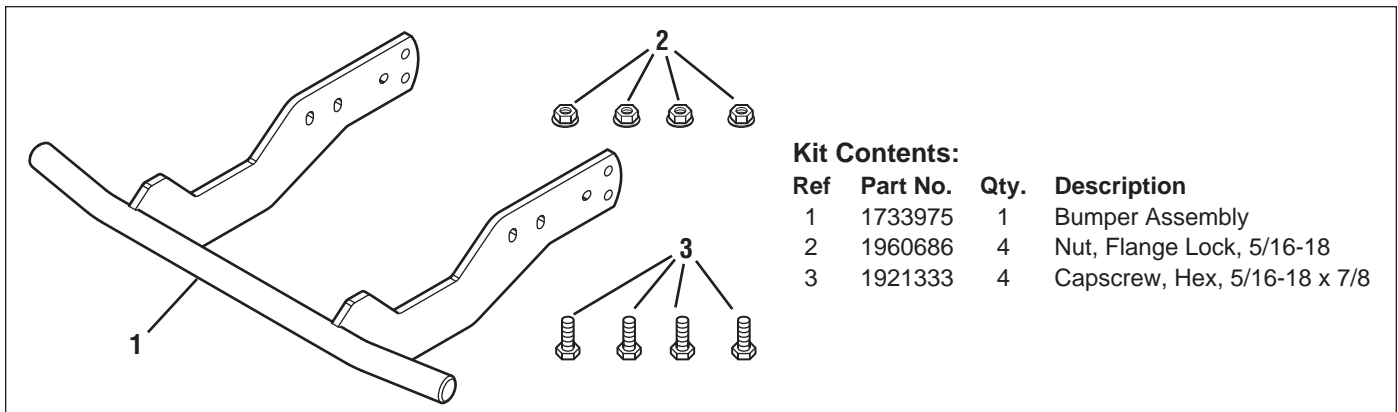


Figure 1. Contents

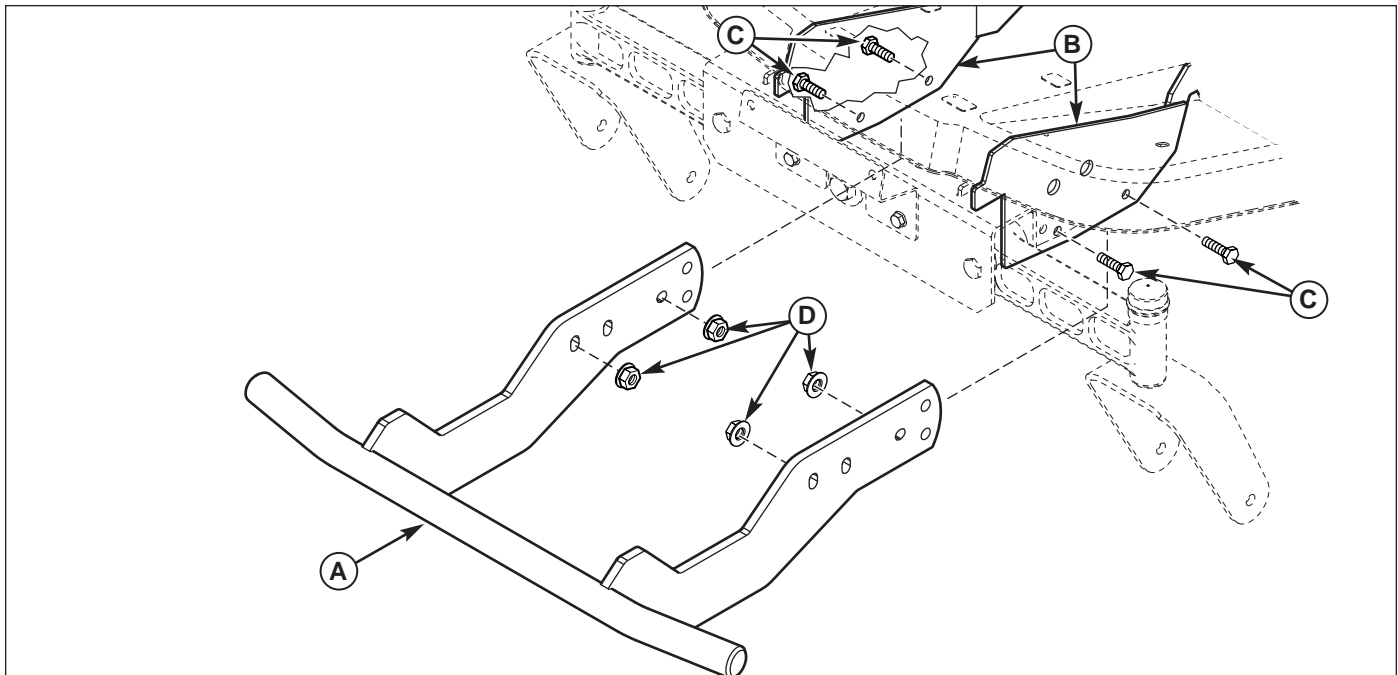

WARNING

Before beginning any service work turn off the PTO, set the parking brake, turn off the ignition, remove the key, and disconnect the spark plug wire(s).

INSTALLATION

1. Attach bumper (A, Figure 2) to inside of frame (B) securing with 5/16-18 x 7/8 cap screws (C) and 5/16-18 flange lock nuts (D).

Simplicity

MANUFACTURING, INC.

500 N Spring Street / PO Box 997
Port Washington, WI 53074-0997 USA

Figure 2. Bumper Installation (Footrest and Spindles Ghosted for Clarity)

- A. Bumper
B. Frame
C. Capscrews, 5/16-18 x 7/8
D. Nut, Flange Lock, 5/16-18

Note: Lift front of bumper up while tightening hardware to prevent wheels from contacting bumper.

Form No. 1734264-01

Rev. 2/2007

TP 200-4438-01-AT-SN

Briggs & Stratton Yard Power Products Group
Copyright © 2007 Briggs & Stratton Corporation
Milwaukee, WI USA. All Rights Reserved