


Simplicity

BROADMOOR LIGHT KIT Mfr's. No. 334

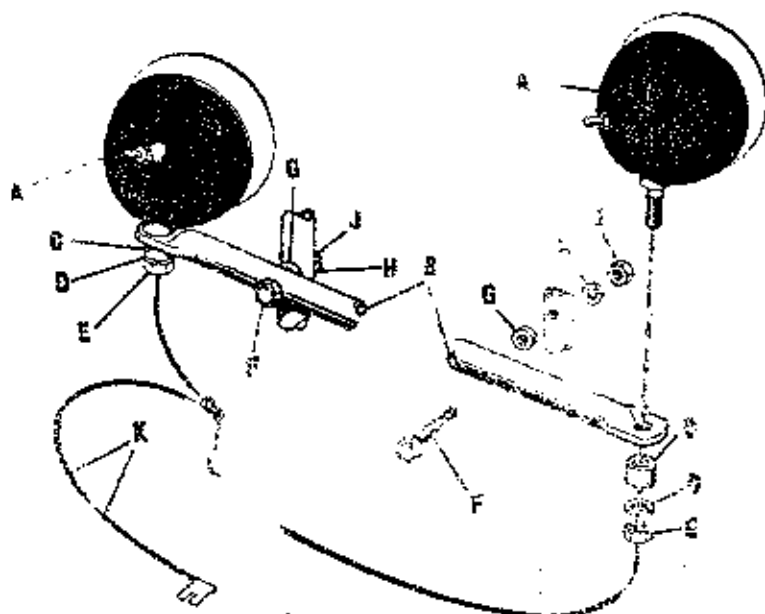


1. Attach the light support rod to the upper end of the vertical grill support arms with the 5/16-18 x 2-1/2 capscrews, spacers, lockwashers and nuts provided. (See the above illustrations). Note that the spacer (G) is placed between the two support rods on each side.

2. Attach the lamp assemblies to each side of the lamp support rod with the large spacers, lockwashers and nuts provided.

3. Attach the piece of extension wire to the left hand lamp by twisting the two bare ends together, and securing with the connector furnished.

4. Connect both lamp wires to the right hand regulator terminal marked "L".

Ref. No.	Part No.	Description
A	122050	Lamp Assembly
B	122161	Support, Lights
C	122053	Spacer
D	720004	Lock Washer, 1/2"
E	717006	Hex Nut, Full, 1/2"-13
F	705036	Hex Capscrew, 5/16"-18 x 2-1/2"
G	154483	Spacer
H	720001	Lock Washer, 5/16"
J	717001	Hex Nut, Full, 5/16"-18
K	122162	Wire - Reg. to Front Lamp
L	122058	Connector - Wire

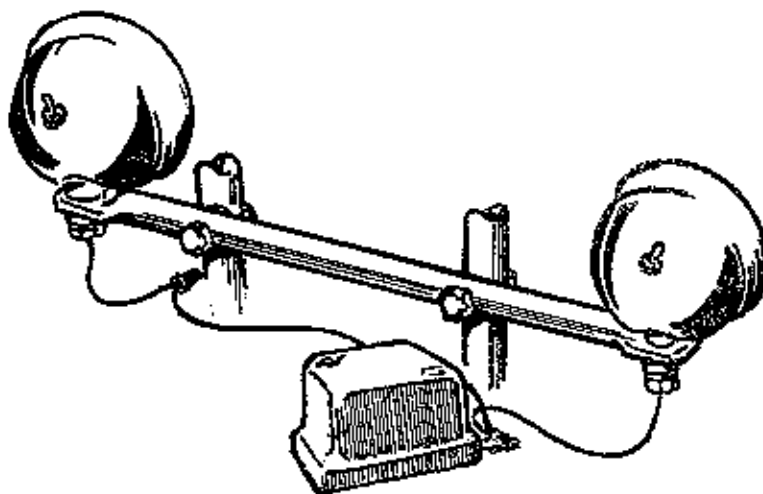

1265

