

Simplicity WINTERIZING KIT

FOR LANDLORD & SOVEREIGN

Mfrs. No. 585

Correct procedure for installation of winterizing kit is important to the safety of the operator and should be strictly adhered to.


1. Position heat deflector over the muffler to the inside of the exhaust port. Flap of deflector to be positioned against air cleaner and adjacent to the engine.

--IMPORTANT--


To prevent exposure to carbon monoxide, the exhaust port of the muffler must be outside of the heat deflector and pointed forward and down at all times. Do not alter this position.

2. Secure with clamp provided.

This deflector is provided for winter use only and must be removed in warm weather to prevent overheating and damaging of engine. The deflector directs a flow of warm air around the carburetor and allows for more efficient winter operation of the tractor engine.

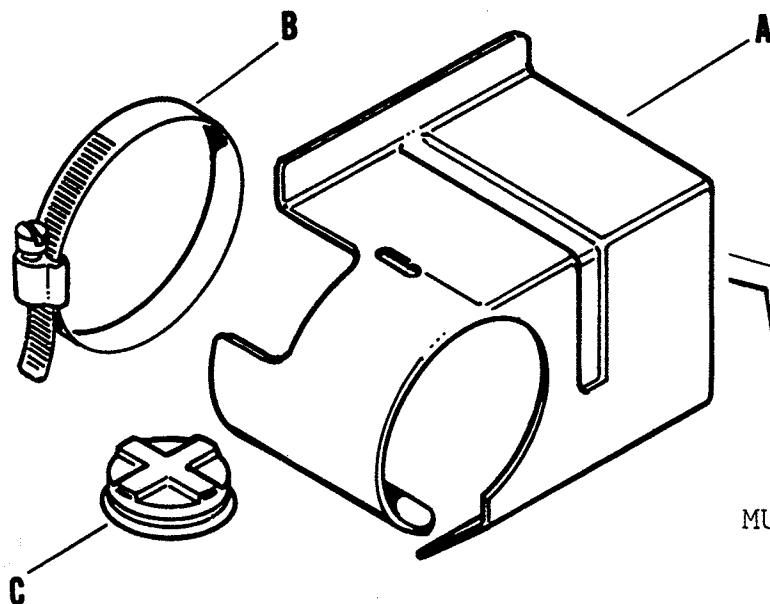

Ref. Let.	Part No.	Description
A	106789	Heat Deflector
B	106692	Clamp Deflector
C	106798	Gas Cap (Winterized)

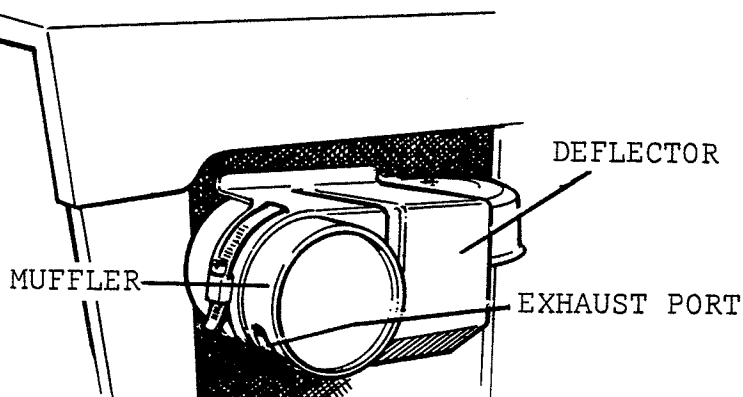

SIMPLICITY MANUFACTURING COMPANY, INC.

