


# Supplemental Instructions

For 38" Frame Hung  
Mowers (Snapper)

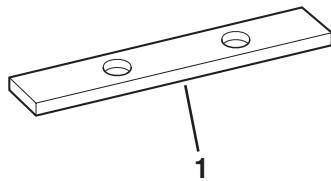

## Kit Contents:

Ref.	Part No.	Qty.	Description
1	1733180	1	Shim

Figure 1. Contents

This kit is intended for 38" frame hung mowers. It will open the gap between the mower deck and the deflector hinge bracket to ease the installation of some deck mounted attachments.

## ⚠ WARNING

Before beginning any service work turn off the PTO, set the parking brake, turn off the ignition, and disconnect the spark plug wire(s).

## INSTALLATION

1. Remove the carriage bolts (A, Figure 2), locknuts (B) and deflector & hinge assembly (C) from mower deck (D).

## ⚠ WARNING

The mower deflector MUST be properly installed in the down position and retained by the spring latch. Operating the unit without the deflector or the deflector not properly installed will expose operator and bystanders to rotating blades and flying debris hazards that can cause amputation or other injuries.

2. Place shim (E, Figure 3) between deck (D) and deflector & hinge assembly (C) as shown. Secure with carriage bolts (A) and locknuts (B).

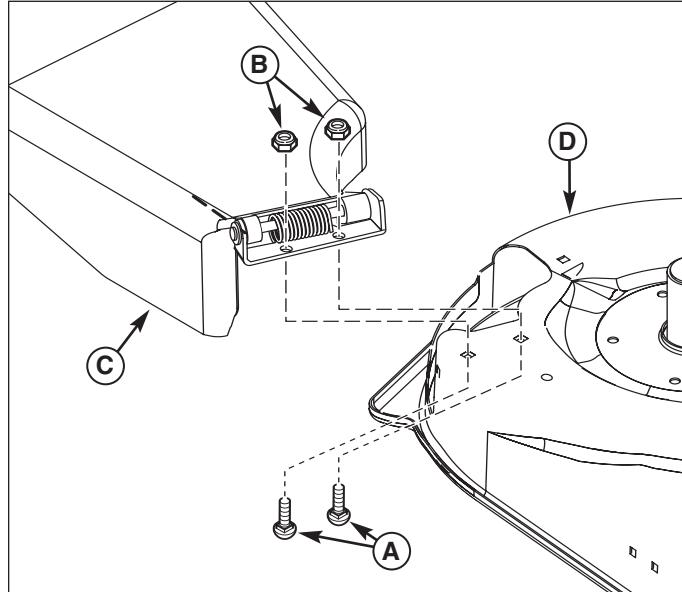


Figure 2. Remove Deflector & Hinge Assembly

- A. Carriage Bolts, 5/16-18 x 3/4
- B. Locknuts, 5/16-18
- C. Deflector & Hinge Assembly
- D. Mower Deck

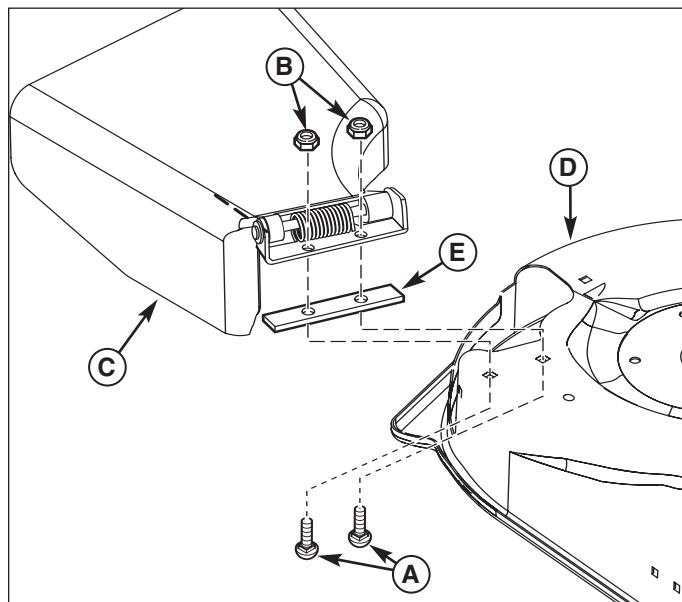


Figure 3. Install Deflector & Hinge Assembly and Shim

- A. Carriage Bolts, 5/16-18 x 3/4
- B. Locknuts, 5/16-18
- C. Deflector & Hinge Assembly
- D. Mower Deck
- E. Shim

 **Simplicity**

MANUFACTURING, INC.

500 N Spring Street / PO Box 997  
Port Washington, WI 53074-0997 USA

Form No. 1733181-00

Rev. 4/2006