

Installation Instructions

Front Counter Weight Kit

Mfg. No. 1694946

For the LT-200 Series

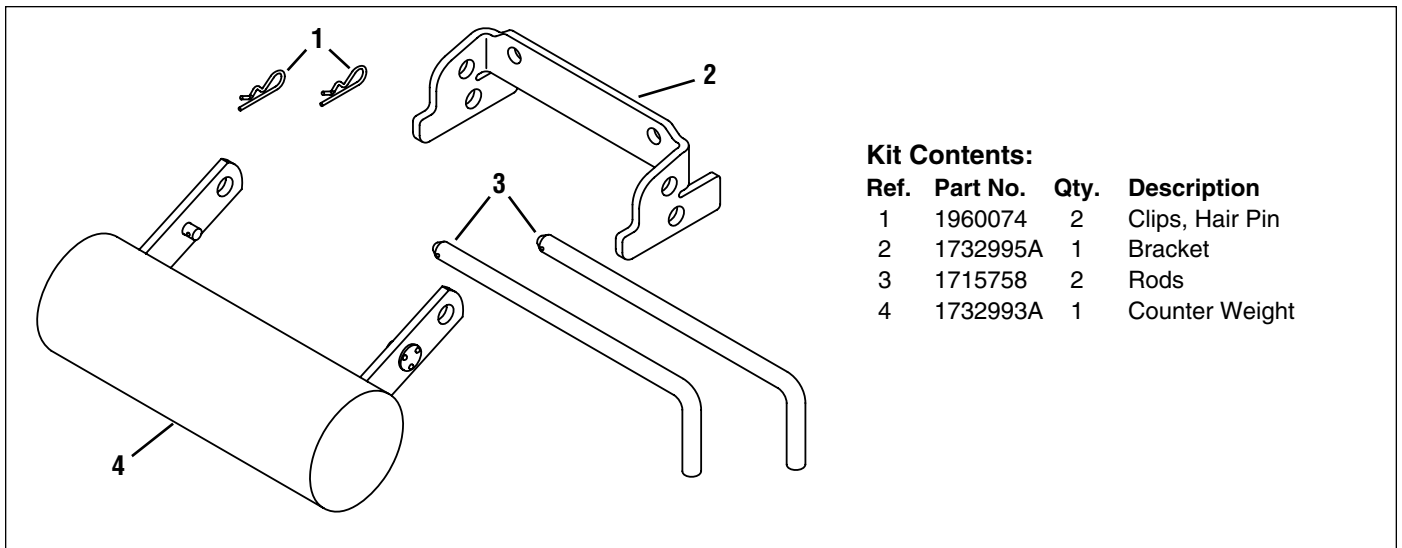


Figure 1. Contents

This kit is to install a front counter weight onto a LT-200 Series Lawn Tractor.

WARNING

Before beginning any service work turn off the PTO, set the parking brake, turn off the ignition, and disconnect the spark plug wire(s).

Installation

“J”-HOOK REMOVAL

1. Remove Mower Deck. See Operator's Manual MOWER DECK REMOVAL & INSTALLATION.
2. Remove and retain 7/16-14 x 2 capscrews (A, Figure 2) and 7/16-14 locknuts (B) from front axle (D). Discard “J”-hook (C).

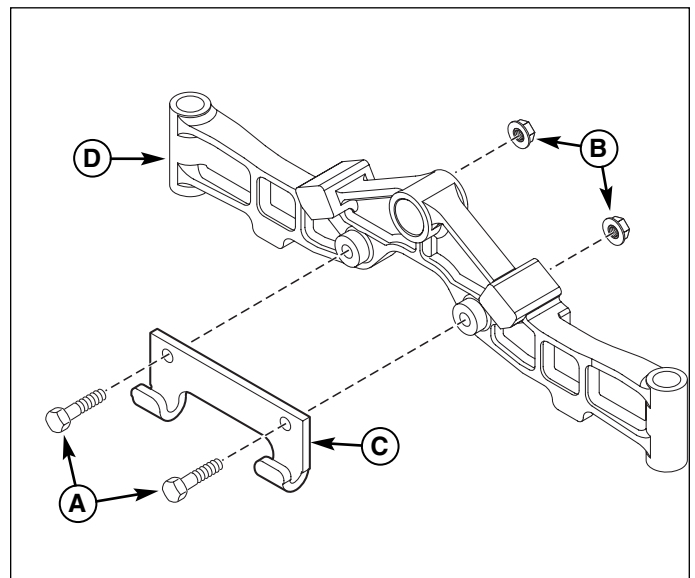


Figure 2. Remove “J”-Hook
A. Capscrews, 7/16-14 x 2
B. Locknut, Flange, 7/16-14
C. “J”- Hook
D. Front Axle

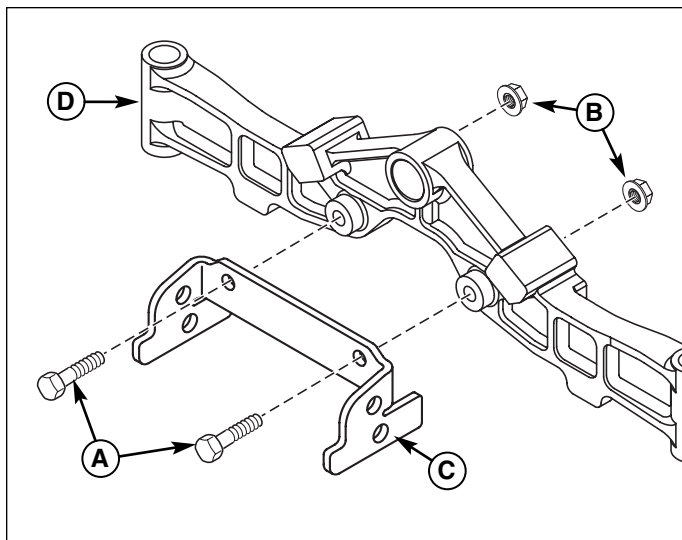


Figure 3. Install Front Weight Carrier Bracket

- A. Capscrews, 7/16-14 x 2 (Existing)
- B. Locknut, Flange, 7/16-14 (Existing)
- C. Bracket, Front Weight Carrier (New)
- D. Front Axle (Existing)

BRACKET INSTALLATION

1. Install the new bracket (C, Figure 3) to front axle (D) securing with existing 7/16-14 capscrews (A) and existing 7/16-14 locknuts (B).

WEIGHT AND DECK INSTALLATION

1. Use one of the rods (A, Figure 5) in the lower hole of bracket (D) to Install Mower Deck. See Operator's Manual MOWER DECK REMOVAL & INSTALLATION. Secure rod (A) with clip (B).
2. Insert one of the rods (A) through the hitch (D) and weight (C). Secure rod (A) with clip (B).

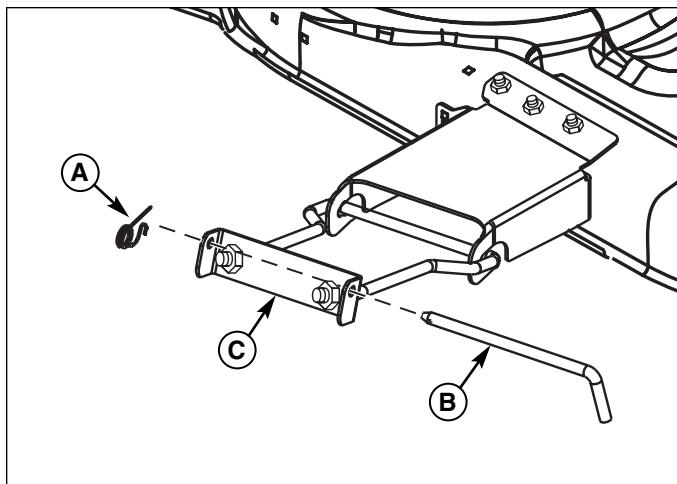


Figure 4. Remove and Discard Rod & Clip

- A. Clip, Safety Pin
- B. Rod
- C. Hitch, Deck

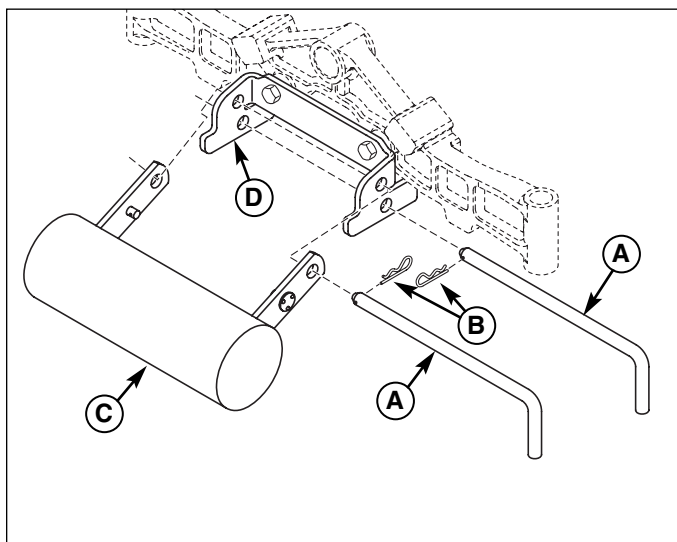


Figure 5. Rods and Weight

- A. Rods
- B. Clip, Hair Pin
- C. Weight
- D. Bracket



Snapper, INC.

535 Macon Street
McDonough, GA 30253 USA

Form No. 1733188-00

Rev. 06/2005

© 2006 Simplicity Manufacturing, Inc. All Rights Reserved
TP 200-4306-00-AT-N