



INSTALLATION INSTRUCTIONS FOR PART 99-5806

**Ford Focus
2000-2004**



**Mercury Cougar
1999-2002**



KIT FEATURES

- ISO DIN head unit provision with pocket
- DIN head unit provision with pocket

KIT COMPONENTS

A) Radio Housing | B) ISO Brackets | C) Trim Plate

99-5806



TOOLS REQUIRED:

86-5618 Head Unit Removal Keys



1-800-221-0932



www.metraonline.com



99-5806

TABLE OF CONTENTS

Dash Disassembly	1
Kit Assembly	2
Head Unit Provision Assembly	3
Final Assembly	4
Notes.....	5-6



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



99-5806

2000-2004 FORD FOCUS



1999-2002 MERCURY COUGAR



DASH DISASSEMBLY

- 1 Using Metra's 86-5618, pull the factory head unit from the dash and disconnect the wiring.




99-5806

KIT ASSEMBLY


DIN HEAD UNIT PROVISIONS:

- 1** Slide the DIN cage into the **Radio Housing** and secure by bending the metal locking tabs down.
- 2** Slide the after-market head unit into the cage and secure. Snap the Trim plate into the Radio Housing.

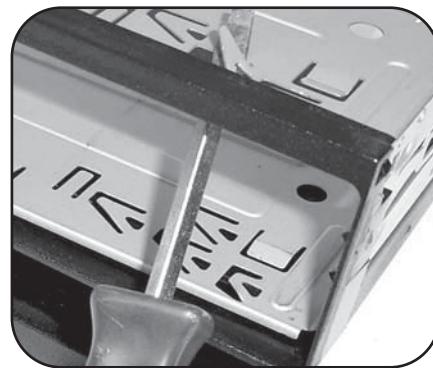

ISO DIN HEAD UNIT PROVISIONS:


- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit.
- 2** Slide the head unit into the radio opening until the side clips engage. Snap the Trim plate into the Radio Housing.

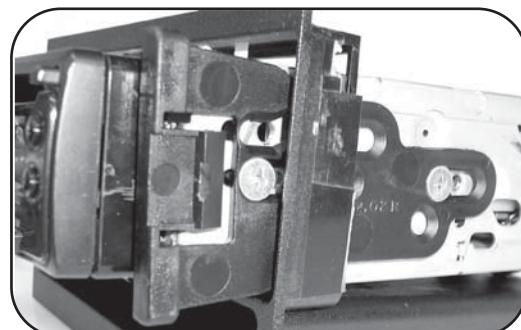

NOTE: When reinstalling the screws into the bottom of the 99-5806 use the (2) supplied Phillips screws instead of the factory screws removed in step 5 in Dash Disassembly.



99-5806

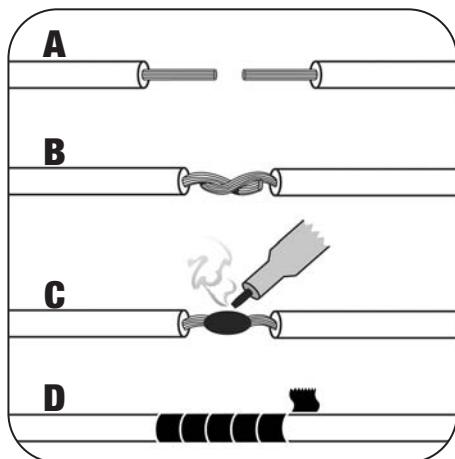

- A)** *Strip wire ends back 1/2"*
- B)** *Twist ends together*
- C)** *Solder*
- D)** *Tape*

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit)
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Snap radio / kit assembly into the factory radio opening.

FINAL ASSEMBLY



99-5806

NOTAS



INSTRUCCIONES DE INSTALACIÓN PARA LA PIEZA 99-5806

**Ford Focus
2000-2004**



**Mercury Cougar
1999-2002**



CARACTERÍSTICAS DEL KIT

- Accesorio para unidades centrales DIN ISO con bolsillo
- Accesorio para unidades centrales DIN con bolsillo

COMPONENTES DEL KIT

A) Alojamiento del radio B) Soportes ISO C) Placa de terminación



99-5806

HERRAMIENTAS REQUERIDAS

86-5618 Llaves de extracción para la unidad central



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



99-5806

ÍNDICE

2000-2004 Ford Focus

1999-2002 Mercury Cougar

<i>Desmontaje del tablero</i>	1
<i>Montaje del kit</i>	2
<i>Montaje del accesorio para unidades centrales</i>	3
<i>Montaje final</i>	4
<i>Notas.....</i>	5



99-5806

2000-2004 FORD FOCUS



1999-2002 MERCURY COUGAR



DESMONTAJE DEL TABLERO

- 1 Utilizando el 86-5618 de Metra,
quite la unidad central de fábrica
del tablero y desconecte el cableado.




99-5806

MONTAJE DEL KIT


ACCESORIOS PARA UNIDADES CENTRALES DIN:

- 1** Deslice la caja DIN en el alojamiento del radio y sujetela doblando las lengüetas de cierre de metal hacia abajo.
- 2** Deslice la unidad central en la abertura del radio hasta que enganchen los ganchos laterales. Coloque a presión la placa de terminación en el alojamiento del radio.

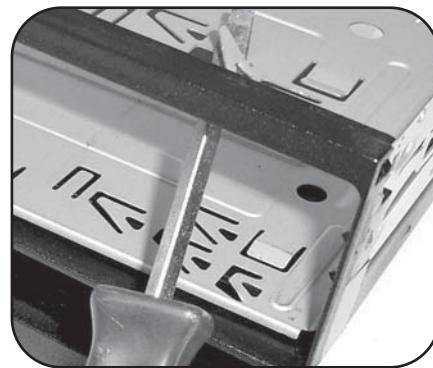


ACCESORIOS PARA UNIDADES CENTRALES ISO:

- 1** Monte los soportes ISO en la unidad central con los tornillos suministrados con la unidad.
- 2** Deslice la unidad central en la abertura del radio hasta que enganchen los ganchos laterales. Coloque a presión la placa de terminación en el alojamiento del radio.

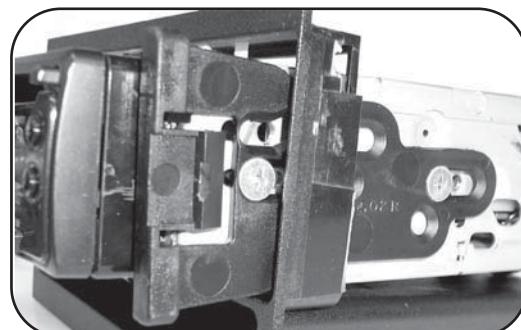

NOTA: Cuando reinstale los tornillos en la parte inferior de la pieza 99-5806, utilice los (2) tornillos Phillips suministrados en lugar de los tornillos de fábrica que retiró en el paso 5,

MONTAJE FINAL

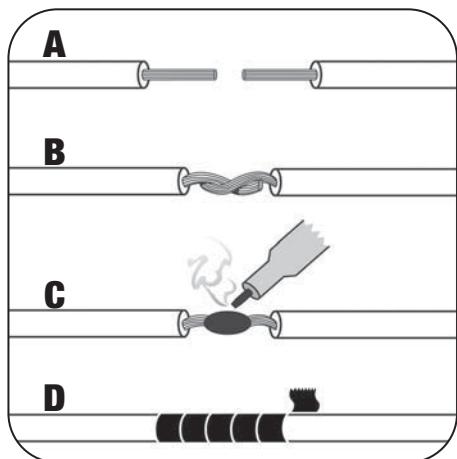

- A)** *Pele $\frac{1}{2}$ in de los extremos de los cables*
- B)** *Tuerza los extremos juntos*
- C)** *Suelde*
- D)** *Encinte*

- 1** Ubique el arnés del cableado de fábrica en el tablero. Metra recomienda usar el adaptador de acoplamiento adecuado y realizar las conexiones como se muestra. (Aísle y encinte individualmente los extremos de cualquier cable que no esté en uso, a fin de evitar un cortocircuito eléctrico).
- 2** Vuelva a conectar el terminal negativo de la batería y pruebe la unidad para verificar que funcione correctamente.
- 3** Coloque a presión el conjunto del radio/kit en la abertura del radio de fábrica.



99-5806

NOTAS