


PN260 INSTALLATION INSTRUCTIONS


© Panduit Corp. 2001

Printed in U.S.A.

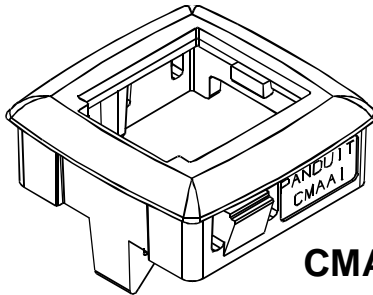


CMAA1


Module Installation

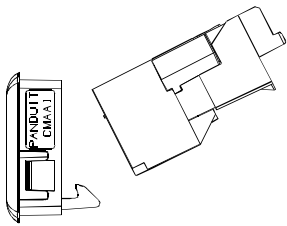

1. Orient module and Adapter as shown above.

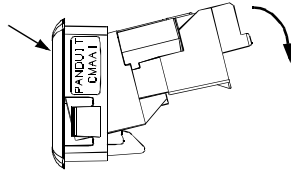


2. Align groove on module with notch on Adapter. Swing module downward.

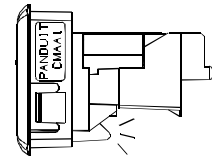


3. Snap into place.

Module Removal

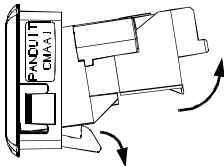


1. Press down on tab while pushing upward on the module.

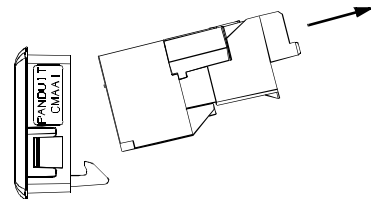

2. Remove module from Adapter.

The Adapter can fit into a 25mm or 1.00" square knock out in any metal or plastic panel that is 1.5mm - 2mm (.06" - .08") thick.

The knock out could be located in a furniture panel, raceway, or desk as long as it meets the previous criteria.

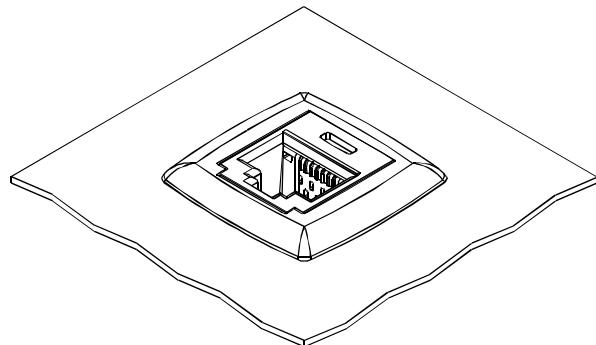

WORLDWIDE SUBSIDIARIES AND SALES OFFICES



10500 West 167th Street
Orland Park, Illinois 60467

Technical Support: 866-405-6654
Fax: 708-444-6993

Web site: www.panduit.com/ngc
E-mail: netconnsupport@panduit.com