

INSTALLATION INSTRUCTIONS

PR150/300 & IP150 Separate Drain for Upper Drip tray

1. Raise and lock drip tray assembly (see FIGURE 1).



Drip tray Assembly

FIGURE 1

2. Clean out and dry drip tray with a rag or paper towel, remove strainer if applicable (see FIGURE 2 and FIGURE 3).



Strainer

Upper Drip tray Assembly


FIGURE 2



Clean and Wipe Dry Inside Drip tray

FIGURE 3

3. Remove insulation from drip tray drain line assembly (see FIGURE 4).

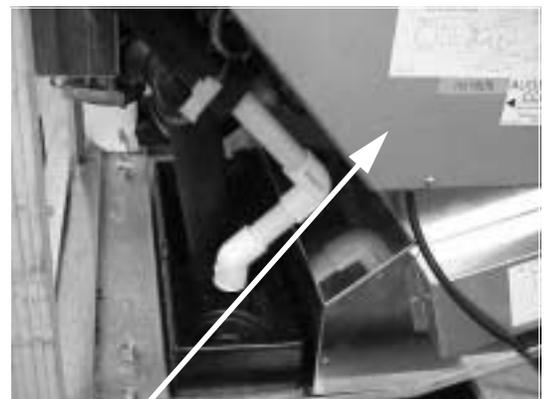

Remove Insulation from Drip tray Drain Line Assembly

FIGURE 4

4. Cut PVC drain as shown in FIGURE 5. **BE CAREFUL TO SECURELY HOLD DRAIN LINE TO AVOID DAMAGE TO UPPER DRIPTRAY!!!**



Cut PVC Drain

FIGURE 5

5. Deburr edge of PVC and re-plumb and clamp with new flexible tube/clamp supplied in kit (see FIGURE 6). **MAKE SURE THAT THE INSULATION COVERS ALL EXPOSED TUBING/CLAMP!**



Clamp Drain Line

Re-plumb with New Drain Line and Insulation

FIGURE 6

6. Re-route new drain tube to floor drain. **MAKE SURE THAT THERE ARE NO KINKS IN NEW DRAIN LINE!**
7. Re-install driptray strainer if applicable.
8. Check driptray, fittings, and lines for leaks.
9. Lower upper driptray assembly.