



Installation Instructions for 1545.170 Series Universal Lift & Turn Drain

BATH WASTE AND OVERFLOW WITH LIFT & TURN DRAIN

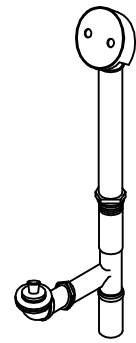

U.S. Patent No. 4,294,289 Other Patents Pend.

CUT-AWAY VIEW OF DRAIN

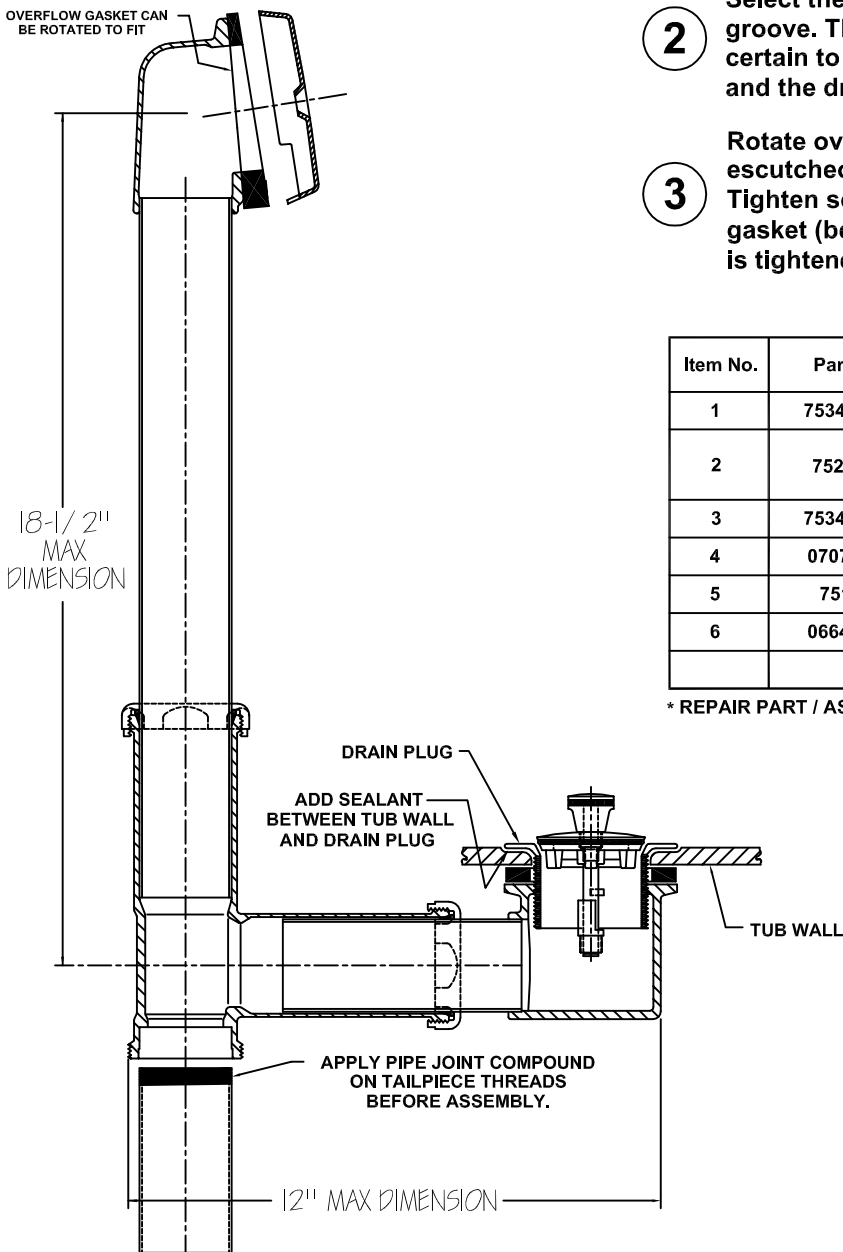

1

Assemble the waste tee, drain ell, overflow tube, gaskets and slip joints in the usual manner. Because bathing fixtures vary, two waste tee's have been provided to allow proper fit from drain to rough plumbing. Please choose the one that best suits your application.

2

Select the STOPPER and slide the O-RING into the groove. Thread the DRAIN PLUG onto the DRAIN SHOE. Be certain to use sealant in the space between the DRAIN PLUG and the drain opening in the tub.

3

Rotate overflow gasket for best fit. Align the holes in the escutcheon with those in the overflow tube. Tighten screws snugly. (DO NOT OVERTIGHTEN!) The overflow gasket (behind tub wall) will seal when the ESCUTCHEON is tightened.

Repair Parts Listing

Item No.	Part Number	Quantity	Description
1	753463-0930A*	1	Faceplate w/Screws
2	752012-100**	1	Stopper O-Ring: 2-128 Parker O-Ring I.D. 1.489"x 0.103"Thk.
3	753462-0930A*	1	Lift & Turn Stopper Assembly
4	070770-0070A	1	Overflow Gasket
5	751977-100	1	Drain Ell Washer, Rubber
6	066483-0070A	1	Slip Joint Kit

* REPAIR PART / ASSEMBLY ONLY

** AVAILABLE AT LOCAL HARDWARE STORE

CALL 1-800-442-1902

WEEKDAYS: 8:00 a.m. to 8:00 p.m. Eastern Time
SATURDAYS: 8:00 a.m. to 2:00 p.m.
SUNDAYS: 10:00 a.m. to 2:00 p.m.