1/4"



WITH VIEWER


FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, APARTMENTS AND OFFICES.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/4" and 1/2" drill bits,

- awl and screwdriver.

 1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
- 2. Mark centers with awl (or nail) and drill holes (A) with 1/4" drill bit completely through door.
- 3. Drill hole (B) for viewer with 1/2" drill bit completely through door from outside.
- Mount door knocker with screws and cover washers.
- 5. Insert viewer (C) through knocker from outside. Insert receiver tube (D) from inside and tighten. See illustration.

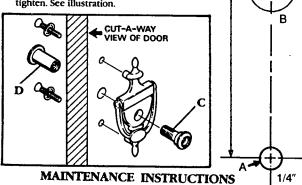

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.





KNOCKER VIEW C2-31252-605 BRT MADE EXCLUSIVELY FOR H. B. IVES IN PORTUGAL

H.B. Ives, New Haven, CT. 06511

3125/31252

APARTMENT DOOR KNOCKER

FOR USE ON EXTERIOR OR INTERIOR DOORS OF CONDOMINIUMS, APART-**MENTS AND OFFICES**

02-3125-605 (BRIGHT)

02-31252-605 (BRIGHT)

02-3125-609 (ANTIQUE)

02-31252-609 (ANTIQUE)

INSTALLATION INSTRUCTIONS

(Steps 3 & 5 for Viewer Installation Only)


TOOLS REQUIRED: Drill 3/8" and 1/2" drill bits, awl and screwdriver.

- 1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
- 2. Mark centers with awl (or nail) and drill holes (A) with 3/8" drill bit completely through door.
- 3. FOR VIEWER INSTALLATION ONLY

Drill hole (B) for viewer with 1/2"drill bit completely through door from outside.

- 4. Mount door knocker with screws and coverwashers.
- 5. FOR VIEWER INSTALLATION ONLY

Insert viewer (C) through knocker from outside. Insert receiver tube (D) from inside and tighten.

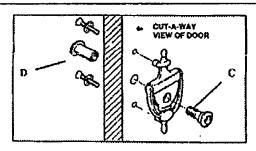

MAINTENANCE INSTRUCTIONS

Polish with a soft cloth. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES









MAIL SLOTS **KNOCKERS**

VIEWERS

HOUSE **NUMBERS** **USE TEMPLATE BELOW FOR EASY INSTALLATION OF** DOOR KNOCKERS....

