




1111 W. 35th Street Chicago, IL 60609
Tel: (773) 869-1111 • Fax: (773) 869-1329
FaxBack: (773) 869-1877 • www.tripplite.com

SmartRackSM
Network Enclosure

SR13

Cable Management Kit

1. Place a clip-nut in an appropriate position on the enclosure mounting angle.
2. Attach the bracket #4 to a mounting angle using screw #3 and spacer #2.
3. Thread the hook & loop strip #5 through the bracket #4.

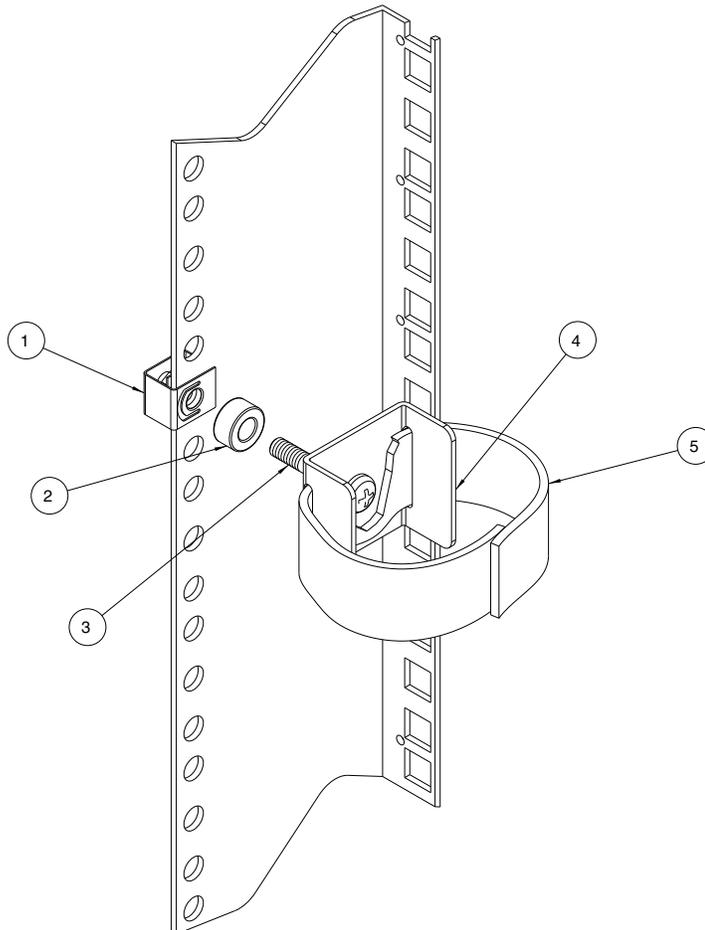



1111 W. 35th Street Chicago, IL 60609
 Tel: (773) 869-1111 • Fax: (773) 869-1329
 FaxBack: (773) 869-1877 • www.tripplite.com


SmartRack[™]
 Network Enclosure

SR13


Required Tools:

Phillips drive screwdriver

Fasteners That Are Required:





#10-32 x 5/8" Phillips
 Pan Head Screw w/Nylon Washer

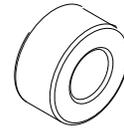


black nylon spacer


| Parts List | | |
|------------|-------------------|------|
| Item | Description | Qty. |
| 1 | 10-32 x 5/8 screw | 6 |
| 2 | Nylon Spacer | 6 |
| 3 | 10-32 Clip-Nut | 6 |
| 4 | Bracket | 6 |
| 5 | Hook & loop strip | 6 |



#10-32 Clip Nut

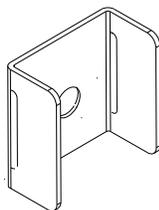

Bracket

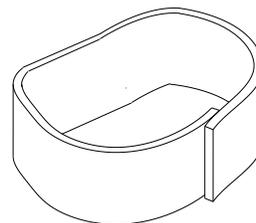

Hook & loop strip