

## **Installation Instructions C-3619**

### **MOTOROLA MW800/MW810 CPU TRUNK MOUNT**


### **1995-2009 FORD CROWN VICTORIA**

#### **DRIVER SIDE TRUNK CPU BRACKET:**

- Remove driver side taillight.
- Position CPU Mount bracket so holes in bracket line up w/ taillight mounting holes.
- Reattach taillight through holes in bracket, then loosely attach nuts.
- Drill ¼” holes through vehicle trunk frame wall on opposite side of bracket. Use front side of bracket as a drill guide.
- Attach ¼-20 x ¾” Hex head bolts and ¼” Serrated nuts.
- Tighten all hardware.
- Mount CPU to Housing bracket using (4) 5mm-.8 x 10mm Hex head machine screws and washers. *Be sure ON/OFF switch on CPU is turned ON at this time.*
- This housing will be mounted to CPU Bracket after CPU cables are attached and wiring is complete.

#### **ATTACH CABLES TO CPU:**

- Data cable from monitor to Display 1.
- Speaker cable box to port labeled AUX and Audio Out
- Ignition sense cable attaches to Speaker cable box.
- Route antenna cable to CPU
- Attach antenna connector to antenna cable
- Leave a service loop and wire tie antenna cable to CPU cover.
- Now that all cable is attached and wiring is complete attach CPU Housing to CPU bracket using pem-studs and ¼” serrated nuts designated for the specific components.
- CPU cables will face Rear Passenger Side taillight when mounted then loop down and around computer, up the inner wheel well, to the back seat wall.
- CPU must be level, both vertically and horizontally, to meet Motorola standards.
- Place CPU cover (CM93625) on mount using 10-32 x ½” Machine screw.

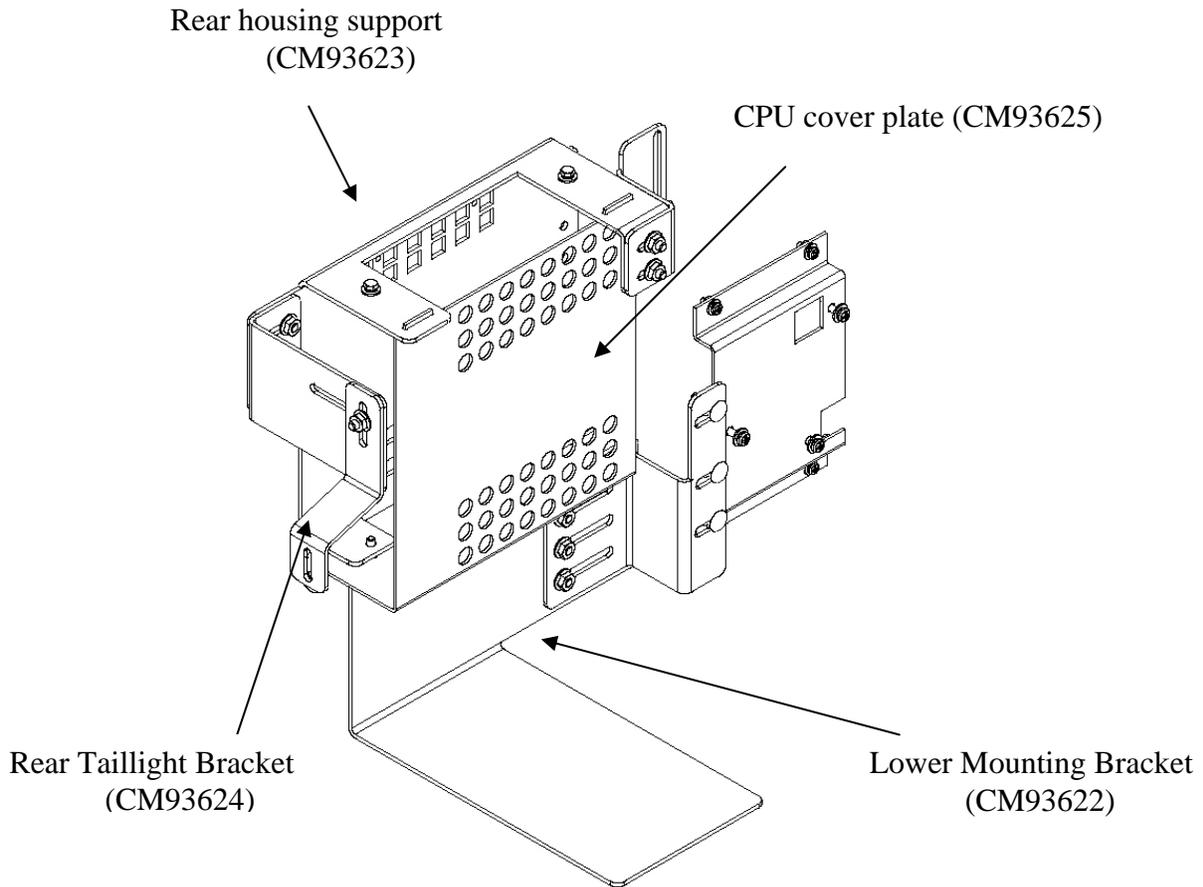

Final Assembly