

ATD

ADVANCED TOOL DESIGN

WORK STAND

ATD-7800




Assembly Instructions for Work Stand

1. Slide the foam padding (#8) onto the bent tube (#9). Slip a leg tube (#6) into the bent tube (#9). Line up the holes in the bent tube and the leg tubes and insert the eyebolt with chain attached (#4) to secure them.

2. Assemble the second bent tube the same as above, but use the hook bolt (#2) to secure the leg tube and the bent tube.

3. Complete the assembly by placing one of the assembled tubes on top of the other. Line up the holes and secure with the M8x80 pivot bolts (#3). Be sure to place a flat washer (#5) outside, between and inside the tubing assemblies. Use M8 nuts (#1) to tighten the pivot bolts (#3). Then push on tube ends (#7).

ATD-7800

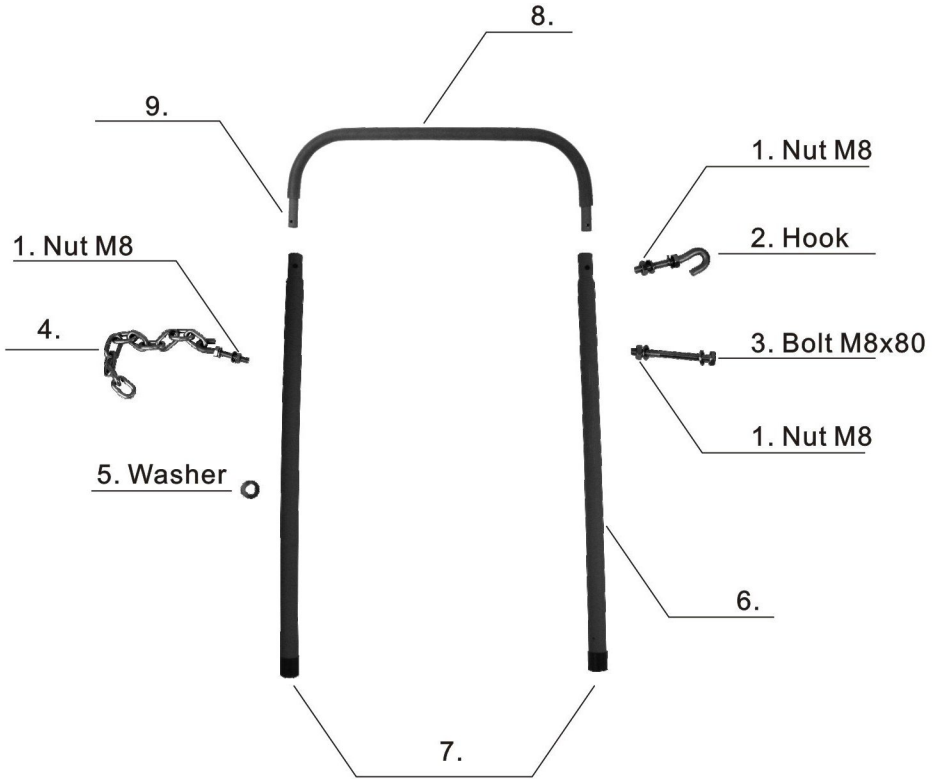

ORDERING PART#	ITEM#	PART DESCRIPTION
PRT7800-1	1,2,3,4,5	HARDWARE KIT
PRT7800-6	6	LEG TUBE
PRT7800-7	7	TUBE END
PRT7800-8	8	FOAM PADDING
PRT7800-9	9	BENT TUBE