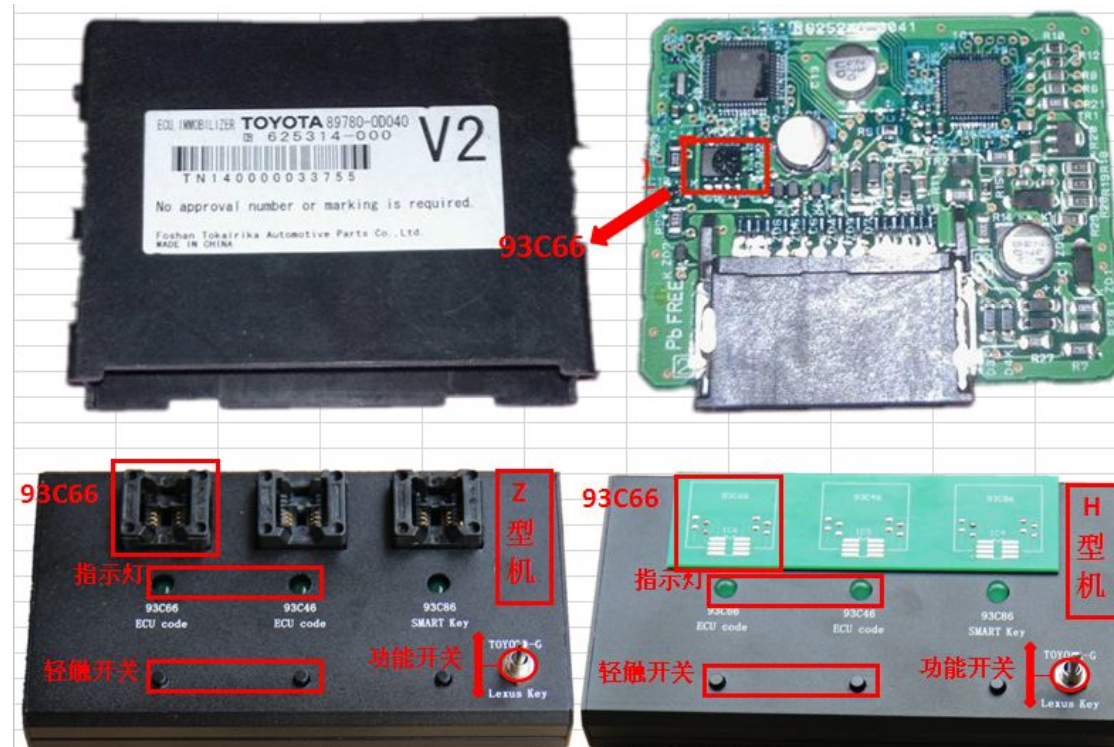# Toyota Lexus Smart Key Programmer User Manual

## A.No need to install driver software for Toyota, Lexus programmer, all Toyota with G key, Lexus Smart Key lost, 1-3 keys can be arbitrarily increased.

1.please use Ordinary programmer to read the data of 93C66/93C46/93C86.and then save the data.

2.Remove the ECU security module, install the 93C66 eeprom IC on corresponding transposons of Toyota models,connect the USB cable to the computer, and tswitch the function key into"Toyota - G", you can see the light of the 93 c66 to go into slow flash state. Please click the touck switch of the 93c66, you will see the light flash at moment. Indicator goes off after a few seconds.the success of the operation.Putiing the 93 c66 EUC back to security module, insert the fist key after you put the anti-theft module into the vehicle.When the anti-theft module indicator light goes out,please remove the key, and then insert the second keys.After Anti-theft module indicator goes out,you can directly start the vehicle, completely without synchronous operation, convenient and quick.



## B.Lexus keys programmed to use:

**Note: Once operation match one IC, regardless of the order, the keys do not leave the sensing area.**

1.Removed the ECU BOX module, install the 93C86 eeprom IC into the corresponding transposons of Toyota models. connectting the USB cable to the computer, and then switch to Lexus Key.you can see the light of the 93 c66 to go into slow flash state.Please click the touck switch of the 93c66, you will see the light flash at moment. Indicator goes off after a few seconds.the success of the operation.Putiing the 93 c66 eeprom IC EUC back to security module, insert the fist key after you put the anti-theft module into the vehicle.When the anti-theft module indicator light goes out,please remove the key, and then insert the second keys.After Anti-theft module indicator goes out,you can directly start the vehicle, completely without synchronous operation, convenient and quick.



Indicate: Z type machine, after simply clean IC pin with alcohol and then put into the transposon, H-type machine choose the corresponding IC solder pads.