

INON

INON Strobe Light Holder·LE (shipped before January 19, 2012) User Manual Appendix

Thank you for purchasing INON product.


This document explains installation method of compatible strobe/LED flashlight on this product shipped before January 19th, 2012 in combination with the Z Adapter MV.

Please take below contents as "installation method" instead of the same section of the original user manual.

「Allen Wrench(AF:5mm)」 (or 「M6 Hex Wrench」) is required. Other INON products like Grip Base D4/Grip BaseM1 or Z Joint, Direct Base III, comes with the wrench as standard accessory

Attaching LED flashlight


Firstly separate "Light Head" and "Battery Box" of your LE series LED flashlight and remove total three O-rings; two yellow O-rings and one black (LE250/LE550-S/LE550-W) or orange (LE240) O-ring from the "Battery Box". Separate the 「Strobe Light Holder Body」 and 2 x 「S Light Holder Plates」. Widen the mouth of the 「S Light Holder Plate」 to attach it on the "Battery Box" then re-install removed three O-rings on the "Battery Box" and attach the "Light Head" on "Battery Box". When removing/attaching "Light Head"/"Battery Box" O-rings, make sure to refer to your LED flashlight user manual to ensure proper and appropriate procedure. Put INON grease in 「screw holes」 on the 「Strobe Light Holder Body」 and joint the 「Strobe Light Holder Body」 and the 「S Light Holder Plates」 together with supplied screws. You can attach either 1 or 2 compatible LED flashlight(s).

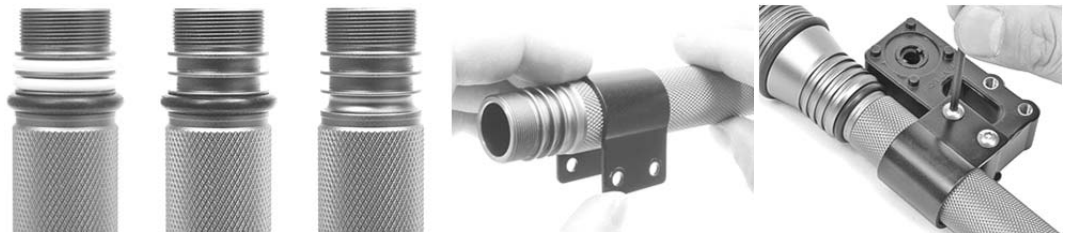

Z Adapter MV Preparation


When using Z Adapter MV, remove pre-installed 「Washer(white)」 from 「M6 thumbscrew」 and replace the screw with supplied 「Strobe Light Holder Cap Screw」 then attach it and the 「Washer(white)」 on the Z Adapter MV.

Then attach two 「Fixing Pin」 (supplied with Z Adapter MV) on the 「Z Adapter MV」. Make sure to use the「Washer(white)」/Two「Fixing Pin」when using the Z Adapter MV to avoid damage on strobe body case.

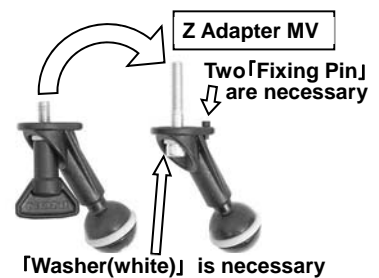


Z Adapter MV Installation

Set the Z Adapter MV with replaced screw on the 「Strobe Light Holder Body」 so that the O-ring on the 「Strobe Light Holder Body」 contacts with the Z Adapter MV. Fix on combined strobe with the Allen Wrench (AF:5mm) using long side of the wrench not to apply excessive torque. Applying excessive torque like using short side of the wrench may damage on the combined strobe.

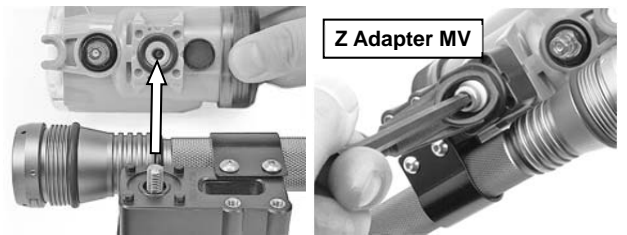

When you attach LED flashlight only, use supplied 「Strobe Light Holder M6 Screw」 to fasten the Z Adapter MV as shown in image right.

Make sure that the protruded part of the 「Strobe Light Holder Body」 seats in groove of the 「Strobe Light Holder M6 Screw」.

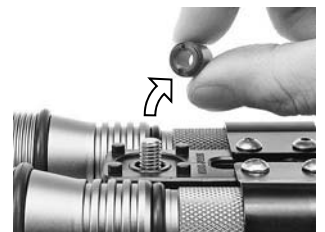

Installing on compatible Arm

Refer to respective user manual to attach on compatible "「YS Adapter」 compatible arm" or "Arm II System"/"Float Arm System".