
M16C/62P Group

Operation of Timer B (pulse period measurement mode)

1. Abstract

In pulse period/pulse width measurement mode, choose functions from those listed in Table 1. Operations of the circled items are described below. Figure 1 shows the operation timing, and Figure 2 shows the set-up procedure. A reference program is an example when using the Timer B0 interrupt based on the setting procedure of Figure 2.

2. Introduction

This application note is applied to the M16C/62P group Microcomputers.

This program can be operated under the condition of M16C family products with the same SFR(Special Function Register) as M16C/62P Group products. Because some functions may be modified of the M16C family products, see the user's manual. When using the functions shown in this application note, evaluate them carefully for an operation

3. Chooosed functions

Table 1. Chooosed functions

Item	Set-up
Count source	<input type="radio"/> Internal count source (f1 / f8 / f32 / fc32)
Measurement mode	<input type="radio"/> Pulse period measurement (interval between measurement pulse falling edge to falling edge)
	<input type="radio"/> Pulse period measurement (interval between measurement pulse rising edge to rising edge)
	<input type="radio"/> Pulse width measurement (interval between measurement pulse falling edge to rising edge, and between rising edge to falling edge)

4. Operation

- (1) Setting the count start flag to "1" causes the counter to start counting the count source.
- (2) If a measurement pulse changes from "H" to "L", the value of the counter goes to "0000h", and measurement is started. In this instance, an indeterminate value is transferred to the reload register. The timer Bi interrupt request does not generate.
- (3) If a measurement pulse changes from "H" to "L" again, the value of the counter is transferred to the reload register, and the timer Bi interrupt request bit goes to "1". Then the value of the counter becomes "0000h", and the measurement is started again.

Note

- The timer Bi interrupt request bit goes to "1" when an effective edge of a measurement pulse is input or timer Bi is overflowed. The factor of interrupt request can be determined by use of the timer Bi overflow flag within the interrupt routine.
- The value of the counter at the beginning of a count is indeterminate. Therefore, the timer Bi overflow flag may go to "1" and timer Bi interrupt request may be generated during the interval between a count start and an effective edge input.
- The timer Bi overflow flag is indeterminate after reset. The timer Bi overflow flag goes to "0" if timer Bi mode register is written to when the count start flag is "1". This flag cannot be set to "1" by software.


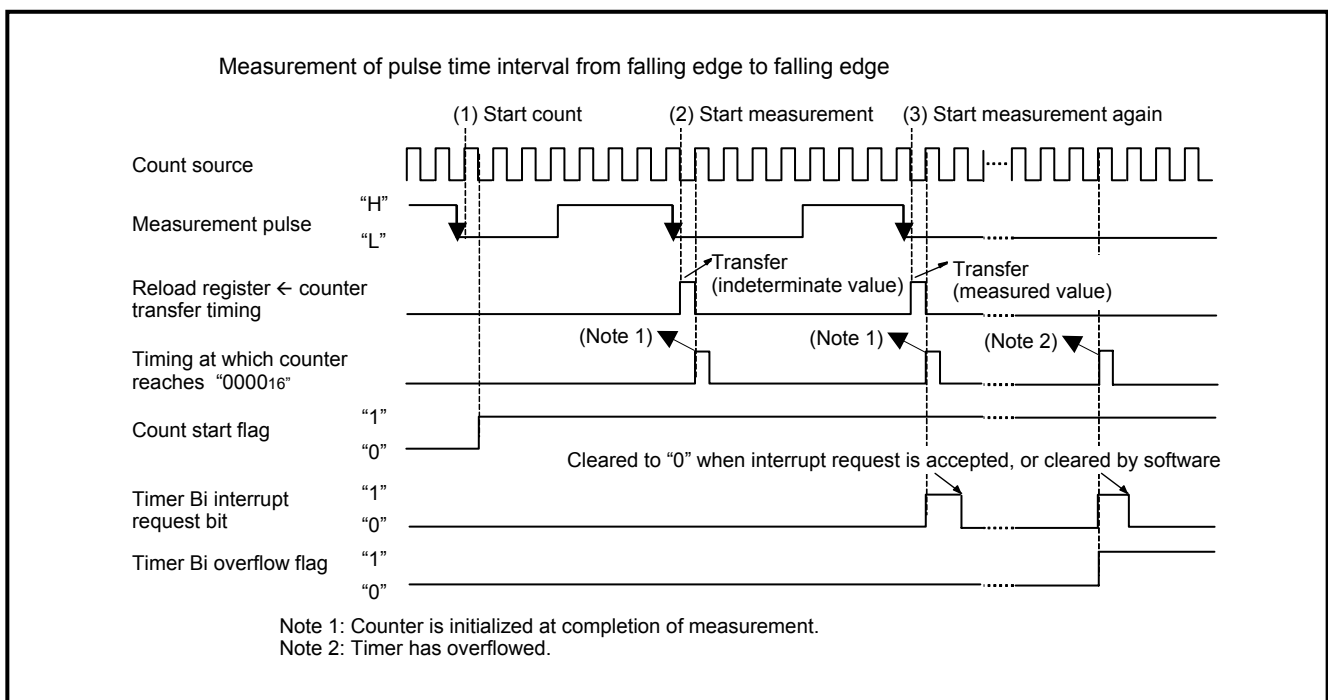



Figure 1. Operation timing of pulse period measurement mode

Selecting pulse period / pulse width measurement mode and functions

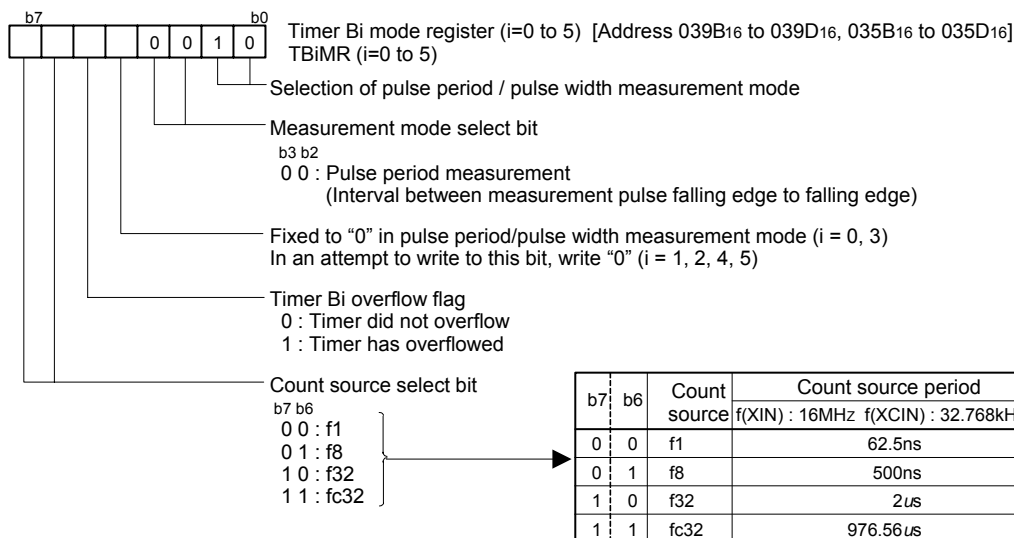


Setting clock prescaler reset flag

(This function is effective when f_{c32} is selected as the count source. Reset the prescaler for generating f_{c32} by dividing the X_{CIN} by 32.)

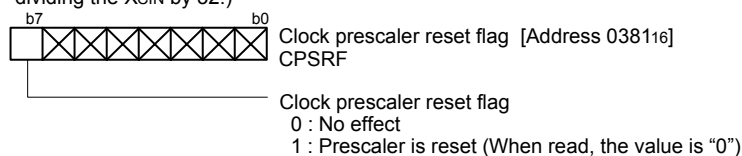

Setting count start flag

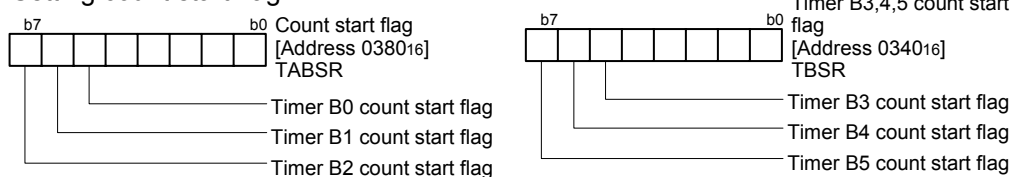

Start count

Clearing overflow flag

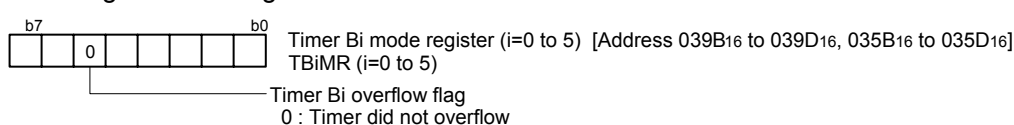


Figure 2. set-up procedure of pulse period measurement mode

5. The example of reference program

```

*****
;
;
; M16C/62P Program Collection
;
; FILE NAME : rjj05b0704_src.a30
; CPU       : M16C/62P Group
; FUNCTION  : Operation of Timer B (pulse period measurement mode)
; HISTORY   : 2004.12.24  Ver 1.00
;             : 2006.1.25  Ver 1.10
;
; Copyright(C)2006, Renesas Technology Corp.
; Copyright(C)2006, Renesas Solutions Corp.
; All rights reserved.
;
*****
;
*****
;
; Include
;
*****
;
; .LIST      off           ;Stops outputting lines to the assembler list file
; .INCLUDE   sfr62p.inc    ;Reads the file that defined SFR
; .LIST      on           ;Starts outputting lines to the assembler list file
;
;
*****
;
; Symbol definition
;
*****
;
RAM_TOP      .equ    00400h    ;Start address of RAM
RAM_END      .equ    013ffh    ;End address of RAM
ROM_TOP      .equ    0f4000h    ;Start address of ROM
VECT_TOP     .equ    0ffe00h    ;Start address of vect_top
FIXED_VECT_TOP .equ    0fffdch  ;Start address of fixed_vect_top
SB_BASE      .equ    00380h    ;Base address of sb
;
;
*****
;
; Program area
;
*****
;
;=====
;
; Start up
;
;=====
;
;
; .section   program,code    ;Declares section name and section type
; .org      ROM_TOP         ;Declares start address
; .sb       SB_BASE         ;
;
;

```

START:

```

ldc          #RAM_END+1,isp ;Sets interrupt stack pointer
ldc          #SB_BASE,sb    ;Sets sb register
;
mov.b        #03h,prcr      ;Removes protect
                                ;Set processor mode registers 0 and 1
mov.w        #0800h,pm0     ;Single-chip mode
                                ;No expansion, No wait
mov.w        #2008h,cm0     ;Xcin-Xcout High
                                ;Xin-Xout High, Main clock is No divison
mov.b        #0,prcr        ;Protects all registers
;
ldintb       #VECT_TOP      ;Sets interrupt table register

mov.w        #0,r0          ;Clears WORKRAM area
mov.w        #((RAM_END+1)-RAM_TOP)/2,r3
mov.w        #RAM_TOP,a1
sstr.w
;
=====
; Main program
=====
mov.b        #01000010b,tb0mr ;Timer B0 mode register
;          ||||| ++-----;Pulse period/pulsewidth measurement mode
;          |||| ++-----;Pulse period measurement (measurement between
;          ||||           ;a falling adge ;and the next falling adge of measured
;          ||||           ;pulse)
;          ||| +-----;Set to“0”in pulse period and pulse widge measurement
;          |||           ;mode
;          || +-----;Timer has not overflowed
;          ++-----;Count source(f8)
mov.b        #00000011b,tb0ic ;Interrupt control register
;          |+++-----;Interrupt priority level select bit
;          |           ;(011:Level 3, interrupt disabled)
;          +-----;Interrupt request bit (0:interrupt not requested)
mov.b        #00100000b,tabsr ;Count start flag
;          +-----;Starts counting

nop          ;To set the MR3 bit to “0” (no overflow), set TBiMR
nop          ;register with setting the TBiS bit to “1” and counting the
nop          ;next count source after setting the MR3 bit to “1”
nop          ;(overflow). Newly added in the Ver 1.10
nop          ;
nop          ;
nop          ;
nop          ;

```

```

        fset          i          ;Set interrupt enable flag
        mov.b         #01000010b,tb0mr ;Timer B0 mode register
;
;          +-----;Timer did not overflow
MAIN:

        jmp          MAIN

;=====
;      Interrupt program
;=====
TB0_INT:
;
;      ;/ TB0 interrupt routine /
;
        reit

;
;=====
;      Dummy interrupt processing program
;=====
DUMMY:
        reit

;
;=====
;      Setting of variable vector table
;=====
;
        .section vect,romdata
        .org          VECT_TOP + (4 * 4)
;
        .lword        DUMMY      ;INT3 interrupt vector
        .lword        DUMMY      ;TB5 interrupt vector
        .lword        DUMMY      ;TB4 interrupt vector
        .lword        DUMMY      ;UART1 bus collision detection interrupt vector
        .lword        DUMMY      ;TB3 interrupt vector
        .lword        DUMMY      ;UART0 bus collision detection interrupt vector
        .lword        DUMMY      ;SI/04/INT5 interrupt vector
        .lword        DUMMY      ;SI/03/INT4 interrupt vector
        .lword        DUMMY      ;UART2 bus collision detection interrupt vector
        .lword        DUMMY      ;DMA0 interrupt vector
        .lword        DUMMY      ;DMA1 interrupt vector
        .lword        DUMMY      ;KEY interrupt vector
        .lword        DUMMY      ;A-D interrupt vector
        .lword        DUMMY      ;UART2 transmit/NACK interrupt vector
        .lword        DUMMY      ;UART2 receive/ACK interrupt vector
        .lword        DUMMY      ;UART0 transmit/NACK interrupt vector
        .lword        DUMMY      ;UART0 receive/ACK interrupt vector
        .lword        DUMMY      ;UART1 transmit/NACK interrupt vector

```

```

.word      DUMMY      ;UART1 receive/ACK interrupt vector
.word      DUMMY      ;TA0 interrupt vector
.word      DUMMY      ;TA1 interrupt vector
.word      DUMMY      ;TA2 interrupt vector
.word      DUMMY      ;TA3 interrupt vector
.word      DUMMY      ;TA4 interrupt vector
.word      TB0_INT     ;TB0 interrupt vector
.word      DUMMY      ;TB1 interrupt vector
.word      DUMMY      ;TB2 interrupt vector
.word      DUMMY      ;INT0 interrupt vector
.word      DUMMY      ;INT1 interrupt vector
.word      DUMMY      ;INT2 interrupt vector
;
;
;*****
;
;      Setting of fixed vector
;*****
;
;
      .section f_vect,romdata
      .org      FIXED_VECT_TOP
;
;
      .word      DUMMY      ;Undefined instruction interrupt vector
      .word      DUMMY      ;Overflow (INTO instruction) interrupt vector
      .word      DUMMY      ;BRK instruction interrupt vector
      .word      DUMMY      ;Address match interrupt vector
      .word      DUMMY      ;Single-step interrupt vector
      .word      DUMMY      ;Watchdog timer interrupt vector
                                ;Oscillation stop and Re-oscillation detection interrupt
                                ;vector
                                ;Voltage down detection interrupt vector
      .word      DUMMY      ;DBC interrupt vector
      .word      DUMMY      ;NMI interrupt vector
      .word      START     ;Sets start vector
;
;
      .end

```

6. Referense

Hardware manual

M16C/62P Group Hardware Manual

(Use the most recent version of the document on the Renesas Technology Web site.)

Technical news/Technical update

(Use the most recent version of the document on the Renesas Technology Web site.)

Web-site and contact for support

Renesas Technology Web site
<http://www.renesas.com/en/m16c>

Inquiries
<http://www.renesas.com/inquiry>
csc@renesas.com

Revision

Rev.	Issue data	Revised	
		Page	Point
1.00	2004.12	-	First edition issued
1.10	2006.01	5	Reference program modified

Keep safety first in your circuit designs!

1. Renesas Technology Corporation puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corporation product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation or a third party.
2. Renesas Technology Corporation assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor for the latest product information before purchasing a product listed herein.
The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.
Please also pay attention to information published by Renesas Technology Corporation by various means, including the Renesas Technology Corporation Semiconductor home page (<http://www.renesas.com>).
4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
5. Renesas Technology Corporation semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
6. The prior written approval of Renesas Technology Corporation is necessary to reprint or reproduce in whole or in part these materials.
7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.
Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
8. Please contact Renesas Technology Corporation for further details on these materials or the products contained therein.