


MP070-7PS-2 & MP070-7PS-1 | 7" Modular Windshield Suction Pedestal




MP070-7PS-2

MP070-7PS-1 with a single T-tab is also available with the same set of instructions listed below.

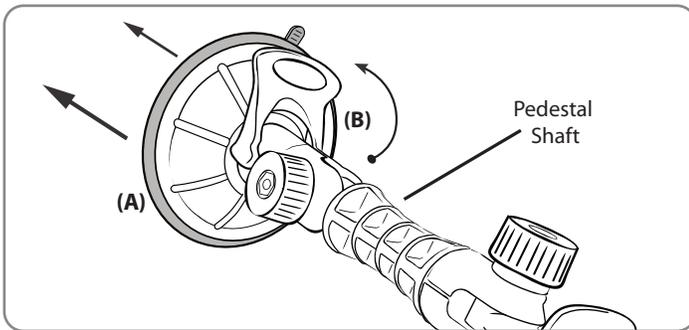

Windshield Installation


Step 1. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.

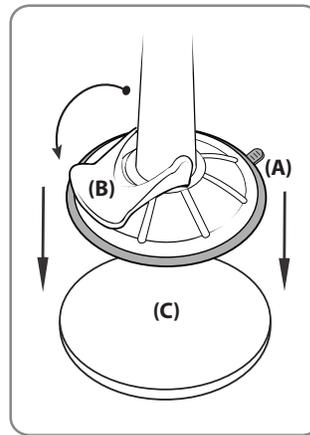

Dash Installation (Optional, when disc is included)


Step 1. Locate a safe flat surface on the dash or console to mount the pedestal. Clean the dash with the alcohol pad provided. Dry the surface before applying the adhesive disc (C).

Step 2. Push the pedestal suction cup (A) firmly to the disc (C). Flip the lever (B) down to secure the suction cup.

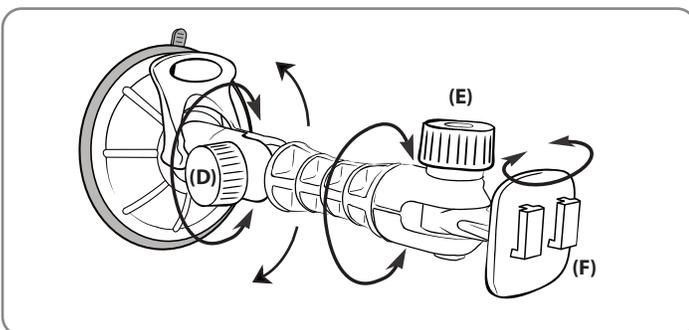

Pedestal Adjustment

Step 1. Adjust the vertical angle of the pedestal shaft by 180° and the swivel rotation by 360° by loosening the adjustment knob (D). Adjust the lateral angle of the dual T-head (F) by 180° and the rotation by 360° by loosening the adjustment knob (E).

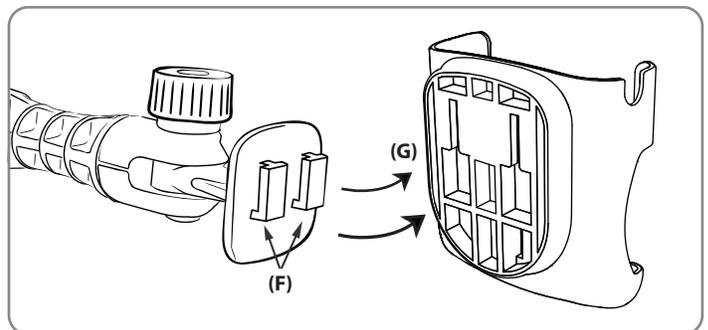

Device Cradle Installation

Step 1. Attach the device cradle to the pedestal by inserting the dual T-heads (F) of the pedestal into the T-slots of the cradle (G). (cradles are sold separately and vary depending on the device you are using)



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:
(USA) (800) 841-0884
(INT'L) (626) 254-9005
Mon-Fri. 9am-5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.