

Baby Memory Prints[®]

Memories to keep for a lifetime


USER MANUAL FOR BABY MEMORY PRINTS 3D FRAME

DIRECTIONS You may also need the following items.

- 1) Bowl for 'Clone Powder'
- 2) Glue


IMPORTANT : Before using the print material wash and dry your hands in order to keep it clean.
After opening be sure to put unused print material in airtight bag or container.

STEP 1

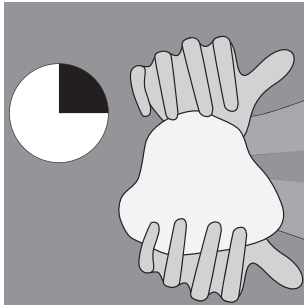


After taking the print material out of the package knead it in your hands for 1 minute in order to have a clean and smooth consistency.

STEP 2

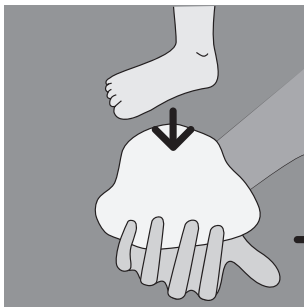


Place the print material in your hand and press the baby's foot or hand firmly into the print material then gently remove it. Make sure to have a good and deep impression enough for 3D printing.

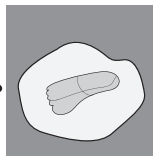

If you do not capture the print you want, repeat the directions from the STEP 1.


STEP 3

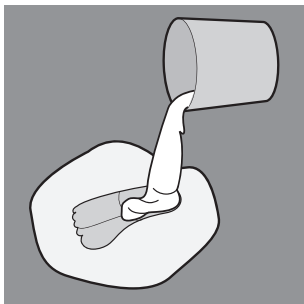

Open the 'Clone Powder' bag and pour some powder (less than 1/2) in a bowl. Add some water (2/3 powder for 1/3 water) in the bowl and mix it to have the fluidity as pudding. Poor the fluid 'Clone Powder' in the print material where the baby's hand or foot is taken and let it dry for 30 min.

Note: Make sure after mixing there is no air bubbles or hard rock in the powder.


STEP 4

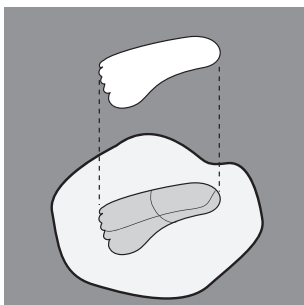

After drying gently take out the print material and clean the surface of the 3D print.

(To create another 3D print, you can use the print material again. Repeat the directions from STEP1.)

NOTE : It is your preference to paint the 3D print with the paint and brush coming out from the set.

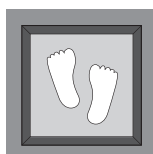

THE 3D PRINT IS READY TO GLUE IN THE BABY MEMORY PRINTS 3D FRAME .