


SILTDOCTOR.COM

SILT DOCTOR®

THE INTELLIGENT CURE

Road Sweeper Washout User Manual

Assemble the concrete wash out as per drawing taking care that hoses are either on a constant incline or decline to avoid blockages.

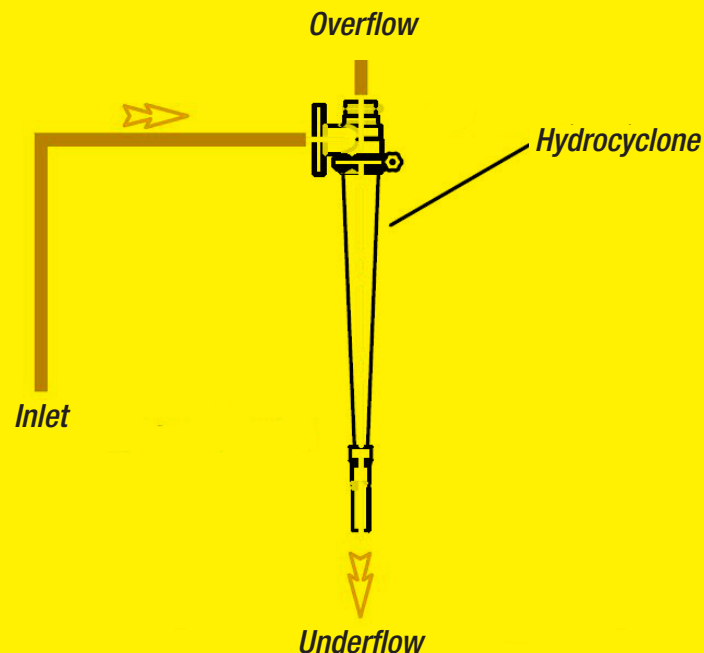

Make sure the pumps is suspended above the settled fines and make sure that the float switch can freely drop, so that the suction of the pump can never see the surface of the water. This then acts as an interceptor for any floating oil. If you do see signs of floating oil, then place an oil boom to adsorb any floating oil.

You can now washout in the marked chamber.



Road Sweeper Washout User Manual

TROUBLESHOOTING

- *When the pump is running make a visual inspection of the Hydrocyclone and make sure the underflow is spraying.*
- *When the 1st Skip is more than half full of solids, then drain as much water as possible with the two inch pump via the Hydrocyclone.*
- *Then remove the pump and Hydrocyclone and empty the solids out to the chosen disposal route.*
- *Reassemble the pump and Hydrocyclone as per schematics.*
- *Treated water may be used for washing the chamber of the lorry.*

SILTDOCTOR.COM

SILT DOCTOR®

THE INTELLIGENT CURE

Road Sweeper Washout Schematic

