



80x120mm

1. Name and Parts

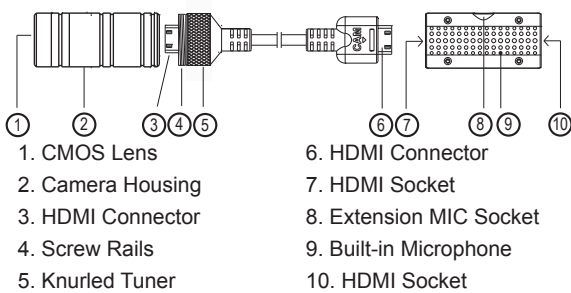


2. Package Content

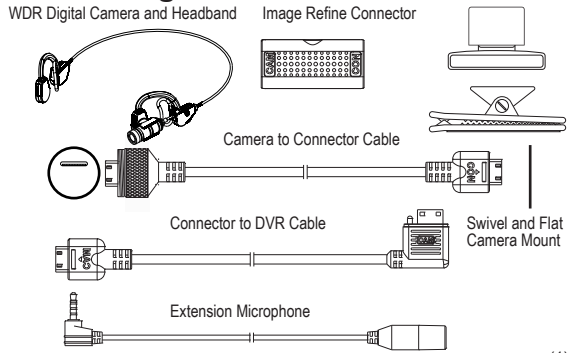

(1)

3. Camera Setup Illustration

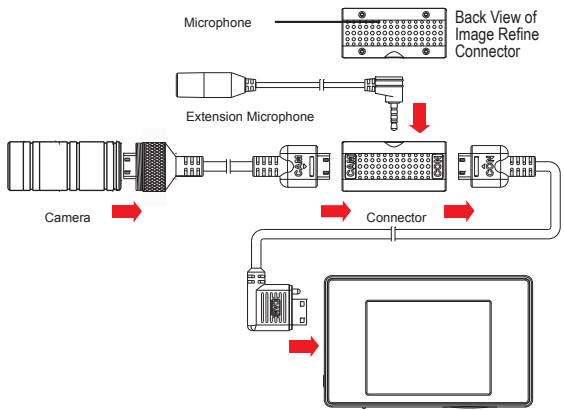


1. Connect camera to connector using required cable.
2. Plug-in extension microphone to proper socket of the connector.
3. Connect connector to portable DVR using required cable.

Note:
It is required to calibrate camera and configure video signal system after connection of all parts is established.

(2)

4. Camera and HDMI Cable

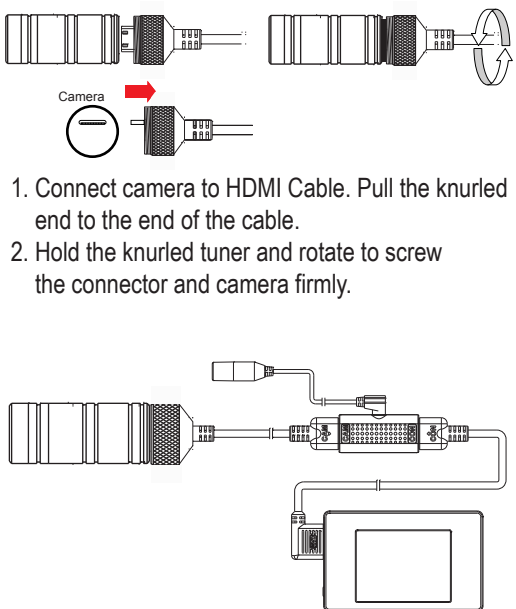


1. Connect camera to HDMI Cable. Pull the knurled end to the end of the cable.
2. Hold the knurled tuner and rotate to screw the connector and camera firmly.

(3)

80x120mm

5. Setting Video Signal System

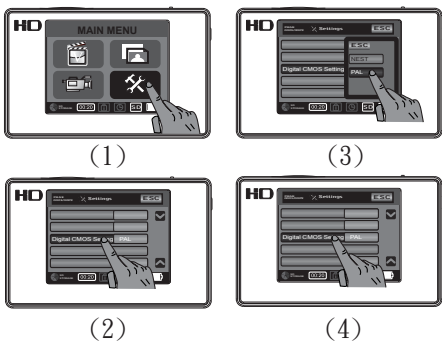


1. Press selection "Setting" from Main Menu.
2. Drag the Setting Menu down to select "Digital CMOS Setting".
3. Make the selection either PAL or NTSC based on user country's video signal system.
4. After selection is made, press "Digital CMOS Setting" again to complete the setting.

(4)


6. Camera Calibration

1. Press selection "Setting" from Main Menu.
2. Drag the Setting Menu down to select "Digital CMOS Calibration".
3. After selection is made, the screen will show "Calibrating" on the screen.
4. After calibration is completed, the screen will show "Cable Disconnect".
5. User unplug connected cable to complete calibration.

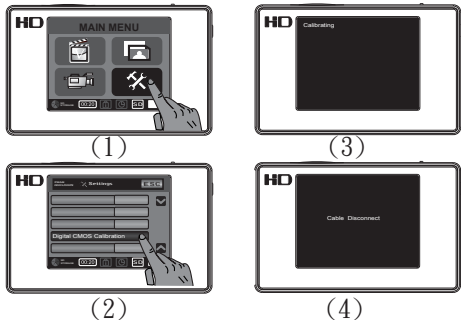

(5)

CMD-ER13
HD CMOS WDR Digital Camera
Quick Guide

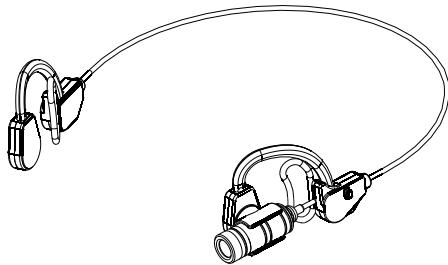

Law Enforcement Products Manufacturer
LawMate

V1.0