



Installation Instructions for Setting up a package for Freeview HD reception.

Step 1: Assemble the Aerial and Mount and point it at the transmitter you wish to use

You will need to make sure that the orientation of the aerial is correct for the transmitter you are using:

For Horizontal Polarization (e.g. Waiatarua Transmitter)

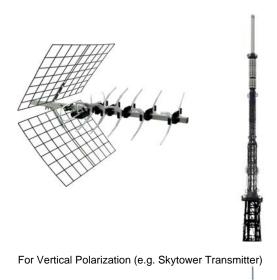

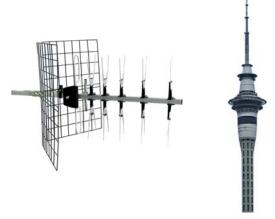

Site	Polarity
Waiatarua Auckland	Horizontal
Pinehill Auckland	Horizontal
Remuera Auckland	Vertical
Sky Tower Auckland	Vertical
Auckland Infill	Vertical
Te Aroha Waikato/Tauranga	Horizontal
Hamilton Infill	Vertical
Kopukairua Tauranga	Vertical
Mt Erin Hawkes Bay	Vertical
Napier Infill	Vertical
Wharite Wellington	Vertical
Kaukau Wellington	Horizontal
Baxters Knob Wellington	Horizontal
Fitzherbert Wellington	Vertical
Wellington Infill	Vertical
Ngarara Kapiti	Vertical
Sugarloaf Christchurch	Horizontal
Mt Cargill Dunedin	Horizontal

Step 2: Connect the Set top box to the TV as described in the User Manual and select the appropriate AV input on your TV, also connect it to the aerial with the RG6 cable supplied, Turn the Setop box on and use the Automatic Setup to tune in the Freeview HD channels for you.