



Wunderlich

Anbauhilfe

User Manual

Part No. : 8160394

Artikel: Faltenbalgkit (F650 GS & Dakar)

Article: Stainless Steel Faring Bolts Kit

Thank you for buying our product.

Please fit the Fork Gaiters using the detailed instructions and the drawings below. For removing the front wheel please use the original workshop manual instructions.

- 1) Place Motorcycle on centre stand and fix rear wheel to ground.
 - 2) Remove the brake caliper (Pic. A), the brake sensor (Pic. B), and the brake hose clip (Pic C)
 - 3) Remove the front wheel by loosening the clamp and removing the spindle. Now the fork brace can be removed as well.
 - 4) Remove the fork tube by loosening the fork tube clamps. Slide the fork gaiters over the fork tube and fit fork tube back into position. Remember to fit the tubes back at the correct height. Repeat for other fork tube as well. (Pic. G & H).
 - 5) Now the new fork brace can be loosely fitted (Pic I) with the bolts only handtightened. Remember to place the long bolt on the rear left hand side so the hose clip can be attached there as well.
 - 6) Replace the front wheel and tighten spindle and clamp.
 - 7) Tighten the fork brace bolts, and secure the gaiters with the cable ties supplied (Pic J).
- Replace all other parts in reverse order




Used Parts: 3 M8*20 Bolts, 1 M 8*30, 4 Nuts M 8, 4 Cable ties.

Attention:

If our "Rain Protect" front mudguard is used please use the 4 longer bolts supplied M8*30.

General note: Our fittings instructions are written to the best of our knowledge but specifications or details may change. If you have difficulties or have doubts with fitting this part please seek advice from your BMW dealer or workshop of your choice.

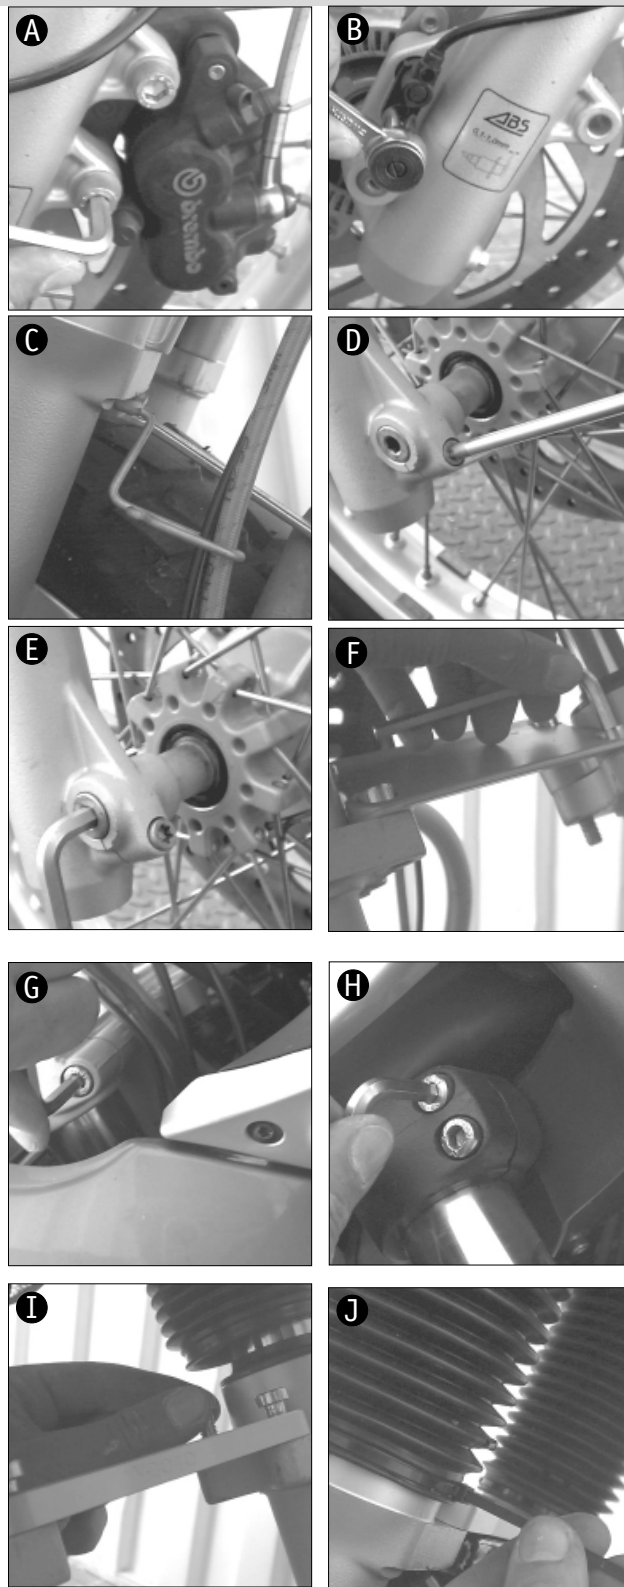

Please note that in some cases due to vehicle related tolerances beyond our control some products might need adjusting to fit. We cannot warranty parts fitting in those circumstances.