



Georgian Bay 36/41"

Installation Instructions

Models:

**36DVBGKCB, 36DVBGTKB
41DVBGKCB, 41DVBGTKB**

DVBGKCB – Classic Black Cast Iron

DVBGTKB – Ebony Black Enameled Cast Iron

The Georgian Bay is designed for use on fireplace models 36XDV (36"), DV360 (41") and DVRT41 (41").

NOTE: Cast iron parts can be heavy, an assistant would be advisable for this installation.

CAUTION: Porcelain enamel is fragile. The finish can be easily damaged if castings are not handled carefully. Always place castings on a protective surface, such as a towel, blanket or carpet.

Check Contents of Shipping Carton

Compare contents of carton in Figure 1 with actual parts received. If any parts are missing, or damaged, contact your local dealer before starting installation.

Contents: (Fig. 1) Top Dome Section, Main Body Section, knob extensions (2), Top Heat Deflector, Screws (4)

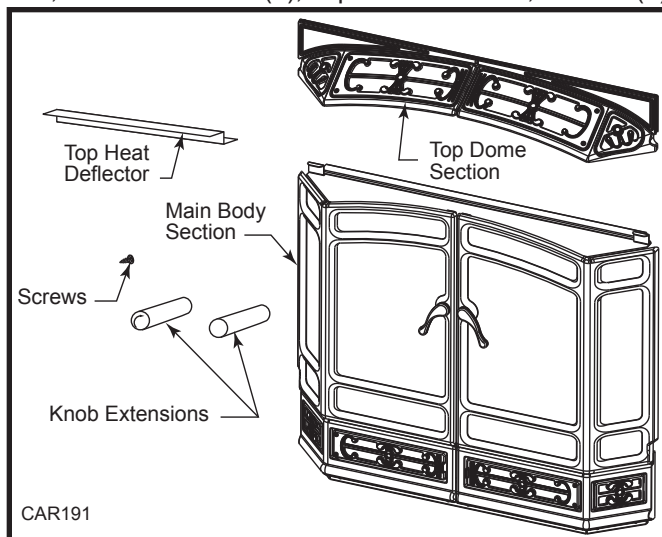


Fig. 1 Carton contents.

Tools required: Phillips screwdriver, measuring tape

NOTE: It is our recommendation that you install the Georgian Trim, if purchased, before you install the Georgian Bay. This will help reduce damage to both cast units.

Fireplace Unit Preparation

Before you start your bay installation the fireplace unit needs to have some items removed. (Fig. 2)

1. Remove the top louvre by gently sliding the louvre upward and away from the unit.
2. Remove the sheet metal top flange located on the bottom side of the top louvre opening. You will need to remove between 2-5 Phillips screws that are holding the flange in place.
3. Remove the bottom louvre by removing 4 Phillips screws or by pulling the hair pins that are holding the hinge pins in place on the unit.

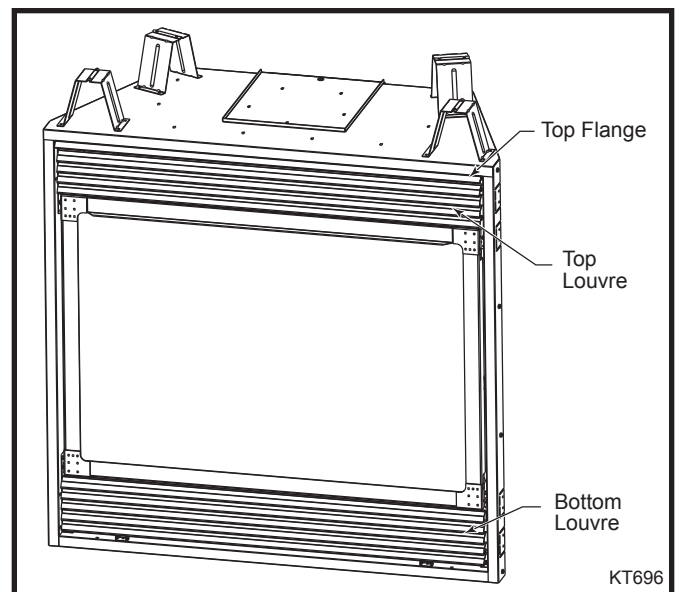


Fig. 2 Remove the fireplace top and bottom louvre and top flange.

4. Install the top heat deflector shield by aligning the holes of the shield with the four (4) inside holes on the fireplace top flange. Use the four (4) screws supplied to attach the shield to the unit. (Fig. 3)

This completes the fireplace unit preparation.

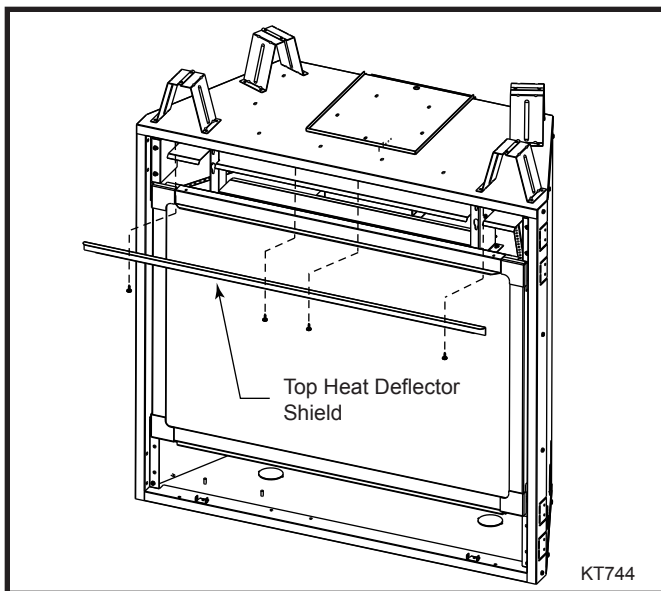


Fig. 3 Install top heat deflector shield.

Installation Instructions

1. Place the main body section of the bay onto the fireplace unit so the flanged edge of the bay rests on top of the glass frame assembly. (Fig 4)

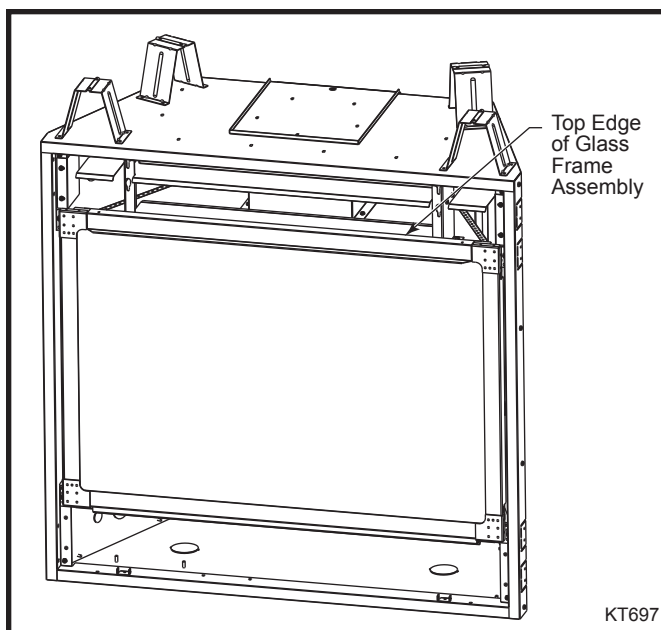


Fig. 4 Place main body section of bay on top edge of glass frame assembly.

2. Measure the underside of the bay to the finished floor. (Fig. 5) This measurement will be used when adjusting the bottom flange.
3. Carefully remove the main body section and place face down on a protective surface.

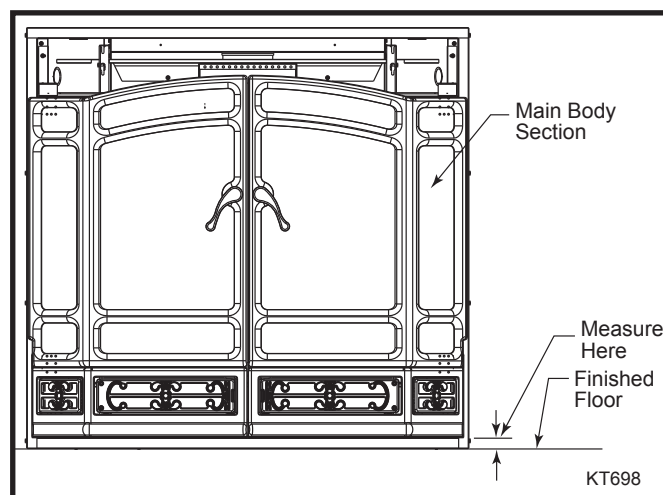


Fig. 5 Measure from underside of bay to finished floor.

4. Loosen the 8 screws on the bottom flange, but do not remove, and lower the bottom flange down by the amount you measured minus $1/16"$. Retighten screws. (Fig. 6)

Example: $1" - 1/16" = 15/16"$

($15/16"$ is the amount to move flange down)

5. Place the main body section back onto fireplace unit. Make sure the unit is resting on the top surface of the glass frame and not the finished floor. If it is resting on the finished floor then repeat Steps 3 and 4 so that you have a $1/16"$ gap between the bottom flange and the finished floor.

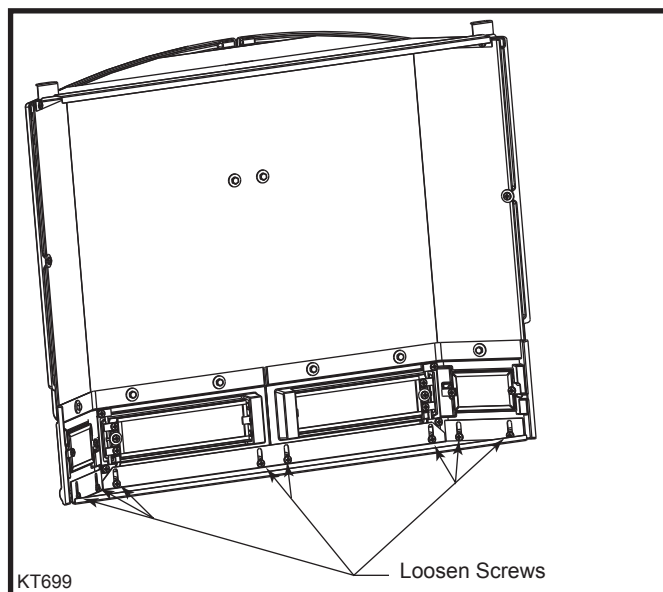


Fig. 6 Loosen screws to adjust bottom flange.

6. Place the top dome section onto the main body section by lifting the top dome section over the top edge of the main body section. You will notice on the back side of the top dome section two slotted grooves in the sheet metal. These grooves align with the flanged brackets on top of the main body section. Gently slide the top dome section into place and allow the flanged brackets to slip into the grooves on the back side of the top dome section. (Fig. 7)
7. Install the two extension knobs supplied onto the gas valve appropriate knobs.
8. Installation is complete.


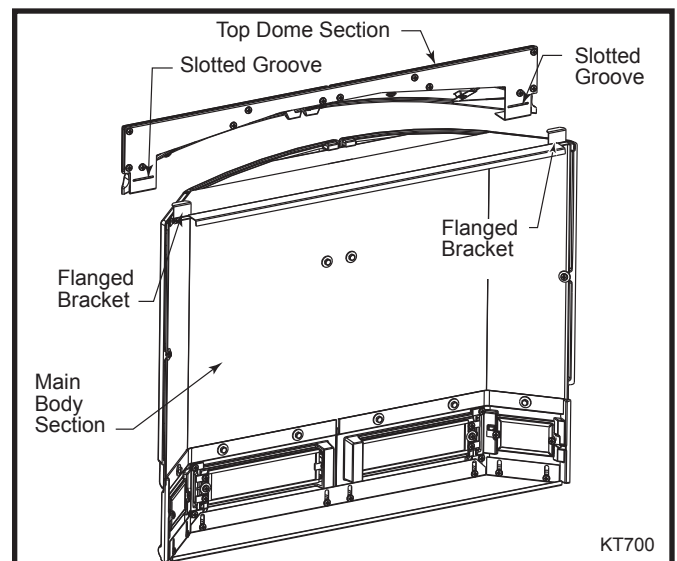


Fig. 7 Lift and slide top dome section over top edge of main body section and onto brackets.

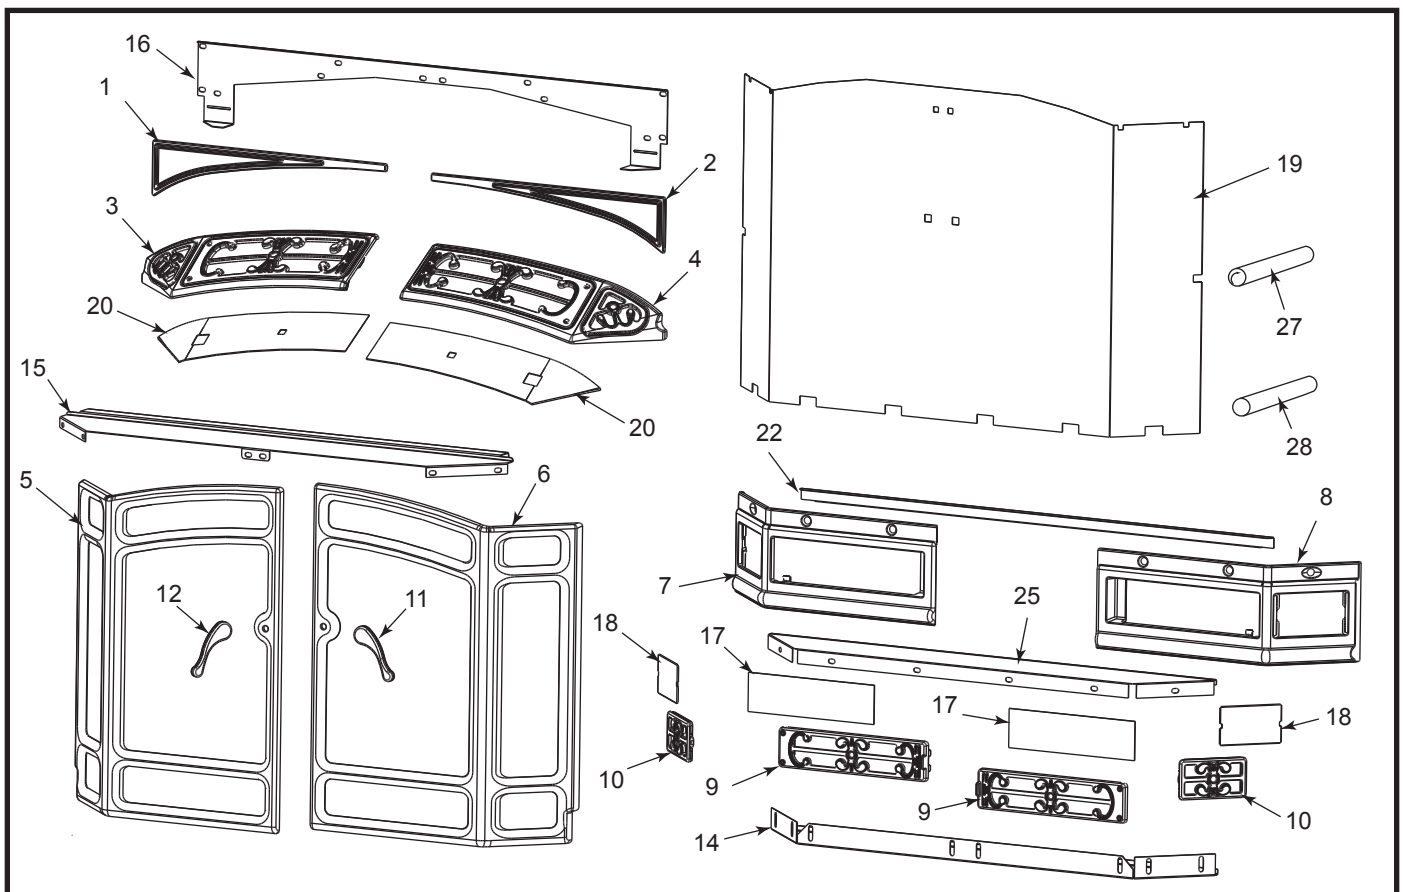

CFM Corporation reserves the right to make changes in design, materials, specifications, prices and discontinue colors and products at any time, without notice.

Georgian Bay 36"/41"

Georgian Bay 36"/41" (continued)

Ref.	Description	36DVBGTKCB Classic Black	41DVBGTKCB Classic Black	36DVBGTKB Ebony	41DVBGTKB Ebony
1.	Eye brow, Left	30003718	30003764	30003780	30003792
2.	Eye brow, Right	30003719	30003765	30003781	30003793
3.	Frame, Left Dome	30003720	30003766	30003782	30003794
4.	Frame, Right Dome	30003721	30003767	30003783	30003795
5.	Frame, Left Upper	30003726	30003768	30003784	30003796
6.	Frame, Right Upper	30003727	30003769	30003785	30003797
7.	Frame, Left Upper	30003728	30003770	30003786	30003798
8.	Frame, Right Lower	30003729	30003771	30003787	30003799
9.	Door	30003730	30003730	30003788	30003788
10.	Panel, Side	30003731	30003731	30003789	30003789
11.	Handle, Right	30003755	30003755	30003790	30003790
12.	Handle, Left	30003756	30003756	30003791	30003791
13.	Door Pin	30003722	30003722	30003722	30003722
14.	Bottom Flange, Bay Frm.	30003732	30003772	30003732	30003772
15.	Flange, Top Assembly	30003757	30003773	30003757	30003773
16.	Dome Flange, Bay	30003744	30003775	30003744	30003775
17.	Screen, Door Assembly	30003734	30003734	30003734	30003734
18.	Screen, Side Panel	30003739	30003739	30003739	30003739
19.	Screen, Center Section	30003740	30003776	30003740	30003776
20.	Screen, Dome	30003741	30003777	30003741	30003777
21.	Bracket, Screen	30003763	30003763	30003763	30003763
22.	Deflector	30003911	30003918	30003911	30003918
23.	Magnet	1408818	1408818	1408818	1408818
24.	Bracket, Front	30000305	30000305	30000305	30000305
25.	Valve Shield	30004025	30004024	30004025	30004024
26.	Damper Tabs	1601488	1601488	1601488	1601488
27.	Knob, Extension, Hi/Lo	55162	55162	55162	55162
28.	Knob, Extension, On/Off	55163	55163	55163	55163

CFM Corporation

2695 Meadowvale Blvd. • Mississauga, Ontario, Canada L5N 8A3
800-668-5323 • www.cfmcorp.com