



INSTRUCTIONS

-J03747

REV. 2005-05-16

CHROME FRONT WHEEL SPACER KIT

GENERAL

Kit Number

41410-06

Models

This kit fits all 2006 and later FXDWG (Dyna Wide Glide®) model motorcycles.

Additional Parts Required

WARNING

The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333a)

NOTE

This instruction sheet references Service Manual information. A Service Manual for your model motorcycle is required for this installation and is available from a Harley-Davidson Dealer.

Kit Contents

There are no Service Parts available with this kit.

INSTALLATION

See Figure 1. These chrome front wheel spacers are direct replacements for the original equipment (OE) front wheel spacers. Installation procedures for this kit are the same as the OE installation procedures in the Service Manual.

1. Refer to FRONT WHEEL; REMOVAL in the Service Manual for front wheel removal instructions.

2. Remove the spacers from each side of the front wheel.

NOTE

*Spacers are not identical. Install the thicker spacer on the **left** side of the wheel.*

3. See FRONT WHEEL; ASSEMBLY for your wheel type (cast or laced), using the spacers included in this kit in place of the OE spacers.
4. Re-install the front wheel according to the INSTALLATION instructions in the Service Manual.

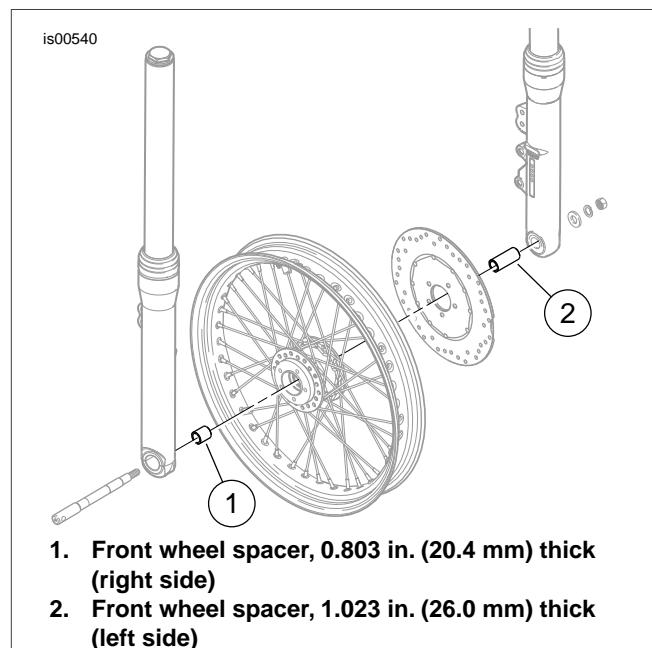


Figure 1. Front Wheel Spacers