



INSTALLATION

QUICK RELEASE ATTACHMENT POINT KIT 1637

FITS: '94-'08 ELECTRA GLIDE STANDARDS, STREET GLIDES, ROAD GLIDES AND ROAD KINGS

PARTS INCLUDED

- 1 Left Backrest Mounting Bracket
- 1 Right Backrest Mounting Bracket
- 2 Rear Sleeve (15/32" OD x 3/8" ID x 0.695")
- 4 Rear Wear Sleeve
- 4 End Washer (13/16" OD x 3/8" ID x 0.115")
- 2 3/8" Flat Washer
- 2 3/8-16 Nylon Locknut
- 2 3/8-16 x 2" Button Socket Cap Screw (BSCS)
- 6 Spacer (3/4" OD x 3/8" ID x 1/8")
- 2 Front Sleeve (15/32" OD x 5/16" ID x 0.31")
- 4 Front Wear Sleeve
- 2 5/16" Flat Washer
- 2 5/16-18 x 1" Button Socket Cap Screw (BSCS)
- 2 Sissy Bar Support Bracket
- 4 5/16-18 Flange Locknut
- 4 5/16-18 x 1" Hex Head Cap Screw (HHCS)
- 2 1/4-20 x 7/8" Hex Head Cap Screw (HHCS)
- 2 Spacer (0.7" OD x 1/4" ID x 1/8")
- 2 1/4-20 x 1-1/2" Hex Head Cap Screw (HHCS)
- 2 Spacer (0.7" OD x 1/4" ID x 9/16")
- 1 6" Cable Tie
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Socket Set and Ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

PROCEDURE – BACKREST MOUNTING BRACKETS

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the left and right saddlebags and set them aside. Remove the rear saddlebag mounts (be sure to note the saddlebag bracket mounting position); the saddlebag mounts will be re-used, as well as the stock $\frac{1}{4}$ " flat washer.

STEP 3 Remove the fender support covers to access the air fitting bracket. Remove the air fittings from the bracket and discard the air fitting bracket. Remove the stock top two bolts from the fender strut.

STEP 4 Determine the Left and Right Backrest Mounting Brackets (PIC 1). Using two 5/16-18 HHCS and two $\frac{3}{4}$ " OD x $\frac{3}{8}$ " ID x $\frac{1}{8}$ " Spacers, mount the Backrest Mounting Brackets to the fender struts (PIC 2). The spacers go between the Backrest Mounting Bracket and the fender strut and are fastened with the 5/16-18 HHCS (PIC 3).

NOTE If the bike is equipped with an H-D Rear Docking Point bracket (PN 53804-06) the Spacers from Step 3 are not used and the Docking Point Bracket is used in its place.

NOTE On '94-'96 models, one 5/16-18 Flange Locknut will need to be added behind the fender struts (rear hole). This will allow the Backrest Mounting Brackets to be mounted using the supplied hardware.


STEP 5 Mount the rear saddlebag bracket that was removed in Step 2 using the $\frac{1}{4}$ -20 x $\frac{7}{8}$ " HHCS, the stock $\frac{1}{4}$ " washer and $\frac{1}{4}$ " ID x $\frac{1}{8}$ " Spacer (PIC 4). Place the Spacer between the Backrest Mounting Bracket and fender strut. Thread the HHCS with the stock washer through the saddlebag bracket, Backrest Mounting Bracket and spacer in to the fender strut.

NOTE If your bike is a FLHRC/I or FLHRS/I, follow Step 5 but add the $\frac{1}{4}$ " x $\frac{9}{16}$ " Spacer between the rear saddlebag mounting bracket and Backrest Mounting Bracket. You will also need to use the $\frac{1}{4}$ -20 x $1\frac{1}{2}$ " HHCS.

STEP 6 Repeat all steps for opposite side.


REAR MOUNTING POINT

STEP 1 Assemble the Rear Sleeve ($\frac{3}{8}$ " ID x 0.695") and two nylon Rear Wear Sleeves. Press the nylon Rear Wear Sleeves on to the steel Rear Sleeve as show in PIC 5.

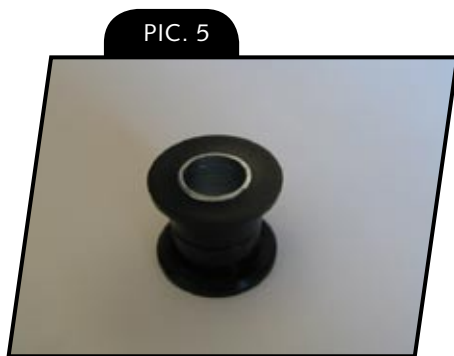


Kuryakyn

PIC. 1

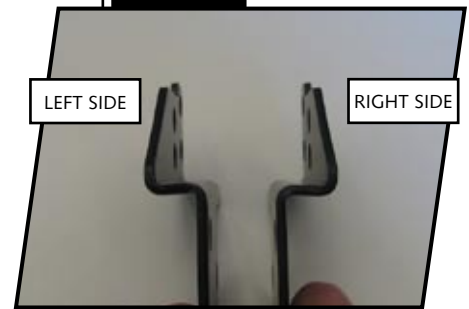


PIC. 2

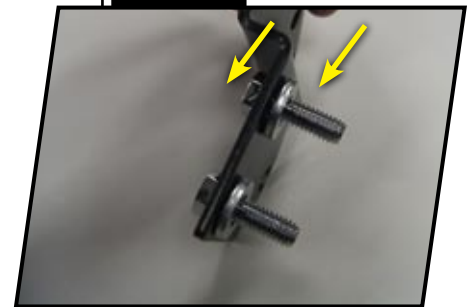

PIC. 3



PIC. 4

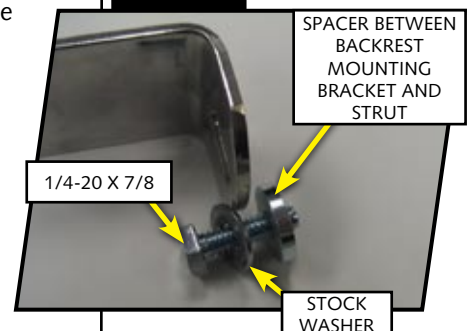

PAGE
2

-cont.-

ATTACHMENT POINT KIT

INSTALLATION

STEP 2 Using the 3/8-16 x 2" BSCS, install (PIC 6):

- One 3/8" Flat Washer,
- One End Washer,
- Wear Sleeve Assembly from Step 2,
- Another End Washer,
- One 3/8" ID x 1/8" Spacer.

STEP 3 Locate the Sissy Bar Support Bracket. Install the assembly from Step 3 through the front hole (PIC 7). The Sissy Bar Support Bracket will slide over the bolt from the backside. Secure with a 3/8-16 Nylon Locknut from the kit.

NOTE For '94-'96 models, the Rear Mounting Point assembly will be installed in the rear holes of the Backrest Mounting Bracket.

STEP 4 Swing the Sissy Bar Support Bracket up (PIC 7) to the hole in the strut cover. Remove the existing bolt in that location.

STEP 5 Repeat all step for opposite side

FRONT MOUNTING POINT

STEP 1 Install the steel Front Sleeve in to the nylon Front Wear Sleeve. (PIC 8)

STEP 2 The 5/16-18 x 1" BSCS and 5/16" Flat Washer are installed through the Sleeve assembly from Step 1, the Sissy Bar Support Bracket and in to the fender strut. (PIC 9)

NOTE On '94-'96 models, a 5/16-18 Flange Locknut will need to be used in the front mount location to secure the Sissy Bar Support Bracket

STEP 3 Torque all fasteners to recommended specifications in PIC 9.

NOTE It may be helpful to re-install the saddlebags and adjust the saddlebag mounting brackets before tightening to the torque specification.

STEP 4 Route air hoses away from pinch points or heat. Fasten the air fittings to the lower hole in the Backrest Mounting Bracket (PIC 9).

NOTE For '97-'01 models, route one of the airlines to the other side of the bike and install in the bottom hole of the Backrest Mounting Bracket.

ATTENTION! Secure all hoses away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any component that fails due to pinched, crimped, broken, abraded or melted hoses.

STEP 5 Repeat all steps for opposite side.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!

