

ENGINE GUARD MOUNTED LED BULLET FOG LAMP KITS

GENERAL

Kit Numbers

68000090, 68000092

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

This kit is designed for use only with 1-1/4 in (31.8 mm) diameter engine guards that are vertical when viewed from the front with the motorcycle upright.

Harley-Davidson recommends inboard mounting of engine guard fog lamps

This kit is not compatible with soft fairing lowers.

NOTE

May not conform to local lighting regulations. Check local laws.

Installation Requirements

Separate purchase of an LED Bullet Fog Lamp Mounting Bracket Kit and a Fog Lamp Wire Harness Kit are required for proper installation of this kit.

Electrical Contact Lube (H-D Part No. 99861-02) or equivalent is required after battery cable disconnection.

These items are available from a Harley-Davidson dealer.

The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333a)

NOTE

This instruction sheet refers to service manual information. A service manual for this year/model motorcycle is required for this installation. One is available from a Harley-Davidson dealer.

ELECTRICAL OVERLOAD

NOTICE

It is possible to overload your vehicle's charging system by adding too many electrical accessories. If the combined electrical accessories operating at any one time consume more electrical current than the vehicle's charging system can produce, the electrical consumption can discharge the battery and cause damage to the vehicle's electrical system. See an authorized Harley-Davidson dealer for advice about the amount of current consumed by additional electrical accessories or for necessary wiring changes. (00211c)

When installing any electrical accessory, be certain not to exceed the maximum amperage rating of the fuse or circuit breaker protecting the affected circuit being modified. Exceeding the maximum amperage can lead to electrical failures, which could result in death or serious injury. (00310a)

This kit requires up to **700 mA-->** more current from the electrical system.

Kit Contents

See Figure 1 and Table 1.

PREPARATION

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

NOTE

- For 2007- later vehicles WITH security siren: With security fob present, turn ignition switch ON. See the service manual. After system is disarmed, turn ignition switch OFF. IMMEDIATELY remove the main fuse.
- For 2006- earlier vehicles WITH security siren: Disarm the siren with the key fob or security code. See the service manual to remove the main fuse.
- For vehicles WITHOUT security siren: See the service manual. Remove the main fuse.

INSTALLATION

- 1. Install the fog lamps to the vehicle per the instructions in the LED Bullet Fog Lamp Mounting Kit.
- 2. Complete the fog lamp installation per the instructions in the Fog Lamp Wire Harness Kit.

COMPLETION

NOTE

To prevent possible damage to the sound system, verify that the ignition is OFF **before** installing the main fuse or attaching the negative battery cable.

1. **Models with main fuse:** See the service manual. Install the main fuse.

Models with main circuit breaker:

- a. ALL models except XL: See the service manual. Attach the negative battery cable. Apply a light coat of petroleum jelly or corrosion retardant material to battery terminals.
- b. **XL models only:** See the service manual. Connect the negative battery cable at the engine crankcase.

After installing seat, pull upward on seat to be sure it is locked in position. While riding, a loose seat can shift causing loss of control, which could result in death or serious injury. (00070b)

2. ALL models: See the service manual. Install seat.

SERVICE PARTS

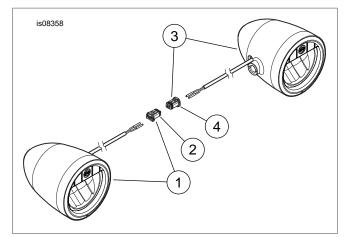


Figure 1. Service Parts, Engine Guard Mounted LED Bullet Fog Lamp Kits

Table 1. Service Parts

Item	Description (Quantity)	Part Number
For Kit 68000090 (Chrome):		
1	Fog lamp, right, chrome (includes Item 2)	68000089
2	 Socket housing, two-way 	72906-11
3	Fog lamp, left, chrome (includes Item 4)	68000156
4	 Socket housing, two-way 	72906-11
For Kit 68000092 (Black):		
1	Fog lamp, right, black (includes Item 2)	68000091
2	 Socket housing, two-way 	72906-11
3	Fog lamp, left, black (includes Item 4)	68000157
4	Socket housing, two-way	72906-11