


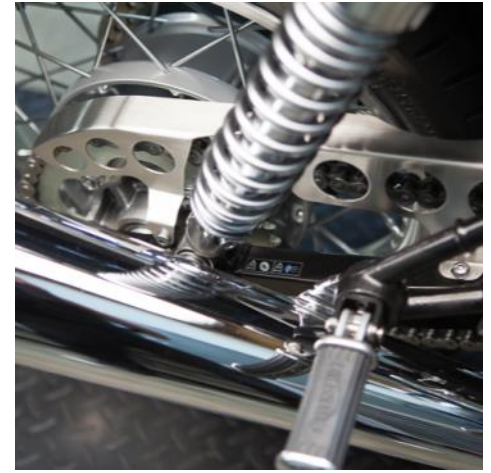

MODERN CLASSIC CHAIN GUARD

BC707-002



Kit Includes:

1. Chain Guard

Fits The Following Motorcycles:

- Triumph Bonneville
- Triumph Thruxton
- Triumph Scrambler

Tools Required:

- T30 Torx Bit
- Recommended: Blue Loctite

This is a high performance product and intended for race use applications! USE AT OWN RISK!

WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and local/municipal laws and regulations.

WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.

Other Items We Think You May Like



Master Cylinder Cover



Counter Sprocket Cover



Clutch Arm Finisher



Clutch Cable Bracket



MODERN CLASSIC CHAIN GUARD

BC707-002



Step 1:

Unscrew front bolt with a T30 Torx bit



Step 2:

Unscrew rear T30 Torx bolt and lift stock chain guard up and back to remove

NOTE: The front screw is the longer of the two.



Step 3:

Recommended: Apply small amount of blue loctite or equivalent medium thread locker to bolts.

Hold new chain guard in place and screw in rear bolt




Step 4:

Screw in front bolt



MODERN CLASSIC CHAIN GUARD

BC707-002

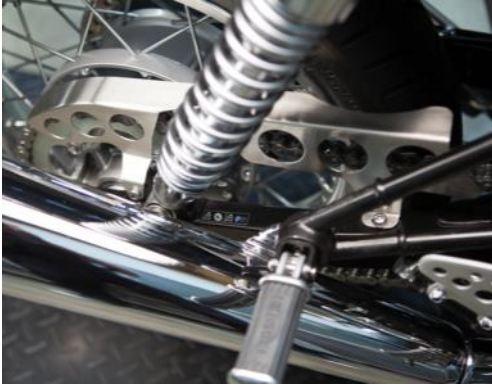

Step 5:

Ensure both bolts are secure and the chain guard is firmly fastened

End:

Congratulations! You have successfully completed the installation of your new British Customs product.