

VeilSide

Design

FD3S RX-7 Fortune model



Body kit installation manual.

Thank you, for your purchase of VeilSide aero products. Before proceeding to the installation steps, please read this manual carefully, and continue only with thorough understanding of the steps. Please report any problems encountered, such as short orders and defective items within 7 days of receipt. Please report any damages from freight, to the assigned carrier.

Please perform pre-fitment checks prior to performing actual work on items. No item with work performed on it will be accepted for returns or exchanges, no exceptions. To compensate for vehicle manufacturing tolerance specs, adjust the purchased items as necessary for proper fitment.

VeilSide aero products are manufactured from high grade FRP material, polyurethane, and/or carbon fiber. These are not high impact resistant type of material, and will crack, break, shatter under extreme force. VeilSide is not liable and issues no warranty for damages due from negligent driving or handling of the items.


VeilSide aero products are designed on vehicles sold in Japan under Japanese DOT specification. On certain vehicles, complete bolt-on operation may not be possible. Modification or removal of the steel bumper reinforcement beam may be necessary; under such cases the vehicle will no longer meet DOT approval ratings, and shall be an off-road only vehicle. VeilSide assumes no responsibility from damages occurring from removal or partial removal of the bumper reinforcement beams. Please refer to the local laws of your area of residence regarding such issues.

Please follow generally accepted safety standards in performing the installation of the product, and perform final safety checks before operating vehicle.

Depending on the size wheels, wheel offset, and tire size selected for use with this body kit, additional modification may be required. All key cylinders will be inaccessible after the kit installation is started. If you have not done so already, please purchase remote door opener devices and install them. During the kit installation process, the battery will be disconnected. It is recommended to temporary extend your battery connector harness for easier accessibility.

1. Removal of factory parts.

Please remove the front and rear bumpers, front and rear fenders, side skirts, door mirrors, pillar covers, front tow hook, exhaust system, head lights, and tail lights, all according to the directions contained in the factory service manual. Please retain the factory bolt and clips from the pillar covers, as these will be reused for the installation process.


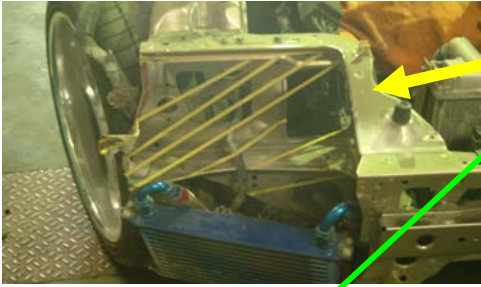


* Please remove the oil cooler mounting bracket and relocate it to a lower position.





* The factory rear fenders will be cut to the shape of the VeilSide Fortune model fenders. Please mark and make the cut, welding the inner and outer fenders together.



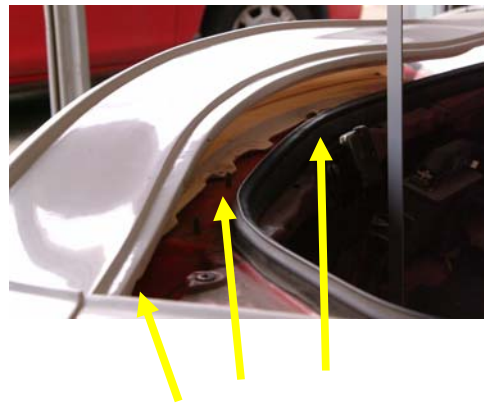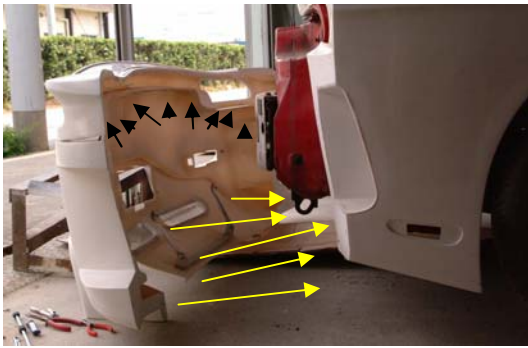

The rear bumper will be attached to the factory upper frame and attached to the chassis.

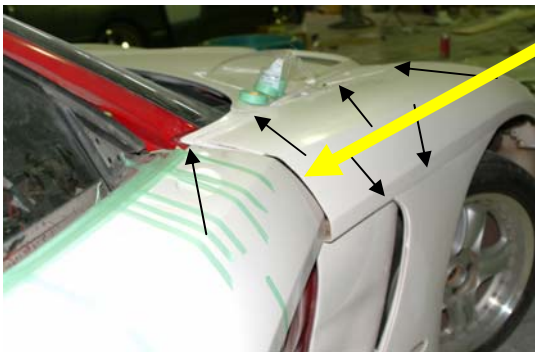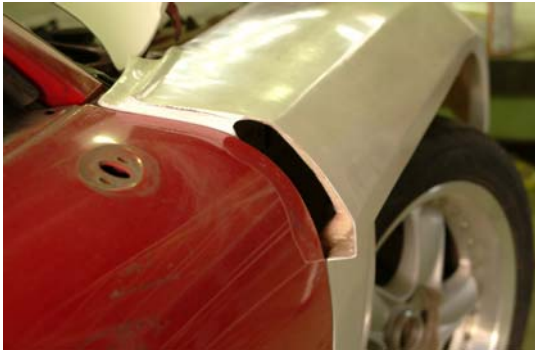

Please proceed to install the front fender, rear fender, and side skirts. Please align all parts together, using spacers where needed so all space between parts are even. Please affix the door panels using epoxy material.




The front bumper will be attached to the factory upper frame and attached to the chassis.



Please adjust spacing on overall average, using shims.



The fuel door will be attached with the supplied steel hinge. The plastic pop-lock mechanism should be installed with self-tapping screws or epoxy.

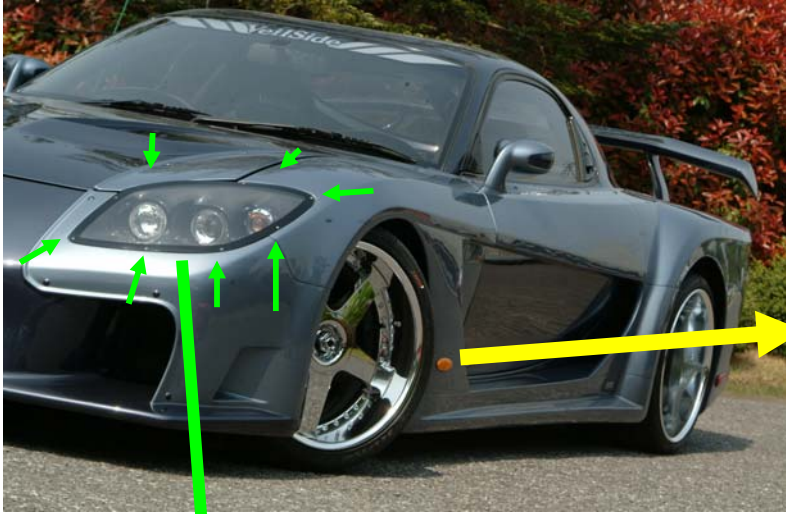


The door mirrors will be attached to the factory location. Please use 3 bolts from the interior. The bolt holes may need to be enlarged.

The side markers will be installed and wired. The factory wires may need to be lengthened, in which case please take care to route the wires safely.

For the installation of the head light kit, please finalize the entire kit prior to proceeding. Using the hole location from the lexan glass, drill into the head light housing and body kit.

For the installation of the tail light assembly, please install bolt from the interior side. Refer to the factory service manual for proper installation, and please make operation check prior to driving.

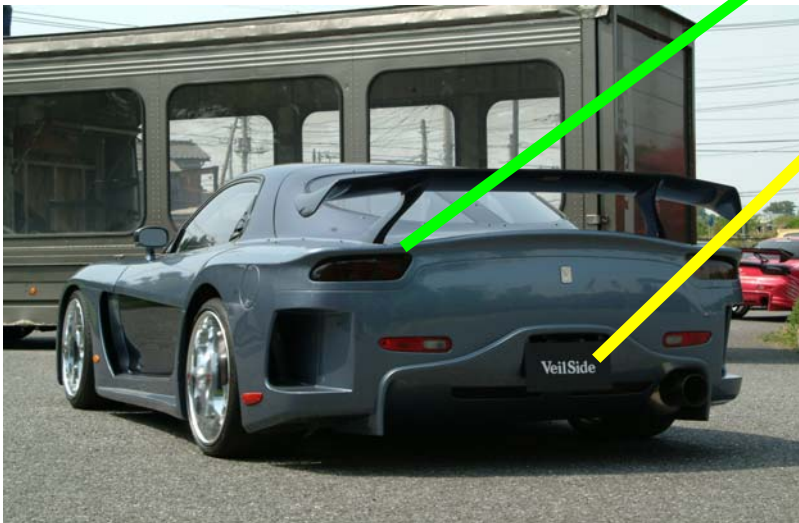

The number plate may not be installed on the factory brackets. Please install about 6cm higher than the factory location. Fabrication of brackets may be necessary.

Although we strive to provide 100% defect free products, there is always the chance that a defective unit may escapes our quality control. Please perform all pre-fitment checks prior to making actual modification to the product. In the case of trouble, please contact VeilSide directly for the fastest resolution.