

**INSTALL INSTRUCTIONS C-PED SERIES**  
**(C-PED1612-W2 or C-PED1612-W4)**  
**SILVER BILLET™ TELESCOPING COMPUTER MOUNTS**  
**C-PED1612-W2 Silver Billet Telescoping Computer Pedestal with 2” Offset Bracket**  
**C-PED1612-W4 Silver Billet Telescoping Computer Pedestal with 4” Offset Bracket**

**TOOLS REQUIRED:**

Ratcheting wrench  
Socket set  
Powered drill


Drill bit set  
Screwdriver set  
Standard Allen key set

**HARDWARE:**

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
1	White Teflon washer	CM93081
7	1/4-20 x 3/4” Phillips machine screw	GSM33124
3	1/4-20 Thin Nylock nut	GSM30016-1
7	1/4” Flat washer	GSM31005
4	1/4” Lock washer	GSM31026
4	5/16” x 1” Hex head lag bolt	GSM34203

**Always!**

- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

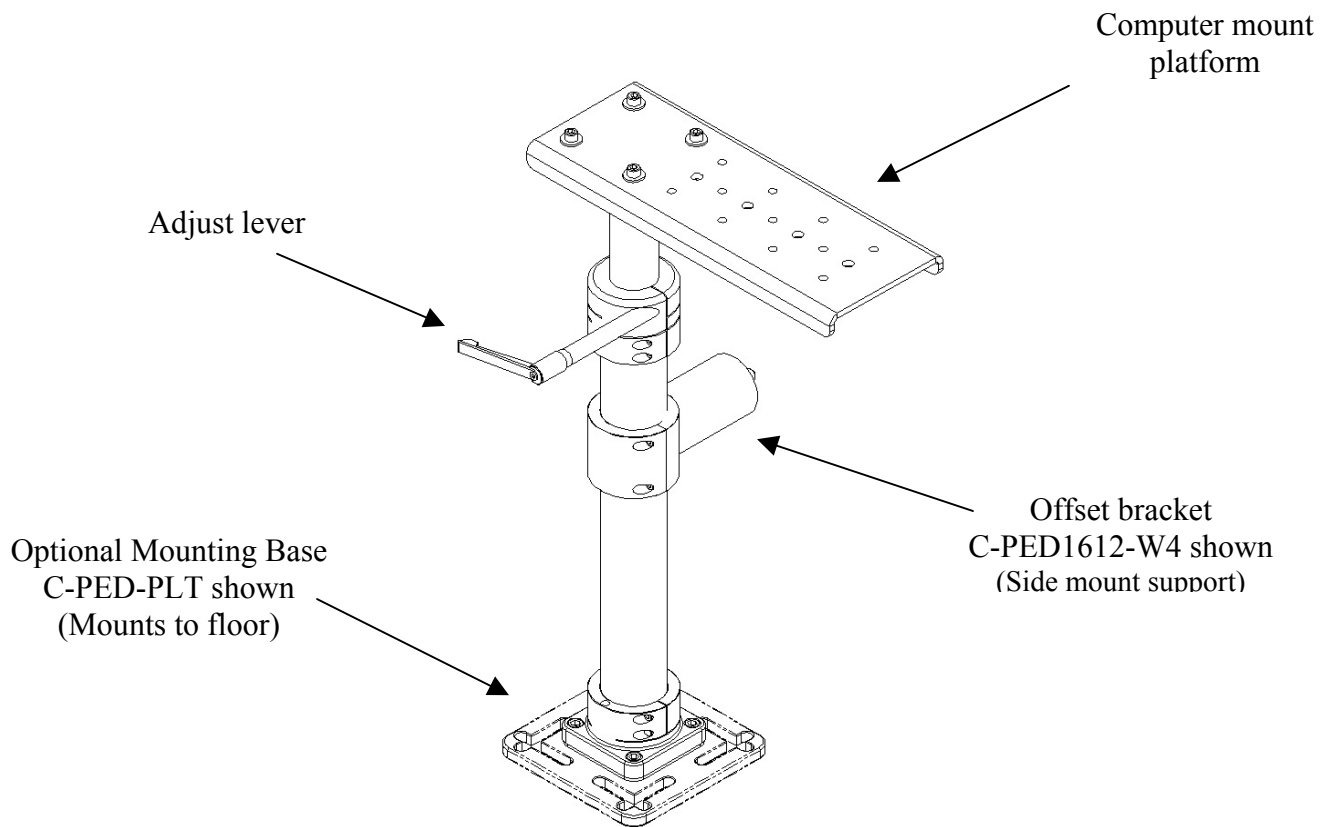

## 1. SUBASSEMBLY:

- Determine location in vehicle where you can obtain a side and floor mount.
- Be sure that determined locations would accept mounting bolts and screws without interference to other controls, wires, etc.

## 2. INSTALLATION

- The C-PED Series mounts to a horizontal flat surface as well as a vertical flat surface. Determine location to obtain both.
- With offset bracket positioned against flat surface, (i.e., console, divider wall, etc.), mark and drill 5/16" hole at location of bolt on offset bracket.
- Bolt offset bracket to "flat surface" using a fender washer and 5/16" nut.
- Bolt C-PED1612 to floor of vehicle using 1/4" x 1" -1 1/2" hex head lag bolts, depending on particular vehicle application.
- Mount optional laptop mounts (C-3090 series), monitor mounts (C-3522), keyboard mounts (C-3329) or tilt swivels (C-3075 series) (optional - order separately) using 1/4-20 x 3/4" bolts, washers, and nylock nuts.