



Aft-Deck Shower and Deck Washdown systems

4131, 4133 and 4132 Installation Instructions

Attwood marine hardware, navigational lighting, bilge pumps, and other marine accessories are specified more than any other brand by America's best-known boat manufacturers as original equipment. Look to Attwood for quality replacement parts and marine accessories.

SAVE THESE INSTRUCTIONS

Form Number 69337 Rev. B

03-10

FEATURES


The Attwood Aft-Deck Shower system (4131, 4133) is designed for use on pleasure boats to rinse off swimmers and pets and to spray away salt and sand. The shower systems hot and cold faucets blend water for ideal temperature. It can also be used for cold water only. The Deck Washdown System (4132) was designed with a high pressure sprayer for use on sport fishing boats to wash down the rear decks. The sprayer has a valve to regulate or shut off the water.

Both systems feature a high-styled hinged cover to store and protect the sprayhead and controls. They are both made of high-impact, engineering grade polycarbonate plastic.

REQUIRED FOR INSTALLATION

- Cordless drill, 1/8" (3mm) and 1/2" (13mm) drill bits
- Six #8 x 3/4" stainless steel countersunk or panhead screws (Determine which screw type by matching feature on housing) (Figure 1)
- Keyhole or sabre saw
- Screwdriver
- Channel lock pliers or wrench set
- Teflon tape (optional)
- Brass or plastic standard 1/2" pipe end cap (optional)

Figure 1

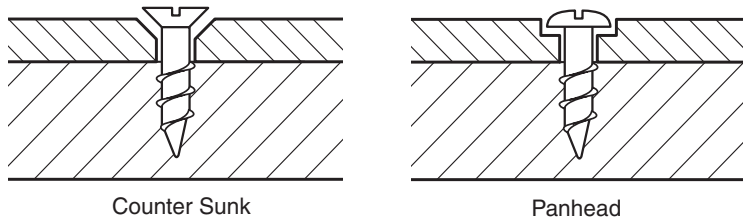

WARNING:

Always remove the boat from the water before using 120V AC power tools.

LOCATION

Select a location that will allow the cover to swing freely and allow room for hose storage and plumbing.

AFT-DECK SHOWER (4131, 4133) INSTALLATION

1. Using the template on the reverse side of these instructions, drill a 1/2" hole at all four corners of the template. Cut an 8-1/2" x 4" opening.
2. Remove cover and sprayhead. Place box in opening and mark all screw hole locations. Remove box and drill pilot holes.
3. Attach water lines to appropriate hot/cold controls. Wrap hose connections with teflon tape or use pipe joint compound to prevent leaks. Note: If only cold water connection is made, it is important that the remaining hot water connection be sealed by installing a standard 1/2" pipe end cap to prevent accidental water discharge inside the boat.
4. Attach spray hose to center threaded fitting between hot and cold connections.
5. Place enclosed hot and cold labels on appropriate knobs.
6. Thread end of hose through hole in end of box and attach to end of sprayhead.
7. Test all connections for leaks.
8. Place box in cutout opening. Check to be sure that the hose is free to be pulled out and pushed back into place. Attach box using all six screws.

CAUTION:

Do not overtighten screws.

DECK WASHDOWN (4132) INSTALLATION


1. Using the template on the reverse side of these instructions, drill a 1/2" hole at all four corners of the template. Cut an 8-1/2" x 4" opening.
2. Remove cover and sprayhead. Place box in opening and mark all screw hole locations. Remove box and drill pilot holes.
3. Attach hose to pump outlet. Wrap hose connections with teflon tape or use pipe joint compound to prevent leaks.
4. Thread end of hose through hole in end of box and attach to end of sprayhead.
5. Connect wiring of switch to pump using insulated crimp-on connectors. Fuse according to pump manufacturers specifications. Run system to test all connections for leaks.
6. Place box in cutout opening. Check to be sure that the hose is free to be pulled out and pushed back into place. Attach box using all six screws.

CAUTION:

Do not overtighten screws.

CARE AND MAINTENANCE

Be sure to drain all water lines and fittings whenever system may be subjected to temperatures below freezing.

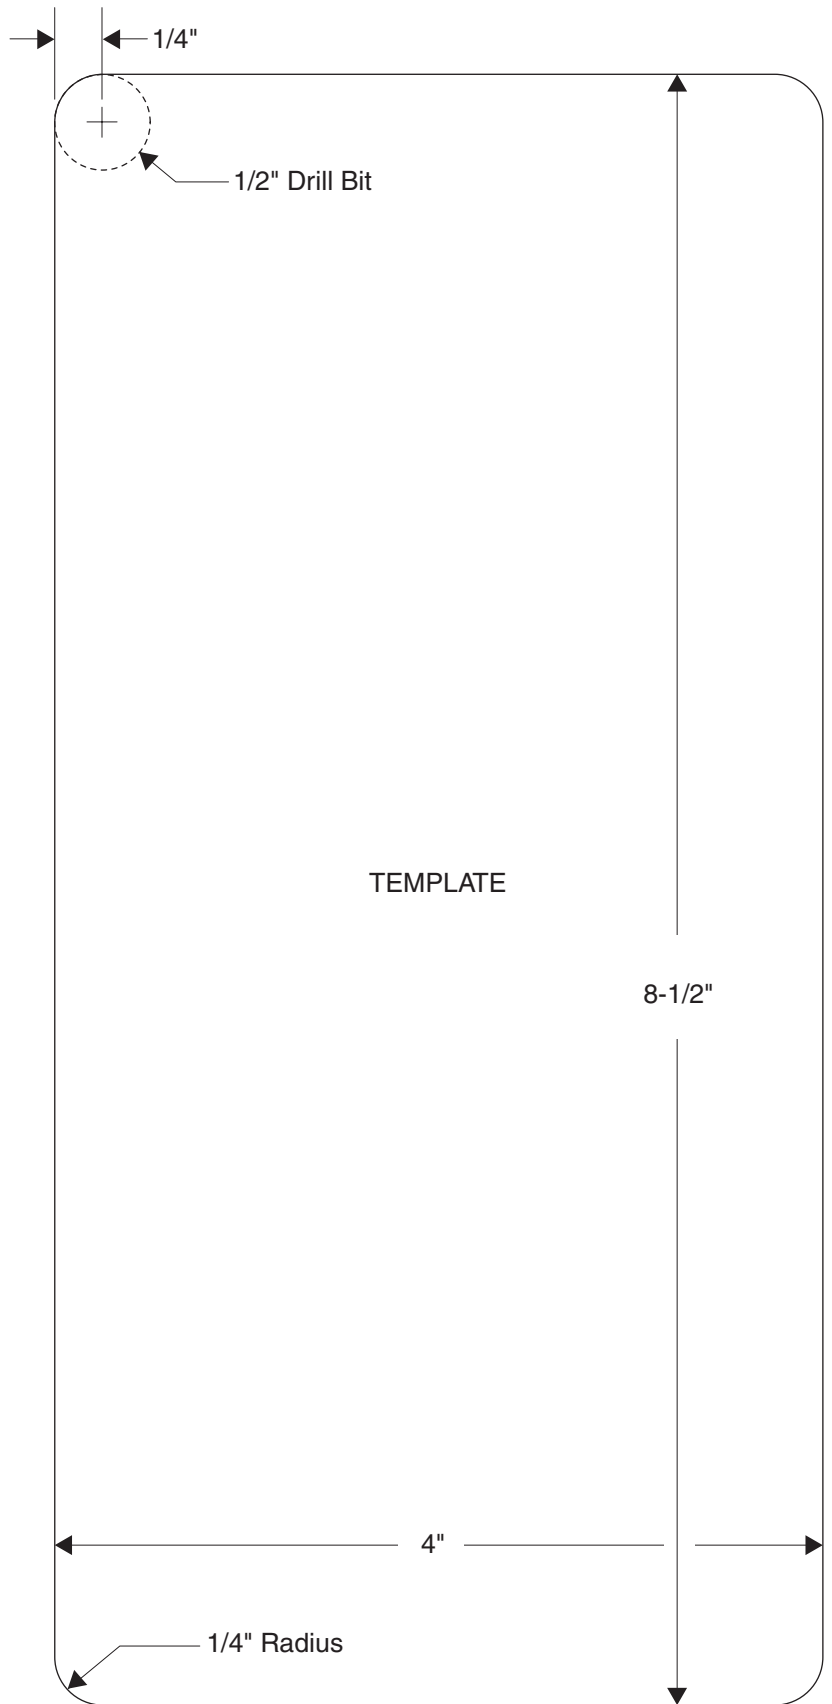

This product carries the standard Attwood one-year limited warranty. See product catalog for details.