


Installation Instructions for: **DELUXE SHOWERHEAD**
BODY SIDE SPRAY




1660.100 SERIES
1660.120 SERIES

ROUGHING-IN DIMENSIONS

DELUXE SHOWERHEAD

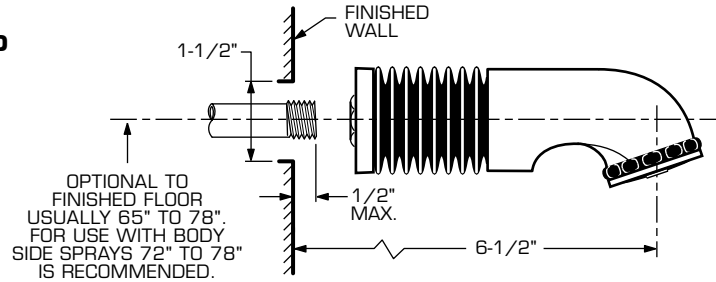

BODY SIDE SPRAY

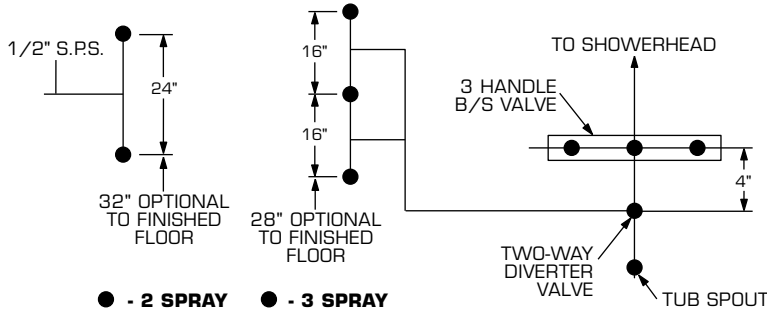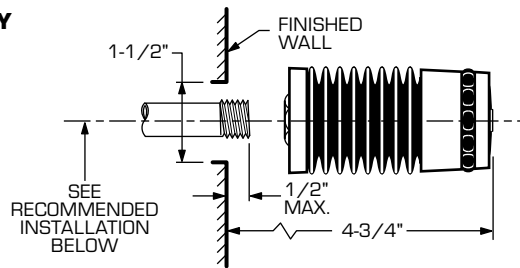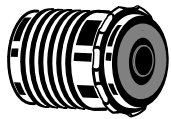

RECOMMENDED INSTALLATION FOR MULTIPLE BODY SIDE SPRAYS:

- Each installed BODY SIDE SPRAY requires 2.5 GPM for an adequate spray flow.
- For maximum flow, use Amarilis 3-Handle Bath/Shower Valve 8030 or 8031 Series.
- Connect multiple body side sprays to spout outlet of valve.
- Provide two-way diverter valve for addition of tub spout.
- Connect deluxe showerhead to shower outlet of valve.

1 ROUGHING-IN

- Prepare shower connection nipples per roughing-in dimensions. See diagram for recommended 2 and 3 BODY SIDE SPRAY installation.
- Cap nipples, turn on water supplies and check for leaks.

2 SHOWERHEAD INSTALLATION

- Slide ESCUTCHEON forward and compress BELLOWS to expose supply connectors.
- Turn on water supplies and check for leaks.
- Use adjustable wrench to install SHOWERHEAD.
- Push ESCUTCHEON back until seated flush against wall.

3 SERVICE

- To increase swivel tension:
 - Compress BELLOWS towards rear to expose ball joint. Wrench tighten COUPLING NUT to increase tension.
- The FLOW REGULATOR may accumulate debris causing reduced water flow. To clean, remove SHOWERHEAD, then:
 - Remove ESCUTCHEON and BELLOWS.
 - Unscrew SUPPLY CONNECTOR to remove FLOW REGULATOR.
 - Clean FLOW REGULATOR, re-assemble and install SHOWERHEAD.

