

INSTALLATION INSTRUCTIONS


Part No. 055523

www.keatingofchicago.com

KEATING
OF CHICAGO, INC. ®



1-800-KEATING

INSTALLATION FOR CUTTING BOARD WITH BRACKETS ON KEATING GRIDDLES

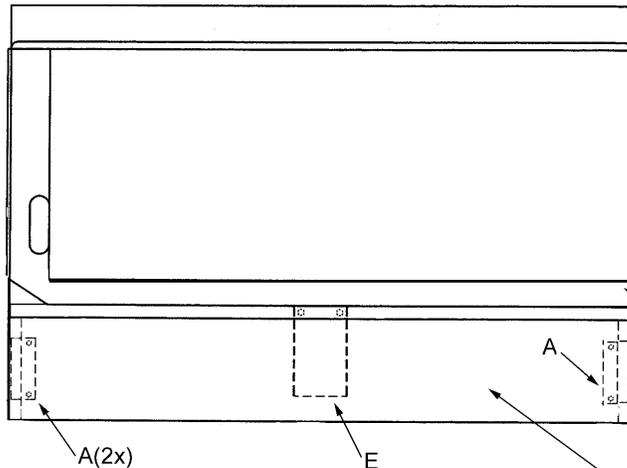

What's needed to complete this installation?

- Drill Gun
- #19 Drill Bit
- Phillips Screw Driver

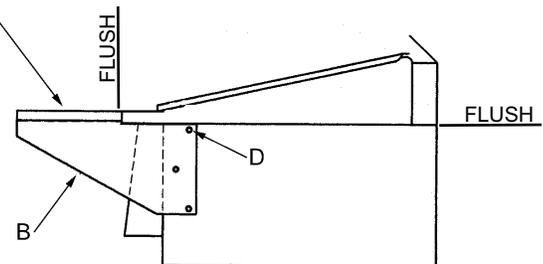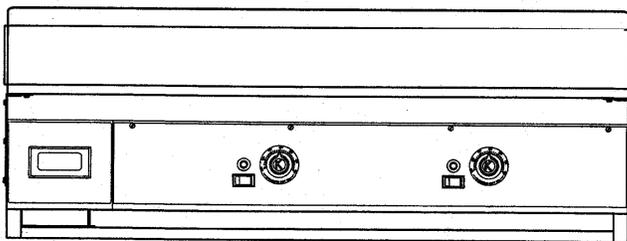

What's included in your package?

- A** PRE-ASSEMBLED MOUNTING BRACKET FOR SECURING CUTTING BOARD TO SIDE BRACKET (2x)
- B** END SUPPORT BRACKET (2x)
- C** RICHLITE CUTTING BOARD (1x)
- D** #10 SCREWS FOR ATTACHING BRACKET TO CABINET (6x)
- E** CUTTING BOARD CENTER SUPPORT FOR 48" AND LARGER GRIDDLES (1x)

- 1) HOLD END SUPPORT BRACKETS IN PLACE AND MARK 3 HOLES ON EACH SIDE OF CABINET. TOP EDGE OF BRACKET IS TO BE FLUSH WITH UPPER EDGE OF CABINET SIDE. 90° FORM ON THE BRACKET WILL EXTEND OUT FROM THE PERIMETER FRONT.
- 2) DRILL THREE HOLES ON EACH CABINET SIDE WITH THE #19 DRILL BIT.
- 3) ATTACH END SUPPORT BRACKETS WITH #10 SHEET METAL SCREWS PROVIDED.
- 4) SLIDE CUTTING BOARD IN PLACE. EXISTING BRACKETS ON CUTTING BOARD SHOULD MATE WITH FORMED EDGES ON END SUPPORT BRACKETS.
- 5) CUTTING BOARDS 48" AND LONGER ALSO HAVE A CENTER SUPPORT WHICH ATTACHES ON THE BOTTOM SIDE OF THE PERIMETER FRONT (UNDER THE "CAUTION HOT" WARNING LABEL) WITH EXISTING 1/4-20 SCREWS.